

Manuals.plus /

› Kariwust /

› Kariwust Kaidi KDH208A-002 Lift Chair Remote Control User Manual

## Kariwust KDH208A-002

# Kariwust Kaidi KDH208A-002 Lift Chair Remote Control User Manual

Model: KDH208A-002

Brand: Kariwust

## 1. INTRODUCTION

---

This manual provides instructions for the Kariwust Kaidi Model KDH208A-002 remote control, designed as a replacement for lift chairs and power recliners. This remote features an up/down paddle button, massage, and heat functions, connecting to two motors via a 5-pin male connector. It is compatible with Franklin recliner lift chairs.

## 2. SAFETY INFORMATION

---

- Always ensure the remote is compatible with your lift chair before use.
- Do not operate the chair if the remote shows signs of damage or malfunction.
- Keep the remote out of reach of children and pets.
- Do not expose the remote to liquids or extreme temperatures.
- Always follow the manufacturer's instructions for safe operation and maintenance of your lift chair.

## 3. PACKAGE CONTENTS

---

The package includes:

- One (1) Kaidi Model KDH208A-002 Remote Control with integrated cord and 5-pin male connector.

## 4. SETUP

---

1. **Verify Compatibility:** Confirm that your existing lift chair uses a 5-pin male connector for its remote

control.

2. **Disconnect Power:** For safety, unplug your lift chair from the wall outlet before proceeding.
3. **Locate Connection Port:** Find the 5-pin female connection port on your lift chair's motor or control box. This is typically located underneath the chair.
4. **Connect Remote:** Align the 5-pin male connector of the new KDH208A-002 remote with the female port. Push firmly until the connector is securely seated. Ensure the 180-degree angle plug is correctly oriented.
5. **Restore Power:** Plug your lift chair back into the wall outlet.
6. **Test Functionality:** Test all remote functions to ensure proper operation.





Figure 4.1: Remote control with 5-pin male connector.

## 5. OPERATING INSTRUCTIONS

---

The KDH208A-002 remote control features intuitive buttons for various lift chair functions:





Figure 5.1: Front view of the remote control with function buttons.

- **Up/Down Paddle Button:** This central paddle button controls the primary movement of the lift chair, operating two motors.
  - Press the **top part** of the paddle to raise the chair or recline it backward.
  - Press the **bottom part** of the paddle to lower the chair or bring it to an upright position.
- **Massage Button:** Located below the paddle, this button (often with a wave icon) activates the massage function. Press once to turn on, and press again to cycle through available massage modes or to turn off.
- **Heat Button:** Also located below the paddle, this button (often with a heat icon) activates the heating function. Press once to turn on, and press again to cycle through heat settings or to turn off.

## 6. MAINTENANCE

---

- **Cleaning:** Keep the remote clean and dry. Wipe with a soft, slightly damp cloth if necessary. Avoid using abrasive cleaners or harsh chemicals.
- **Cord Inspection:** Periodically inspect the remote control cord and connector for any signs of wear, fraying, or damage. If damage is observed, discontinue use and seek a replacement.
- **Storage:** When not in use, store the remote in a safe place where it will not be stepped on or exposed to excessive force.
- **No User Serviceable Parts:** Do not attempt to open or repair the remote control yourself. This may void

any potential warranty and could cause further damage.

## 7. TROUBLESHOOTING

---

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**

- Ensure the remote's 5-pin connector is securely plugged into the lift chair's motor or control box.
- Verify that the lift chair is properly plugged into a functional wall outlet and receiving power.
- Inspect the remote control cord for any visible damage or kinks.
- If your chair has a separate power supply unit, ensure it is functioning correctly (e.g., indicator light is on).

- **Chair Moves Erratically or Inconsistently:**

- Disconnect and then firmly reconnect the remote control to the chair.
- Ensure there are no obstructions preventing the chair's smooth movement.
- If the issue persists, contact customer support.

- **Specific Function (Massage/Heat) Not Working:**

- Ensure the remote is fully connected and the chair is powered.
- Press the respective function button multiple times to ensure it is activated.
- If other functions work but one does not, there may be an issue with that specific function's circuit or the chair's corresponding component.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Name	Recliner Remote
Item Model Number	KDH208A-002
Manufacturer	Kaidi
Brand	Kariwust
Material	Plastic
Special Feature	Multi-Functional Control, Portable
Connection Type	5-pin male
Functions	Up/Down (2 motors), Massage, Heat
Item Weight	6 ounces (0.17 Kilograms)
Package Dimensions	8.94 x 6.69 x 1.69 inches



Figure 8.1: Back view of the remote control displaying model information.





Figure 8.2: Side view of the remote control.

## 9. WARRANTY INFORMATION

---

Specific warranty details for the Kariwust Kaidi KDH208A-002 remote control may vary. Please refer to your original purchase documentation or contact Kariwust customer support for comprehensive warranty information.

## 10. SUPPORT

---

For further assistance, questions, or troubleshooting not covered in this manual, please contact Kariwust customer support. You can typically find contact information on the Kariwust brand store page on Amazon or through your purchase receipt.