

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Skyworth](#) /

> [Skyworth 24-Inch Portable Smart Screen User Manual](#)

Skyworth 24P100

Skyworth 24-Inch Portable Smart Screen User Manual

Model: 24P100 | Brand: Skyworth

PRODUCT OVERVIEW

The Skyworth 24P100 Portable Smart Screen is a versatile 24-inch LED display designed for on-the-go entertainment. Featuring 1080P Full HD resolution, HDR10, and Dolby Audio, it provides a high-quality viewing experience. Powered by Google TV, it offers seamless streaming, personalized recommendations, and voice control via Google Assistant. Its built-in lithium-ion battery provides over 3 hours of uninterrupted use, making it ideal for various environments.



Figure 1: Front and side view of the Skyworth 24P100 Portable Smart Screen.

Your browser does not support the video tag.

Video 1: An overview of the Skyworth 24-inch Portable Display, highlighting its versatility and portability.

WHAT'S IN THE BOX

Upon unboxing your Skyworth 24P100, please ensure all the following items are present:

- 1x 24P100 Portable Smart Display with Google TV
- 1x Remote Control
- 2x AAA Batteries (for remote)
- 1x User Manual (this document)
- 1x Power Adapter (12V, 5A)
- 1x 5-ft Power Cable

SKYWORTH | LIFESTYLE



*Does not come with digital tuner

Dimensions(W x D x H)

54.85cm x 36.62cm x 7.41cm

21.59" x 14.41" x 2.91"

Screen size:

24"

Weight: 9.03 lbs

What's in the Box

- 1 x Remote
- 2 x Battery (AAA)
- 1 x User Manual
- 1 x Adapter (12V, 5A), cable length: 5 ft

Figure 2: Diagram illustrating the product dimensions and included accessories.

SETUP GUIDE

1. Initial Unpacking and Placement

Carefully remove the display and all accessories from the packaging. Place the display on a stable, flat surface. The integrated leather carry handle also allows for easy repositioning.



Portable & Elegant design

With the strip-shaped handle, it can be carried and placed outdoors.

Less Than 4kg



SEASIDE SYMPHONY
BACKBOARD DESIGN

≈



4kg (like a pomeranian)



Hand-carry

Figure 3: The portable design with a leather carry handle for easy transport.

2. Power Connection

Connect the provided power adapter to the DC IN port on the back of the display and plug it into a power outlet. The display can operate on battery power, but it is recommended to charge it fully before first use.

3. Remote Control Setup

Insert the two AAA batteries into the remote control, observing the correct polarity.

Your browser does not support the video tag.

Video 2: An unboxing video of the Skyworth Portable TV, demonstrating initial setup steps.

4. Initial Power On and Google TV Setup

Press the power button on the display or remote. Follow the on-screen instructions to complete the initial Google TV setup, including connecting to Wi-Fi, logging into your Google account, and installing desired apps.

Your browser does not support the video tag.

Video 3: A guide on setting up the Skyworth 24-inch Portable Display, including initial configuration.

OPERATING INSTRUCTIONS

Power On/Off

Press the power button on the remote or the display to turn the unit on or off. A short press will put it into standby mode, while a long press will fully power it down.


Google TV Navigation

Use the directional pad and select button on the remote to navigate the Google TV interface. The home button will return you to the main screen, and the back button will go to the previous screen.



Enjoy the resoures & Wireless your life

3-hour battery life ensures you canwatch an entire movie, anytime, anywhere.

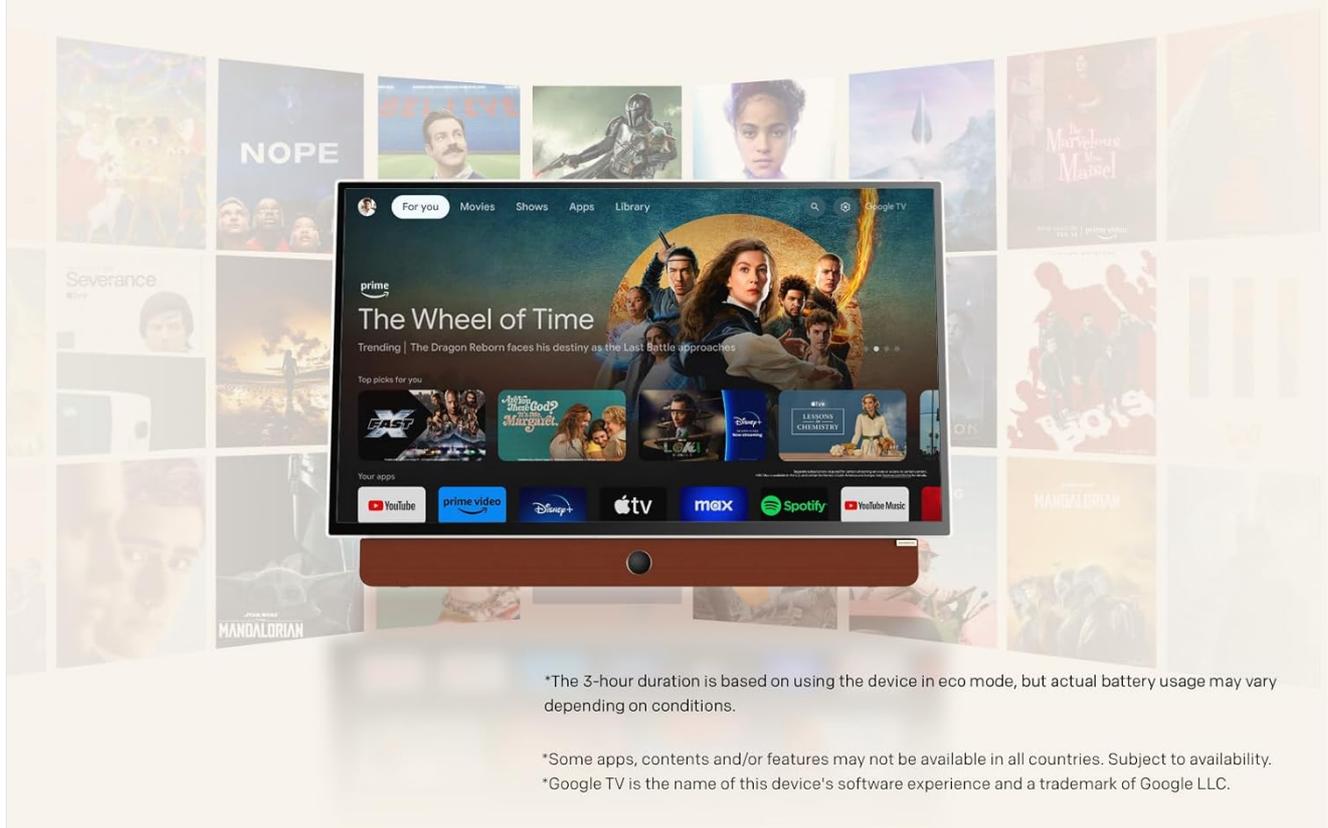

*The 3-hour duration is based on using the device in eco mode, but actual battery usage may vary depending on conditions.

*Some apps, contents and/or features may not be available in all countries. Subject to availability.

*Google TV is the name of this device's software experience and a trademark of Google LLC.


Figure 4: The Google TV interface, offering access to various streaming services and displaying battery status.

Connectivity

- **Wi-Fi:** Connect to your wireless network via the Google TV settings for internet access and streaming.
- **Bluetooth:** Pair Bluetooth devices like headphones or external speakers through the settings menu.
- **Chromecast:** Utilize the built-in Chromecast to cast content directly from compatible devices.
- **HDMI:** Connect external devices such as gaming consoles or laptops using an HDMI cable.
- **USB:** Use the USB port for media playback from a USB drive.

Audio and Display Settings

Adjust sound settings, including Dolby Audio enhancements, through the system settings. The display features a matte screen to reduce glare and offers a wide viewing angle for comfortable viewing in various lighting conditions.

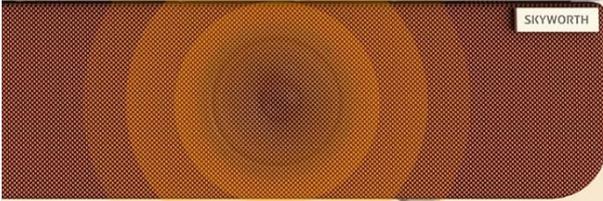

Front Speaker
2x6W

Dolby Audio **Sound All Around**

Enjoy concert as if face-to-face.
The front-firing speakers deliver
clear,unobstructed sound for better
audio experience.



Figure 5: The display features Dolby Audio for an immersive sound experience from its front-firing speakers.

RESOLUTION

CLEAN, DETAILED PICTURE



- Wider Dynamic Range
- Stronger Colour Expression
- Higher Colour Depth

Figure 6: The 1080P Full HD resolution provides a clean and detailed picture.

Usage Scenarios

The Skyworth 24P100 is designed for flexible use, whether indoors or outdoors, thanks to its portable design and battery life.



Figure 7: Enjoy your portable smart screen during outdoor activities like camping.



Figure 8: The display can be easily set up for entertainment during road trips or tailgating.



Figure 9: Perfect for indoor use, providing entertainment in any room.

MAINTENANCE

Cleaning the Display

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

Battery Care

The display is equipped with smart power management. It will alert you when the battery reaches 20% for a timely charge and automatically power down at 2% to safeguard the device and prolong battery life. For optimal battery health, avoid fully discharging the battery frequently.

Dolby Audio

Sound All Around

Whether placed on a table or the ground, the display provides optimized sound with Dolby Audio for an enhanced auditory experience.



Figure 10: Smart Power Management helps optimize battery life and viewing pleasure.

TROUBLESHOOTING

If you encounter issues with your Skyworth 24P100, refer to the common solutions below:

- **No Power:** Ensure the power adapter is securely connected to both the display and a working power outlet. If using battery, ensure it is charged.
- **No Picture/Sound:** Check HDMI connections if using an external source. Verify volume levels and mute settings.
- **Remote Not Responding:** Replace the AAA batteries in the remote. Ensure there are no obstructions between the remote and the display.
- **Wi-Fi Connectivity Issues:** Restart your Wi-Fi router. Re-enter your Wi-Fi password in the display's network settings.
- **Software Update Failure:** If a software update fails, contact Skyworth customer support for firmware and detailed update steps.

Your browser does not support the video tag.

Video 4: Important information regarding software updates and contacting support if an update fails.

SPECIFICATIONS

Feature	Detail
Screen Size	24 Inches
Screen Resolution	1920x1080 (FHD 1080p)
Operating System	Google TV
Battery Life	Over 3 hours (Lithium-ion)

Item Weight	11 pounds (approx. 4.99 kg)
Product Dimensions (LxWxH)	2.9 x 24.6 x 14.4 inches (approx. 7.37 x 62.48 x 36.58 cm)
Color	Sunset Orange
Audio Technology	Dolby Audio
Screen Surface	Matte

WARRANTY AND SUPPORT

Your Skyworth 24P100 Portable Smart Screen comes with a worry-free 365-day warranty from the date of purchase. This warranty covers manufacturing defects and ensures friendly customer service.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Skyworth customer service. Refer to the contact information provided on the product packaging or the official Skyworth website.

It is recommended to keep your device's software updated to ensure optimal performance and access to the latest features and bug fixes. If you encounter issues during a software update, please reach out to customer support for guidance.