

[manuals.plus](#) /› [Sekonda](#) /› [Sekonda Monica Ladies 20mm Quartz Watch \(Model 40642\) Instruction Manual](#)

Sekonda 40642

Sekonda Monica Ladies 20mm Quartz Watch (Model 40642) Instruction Manual

Model: 40642

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Sekonda Monica Ladies 20mm Quartz Watch. Designed for reliability and style, this watch features a Japanese quartz movement for accurate timekeeping and an elegant ion-plated gold alloy bracelet and case.



Figure 1: Sekonda Monica Ladies Watch, highlighting its overall aesthetic.

2. SETUP

2.1 Setting the Time

1. Gently pull out the crown (the small knob on the side of the watch case) to the time-setting position.
2. Turn the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position to start the watch movement.

2.2 Adjusting the Bracelet

The ion-plated gold alloy bracelet is designed for a comfortable fit. If the bracelet requires adjustment (e.g., to remove or add links), it is recommended to visit a professional jeweler or watch repair service to ensure proper handling and to avoid damage to the watch or bracelet.



Figure 2: Detail of the watch crown for time adjustment and the bracelet clasp.

3. OPERATING THE WATCH

Your Sekonda Monica watch is powered by a reliable Japanese quartz movement, ensuring accurate timekeeping for daily use. Once the time is set, the watch will operate continuously until the battery requires replacement.

The watch is suitable for everyday wear and various occasions, from casual to formal. While durable, avoid exposing the watch to extreme temperatures, strong magnetic fields, or harsh chemicals to maintain its appearance and functionality.

4. MAINTENANCE

4.1 Cleaning

To clean your watch, gently wipe the case and bracelet with a soft, dry cloth. For more stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using abrasive cleaners or solvents.

4.2 Battery Replacement

The watch uses 1 C battery (included) with an estimated life of up to 2 years. When the watch stops or

begins to lose time, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to prevent damage to the movement or case.



Figure 3: Key features of the Sekonda Monica watch.

5. TROUBLESHOOTING

5.1 Watch Not Running

- Ensure the crown is fully pushed in. If it is pulled out, the watch will not run.
- If the crown is in place and the watch is still not running, the battery may need to be replaced. Refer to Section 4.2.

5.2 Inaccurate Time

- Check if the time was set correctly (Section 2.1).
- An old or weak battery can cause the watch to run slow or irregularly. Consider battery replacement.
- If issues persist, professional inspection is recommended.

6. SPECIFICATIONS

| Feature | Detail |
|--------------------------------|---|
| Model Number | 40642 |
| Movement | Japanese Quartz |
| Case Material | Ion-plated Gold Alloy |
| Bracelet Material | Ion-plated Gold Alloy |
| Dial Type | Analogue with White Dial and Roman Numerals |
| Bezel | Stone Set |
| Battery Type | 1 C battery (included) |
| Approximate Package Dimensions | 3.82 x 3.03 x 2.4 inches |
| Approximate Item Weight | 4.16 ounces |

7. WARRANTY AND SUPPORT

Your Sekonda Monica watch comes with a **2-year guarantee**, ensuring peace of mind regarding its quality and craftsmanship. Please retain your proof of purchase for warranty claims.

For detailed instruction manuals and further support, please visit the official Sekonda website:

[Sekonda Instruction Manuals](#)



Figure 4: Watch packaging and guarantee card.