

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [DASH](#) /

› [DASH Rapid Egg Cooker: 7-Egg Capacity Electric Egg Cooker User Manual](#)

## DASH 7 Eggs

# DASH Rapid Egg Cooker: 7-Egg Capacity Electric Egg Cooker User Manual

Model: 7 Eggs

## INTRODUCTION

---

The DASH Rapid Egg Cooker is an electric appliance designed for effortless preparation of various egg dishes. This multi-functional device allows you to cook up to seven eggs at once, offering options for hard-boiled, soft-boiled, poached, and omelets. Its compact design and easy-to-clean components make it a convenient addition to any kitchen.

## PRODUCT COMPONENTS

---

The DASH Rapid Egg Cooker comes with several components to facilitate different cooking styles:

- **Main Unit:** The base of the cooker with the heating plate and power button.
- **Boiling Tray:** A tray with seven indentations for cooking hard or soft-boiled eggs.
- **Poaching Tray:** A tray designed for poaching up to two eggs.
- **Omelette Tray:** A shallow bowl for preparing individual omelets.
- **Measuring Cup:** Used to measure the precise amount of water needed for desired egg consistency. It also features a built-in pin for piercing eggs.
- **Transparent Lid:** Covers the cooking area, allowing you to monitor the cooking process.

# EGGS-ACTLY ✨ ✨ WHAT YOU NEED

Everything you need to make  
breakfast eggs-traordinary!



Image: All components of the DASH Rapid Egg Cooker, including the main unit, boiling tray, poaching tray, omelette tray, measuring cup, and transparent lid.

## SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash all removable parts (trays, lid, measuring cup) with warm, soapy water. Wipe the main unit with a damp cloth. Ensure all parts are dry before assembly.
3. **Placement:** Place the main unit on a stable, heat-resistant, and dry surface.

## OPERATING INSTRUCTIONS

### A. Hard-Boiled and Soft-Boiled Eggs

1. **Pierce Eggs:** Use the pin on the bottom of the measuring cup to gently pierce the larger end of each egg. This prevents cracking during cooking.
2. **Add Water:** Fill the measuring cup with cold water up to the line corresponding to your desired egg consistency (Soft,

Medium, Hard) and the number of eggs (1-3 or 4-7). Pour the water onto the heating plate of the main unit.

3. **Place Eggs:** Position the boiling tray on the heating plate. Place the pierced eggs into the indentations on the boiling tray with the pierced end pointing upwards.
4. **Cover & Cook:** Place the transparent lid over the boiling tray and main unit. Press the power button to begin cooking. The indicator light will illuminate.
5. **Finish:** The cooker will automatically shut off and sound a buzzer when cooking is complete. Carefully remove the lid and eggs using heat-resistant tongs.



Image: Seven eggs being cooked simultaneously in the Rapid Egg Cooker.

## B. Poached Eggs

1. **Prepare Tray:** Lightly grease the poaching tray with cooking spray or butter.
2. **Add Water:** Fill the measuring cup to the 'POACH' line with cold water and pour it onto the heating plate.
3. **Place Eggs:** Crack one egg into each section of the poaching tray. Place the poaching tray on top of the boiling tray (without eggs).

4. **Cover & Cook:** Cover with the transparent lid and press the power button. The cooker will buzz when done.
5. **Serve:** Carefully remove the poaching tray and serve the eggs.

## C. Omelets

1. **Prepare Tray:** Lightly grease the omelette tray with cooking spray or butter.
2. **Add Water:** Fill the measuring cup to the 'OMELET' line with cold water and pour it onto the heating plate.
3. **Prepare Omelet:** Whisk eggs and any desired ingredients in a separate bowl. Pour the mixture into the omelette tray. Place the omelette tray on top of the boiling tray (without eggs).
4. **Cover & Cook:** Cover with the transparent lid and press the power button. The cooker will buzz when done.
5. **Serve:** Carefully remove the omelette tray and serve.

Your browser does not support the video tag.

Video: Official demonstration of the Dash Rapid Egg Cooker, showing its setup, operation for boiled and poached eggs, and easy cleanup.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your Dash Rapid Egg Cooker.

- **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Removable Parts:** The boiling tray, poaching tray, omelette tray, and lid are dishwasher-safe. Alternatively, wash them with warm, soapy water and rinse thoroughly.
- **Main Unit:** Wipe the heating plate and exterior of the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Mineral Deposits:** If mineral deposits accumulate on the heating plate, wipe with a cloth dampened with vinegar or a descaling solution, then wipe clean with a damp cloth.

# QUICK CLEANUP



Accessories go right into the dishwasher for a cleanup that's over *easy*.



Image: Removable accessories of the Dash Rapid Egg Cooker are shown in a dishwasher, highlighting ease of cleaning.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Eggs are not cooked to desired consistency.	Incorrect water amount or egg size.	Ensure the correct amount of water is used according to the measuring cup for your desired egg style and number of eggs. Adjust water slightly for larger or smaller eggs.
Eggs crack during cooking.	Eggs not pierced or pierced incorrectly.	Always pierce the larger end of each egg with the measuring cup's pin before cooking.
Cooker does not turn on.	Not plugged in or power issue.	Check if the cooker is properly plugged into a working outlet. Ensure the power button is pressed.

Problem	Possible Cause	Solution
Buzzer does not sound.	Malfunction.	If the buzzer does not sound, manually check the eggs for doneness and unplug the unit. Contact customer support if the issue persists.

## SPECIFICATIONS

---

- **Brand:** DASH
- **Model:** 7 Eggs
- **Capacity:** 7 eggs
- **Material:** Plastic (housing), Stainless Steel (heating plate)
- **Item Weight:** 0.67 Kilograms
- **Color:** Red (as per current product variant)
- **Included Components:** Product, Manual, Boiling Tray, Poaching Tray, Omelette Tray, Measuring Cup

## WARRANTY AND SUPPORT

---

For warranty information, product registration, and customer support, please refer to the official DASH website or the contact information provided in the product packaging. Keep your purchase receipt for warranty claims.