

TUOHAITIME K10

TUOHAITIME Android 14 Tablet User Manual

Model: K10

1. INTRODUCTION

Thank you for choosing the TUOHAITIME Android 14 Tablet. This powerful device is designed to provide a seamless and efficient user experience, whether for entertainment, productivity, or communication. Featuring an 11-inch HD touchscreen, a robust Octa-Core processor, 12GB RAM, and 128GB of internal storage expandable up to 1TB, this tablet is built for performance. It also includes an 8000mAh large battery with 18W fast charging, dual cameras, Dual WiFi6, Bluetooth 5.0, and Face Unlock functionality. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new tablet.



Figure 1: TUOHAITIME Android 14 Tablet, showcasing its sleek design and vibrant display.

2. WHAT'S IN THE BOX

Upon unboxing your TUOHAITIME Android 14 Tablet, please ensure all the following items are present:

- 1 x 2025 Newest Android 14 Tablet
- 1 x Type-C USB Cable
- 1 x USER Manual

 
Note: The 18W adapter is sold separately.

Hohe Kapazität & Unterstützung 1TB Expand

**12GB(6+6)**
RAM

**128GB**
ROM

**1TB**
Micro SD Expand

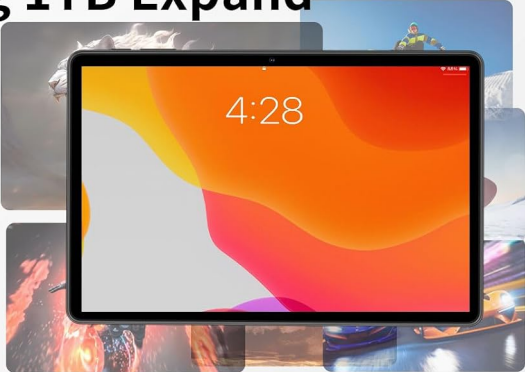

Android 14 Tablet

**Octa Core**
CPU T606

**Android 14 OS**

**2*A75+6*A55**

**GMS Certified**

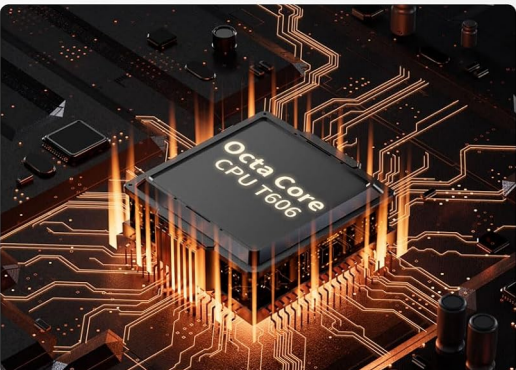 


Figure 2: Contents of the TUOHAITIME Android 14 Tablet package, including the tablet, USB-C cable, and user manual.

3. SETUP

3.1 Initial Power On

To power on your tablet for the first time, press and hold the power button located on the side of the device until the TUOHAITIME logo appears on the screen. Follow the on-screen prompts to complete the initial setup, including language selection and basic Android configurations.

3.2 Connecting to Wi-Fi

For internet access, connect your tablet to a Wi-Fi network:

1. Swipe down from the top of the screen to open the Quick Settings panel.

2. Tap and hold the **Wi-Fi** icon or navigate to **Settings > Network & internet > Internet**.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap **Connect**.

3.3 Adding a Google Account

Adding a Google account is essential for accessing Google Play Store, Gmail, YouTube, and other Google services:

1. Go to **Settings > Passwords & accounts**.
2. Tap **Add account** and select **Google**.
3. Follow the on-screen instructions to sign in with an existing Google account or create a new one.

3.4 Face Unlock Setup

To set up Face Unlock for convenient access:

1. Navigate to **Settings > Security & privacy > Device unlock**.
2. Select **Face Unlock** and follow the instructions to register your face.

4. OPERATING INSTRUCTIONS

4.1 Display and Visuals

The 11-inch IPS 1280x800 FHD display offers a brilliant watching experience. You can adjust brightness and other display settings:

- Go to **Settings > Display**.
- Adjust **Brightness level** or enable **Adaptive brightness**.
- Utilize **Eye protection mode** to reduce blue light for comfortable viewing.

11 inch,Ultra-thin Body, Ultra-narrow Bezei

Easy to carry with you wherever you go

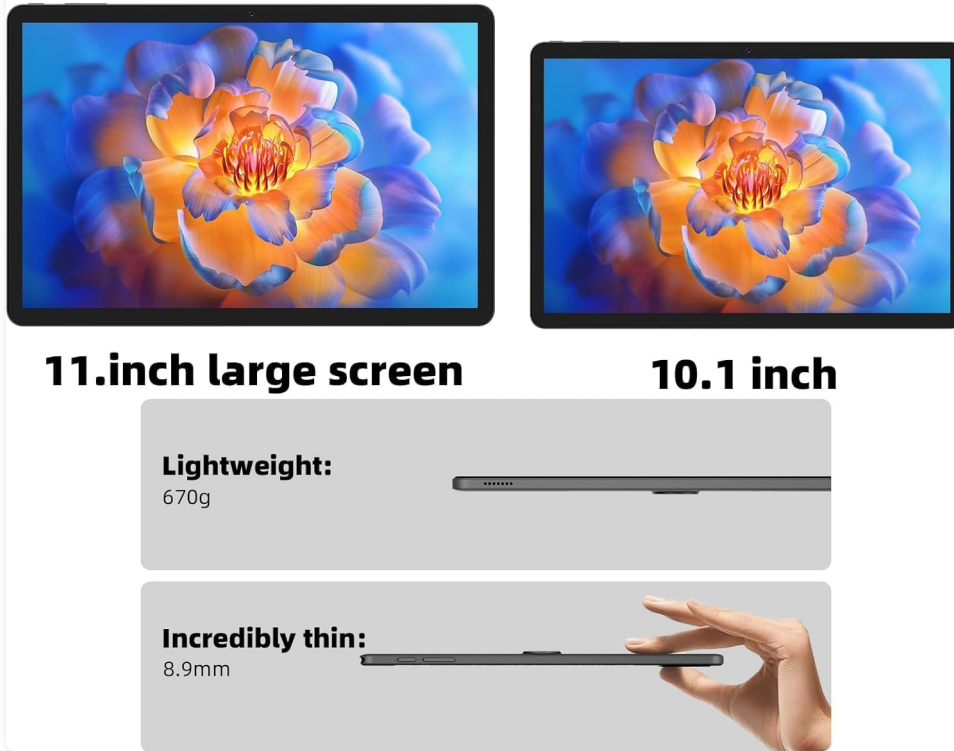 


Figure 3: The 11-inch display offers a larger viewing area with an ultra-thin body and ultra-narrow bezels for portability.

4.2 Performance and Storage

Powered by a 2.0GHz Octa-Core Processor and 12GB (6GB+6GB) RAM, the tablet ensures fast processing and smooth multitasking. It comes with 128GB internal storage, expandable up to 1TB via an SD card.

- To check storage usage, go to **Settings > Storage**.
- For optimal performance, regularly clear unnecessary files and close background applications.

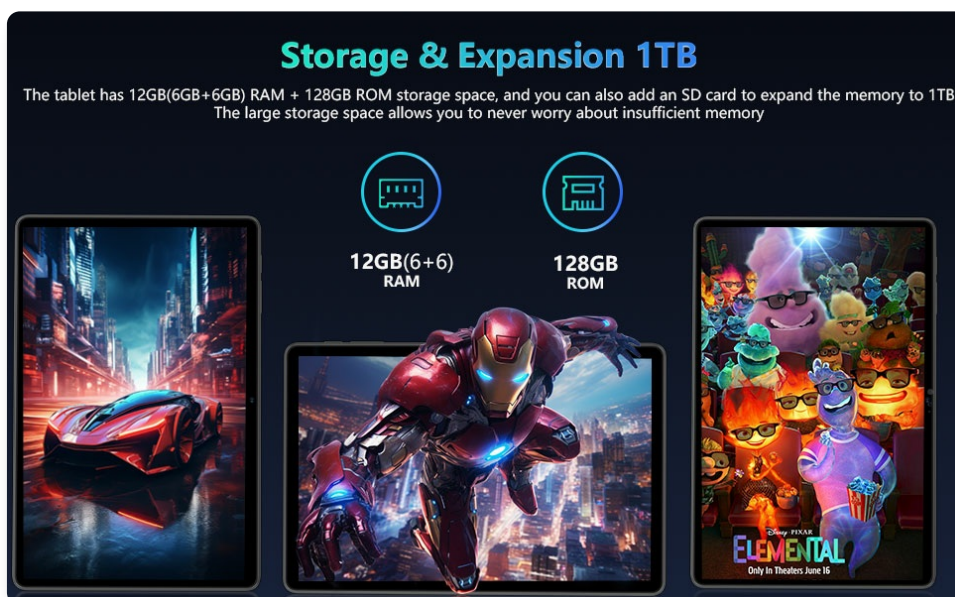 


Figure 4: Storage and expansion capabilities of the tablet, supporting up to 1TB via an SD card.

4.3 Connectivity

The tablet supports the newest AX WiFi 6 module for incredible and reliable speeds, and Bluetooth 5.0 for seamless peripheral connections.

- To manage Wi-Fi, go to **Settings > Network & internet**.
- To manage Bluetooth devices, go to **Settings > Connected devices**.



Figure 5: High-speed 5G+2.4G WiFi dual-band access and Bluetooth 5.0 for robust connectivity.

4.4 Camera Usage

The tablet features dual cameras (Front 5MP + Rear 8MP) for photos and video calls. To access the camera:

1. Tap the **Camera** app icon on your home screen.
2. Switch between front and rear cameras using the camera switch icon.
3. Tap the shutter button to take photos or switch to video mode to record.

4.5 Parental Control and Other Features

The Android 14 operating system offers various features to enhance your experience:

- **Parental Control:** Helps manage screen time, balance learning and entertainment, and develop good online habits for children. Access via **Settings > Digital Wellbeing & parental controls**.
- **Multi-window Mode:** Allows you to run two apps side-by-side for enhanced productivity.
- **3-Finger Screenshots:** Quickly capture screenshots by swiping down with three fingers on the screen.
- **Widevine L1 Support:** Enjoy high-quality streaming from platforms like Amazon Prime Video, Disney+, and Hulu.



Figure 6: Android 14 features including Kids Space, Parental Control, and Application Lock for a secure and managed user experience.

5. MAINTENANCE

5.1 Battery Care

The 8000mAh battery provides 8-10 hours of usage on a full charge. To maximize battery life:

- Avoid extreme temperatures.
- Use the provided Type-C USB cable for charging.
- Utilize the 18W fast charging capability (with a compatible adapter, sold separately) to reduce charging time.
- Avoid completely draining the battery frequently.



Figure 7: The 8000mAh battery provides extended usage for gaming, online video, music, and calls.

5.2 Storage Management

Regularly manage your tablet's storage to maintain optimal performance:

- Delete unused apps and files.
- Move large media files to an external SD card (up to 1TB supported).
- Clear cache data for apps in **Settings > Apps**.

6. TROUBLESHOOTING

6.1 Tablet Lags or Freezes

If your tablet experiences lag or freezes, try the following:

- Close all background applications.
- Restart the tablet.
- Clear cache data for problematic apps.
- Ensure sufficient free storage space.
- Perform a factory reset as a last resort (back up your data first).

6.2 Connectivity Issues

If you encounter Wi-Fi or Bluetooth connectivity problems:

- Toggle Wi-Fi/Bluetooth off and on.

- Restart your Wi-Fi router.
- Forget the network and reconnect.
- Ensure Bluetooth devices are in pairing mode and within range.

7. SPECIFICATIONS

Feature	Specification
Brand	TUOHAITIME
Model Name	K10
Operating System	Android 14
Screen Size	11 Inches
Screen Resolution	1280 x 800 pixels
Processor	2 GHz Octa-Core (Unisoc)
RAM	12GB (6GB+6GB) DDR SDRAM
Internal Storage	128 GB Flash Memory
Expandable Storage	Up to 1TB (Micro SD)
Graphics Coprocessor	Adreno 305
Wireless Type	802.11a, 802.11ac (Dual WiFi6)
Bluetooth	Bluetooth 5.0
Battery	8000mAh Lithium Polymer
Average Battery Life	10 Hours
Rear Webcam Resolution	8 MP
Front Webcam Resolution	5 MP
Item Weight	1.15 pounds
Product Dimensions	10 x 6.5 x 0.2 inches
Color	Black

8. WARRANTY & SUPPORT

For any product-related inquiries, technical support, or warranty claims, please refer to the contact information provided on the product packaging or the official TUOHAITIME website. Keep your purchase receipt as proof of purchase for warranty services.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question