

Bestier 41602144665739

Bestier 70-Inch LED TV Stand User Manual

Model: 41602144665739

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Bestier 70-Inch LED TV Stand. Please read all instructions carefully before assembly and use to ensure safe and proper functionality.

Safety Information

- The maximum weight capacity of this TV stand is 176 pounds (80 kg). Do not exceed this limit.
- Always use the provided anti-tip kits to secure the TV stand to the wall, especially in households with children or pets, to prevent tipping.
- Ensure all screws and fasteners are tightened securely during assembly. Periodically check and re-tighten as necessary.
- Assembly requires two people for safety and ease.

2. PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware listed below are present. If any items are missing or damaged, please contact Bestier customer support.

Components:

1. Top Panel (x2)
2. Bottom Panel (x2)
3. Side Panels (x4)
4. Middle Vertical Panels (x2)

5. Back Support Bars (x2)
6. Small Base Panel (x1)
7. Acrylic Doors (x2)
8. LED Light Strip (x1)
9. Adjustable Glass Shelf (x1)
10. Adjustable Feet (x4)
11. Anti-Tip Brackets (x2)

Hardware:

- Various Screws (A, B, E, F, G, H, I)
- Wooden Dowels (C)
- Shelf Pins (K)
- Door Hinges (M, N)
- Magnetic Catches (O)
- USB Cable for LED Strip
- Remote Control for LED Strip
- Tools: Allen Key, Screwdriver (provided)

3. ASSEMBLY INSTRUCTIONS

Follow these step-by-step instructions for assembling your Bestier LED TV Stand. All necessary tools are included. For visual guidance, please refer to the official assembly video below.

Your browser does not support the video tag.

Video 3.1: Official Bestier TV Stand Installation Guide. This video provides a comprehensive visual walkthrough of the assembly process, demonstrating each step with clear animations and instructions. It highlights the use of various components and hardware for a smooth setup.

Step-by-Step Assembly:

1. **Prepare the Base:** Attach the adjustable feet to the bottom panels (Parts 3 & 4) using the specified screws. Ensure they are securely fastened.
2. **Assemble the Frame:** Connect the side panels (Parts 5, 6, 7, 8, 9) and middle vertical panels to the bottom panels using wooden dowels and screws. Pay attention to the orientation of each panel as indicated in the instructions.
3. **Install Back Supports:** Secure the back support bars (Parts 11 & 16) between the vertical panels. These provide structural integrity.
4. **Attach the Top Panels:** Place the top panels (Parts 1 & 2) onto the assembled frame, aligning them with the pre-drilled holes. Secure them with screws.
5. **Insert Glass Shelf:** Carefully place the adjustable tempered glass shelf (Part 17) into the central compartment. Use the provided shelf pins (K) to adjust its height as desired.
6. **Mount Doors:** Attach the acrylic doors (Part 10) to the side cabinets using the hinges (M, N) and screws. Install the magnetic catches (O) to ensure the doors close securely.
7. **Install LED Strip:** Adhere the LED light strip (Part 19) to the designated area within the central compartment. Connect the USB cable.
8. **Apply Anti-Tip Safety:** Secure the anti-tip brackets (Part 23) to the top rear of the TV stand and to your

wall using appropriate wall anchors and screws. This is a critical safety step.

4. OPERATING INSTRUCTIONS

RGB LED Light Strip

Your Bestier TV stand features a built-in RGB LED light strip to enhance your entertainment experience. Use the included remote control to manage the lighting.

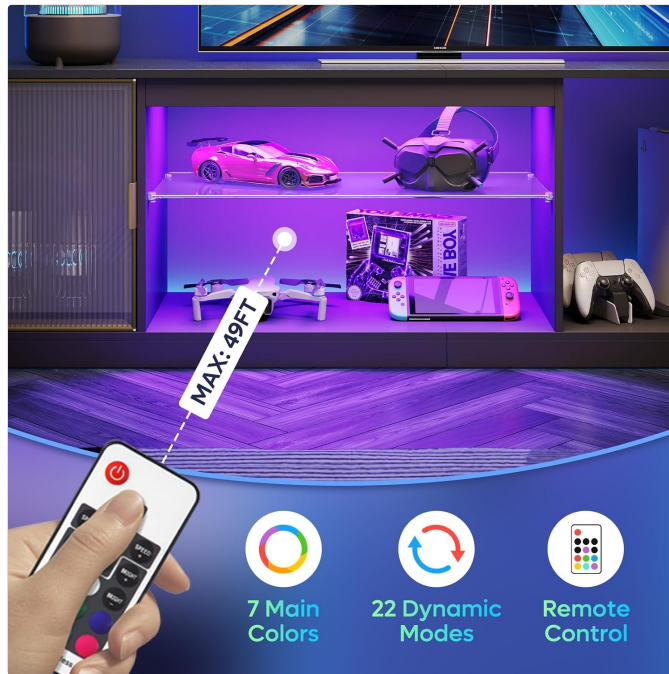


Image 4.1: The remote control for the RGB LED light strip. It features buttons for 7 main colors, 22 dynamic modes, and adjustments for speed and brightness.

- **Power On/Off:** Press the red power button on the remote.
- **Color Selection:** Choose from 7 vibrant main colors using the dedicated color buttons.
- **Dynamic Modes:** Select from 22 adjustable modes (e.g., flash, fade, strobe) using the 'MODE' buttons.
- **Brightness/Speed Adjustment:** Use the 'BRIGHT' and 'SPEED' buttons to increase or decrease the intensity or transition speed of the lights.

Your browser does not support the video tag.

Video 4.1: Bestier TV Stand RGB Light & Storage Demo. This video demonstrates the various color options and dynamic modes of the LED light strip, showcasing how it illuminates the central compartment and enhances the display of items.

Adjustable Tempered Glass Shelf

The central glass shelf can be adjusted to accommodate items of various heights.

- To adjust, carefully lift the glass shelf and reposition the shelf pins (K) into the desired holes on the vertical panels.
- Ensure all four pins are securely inserted and level before placing the glass shelf back.

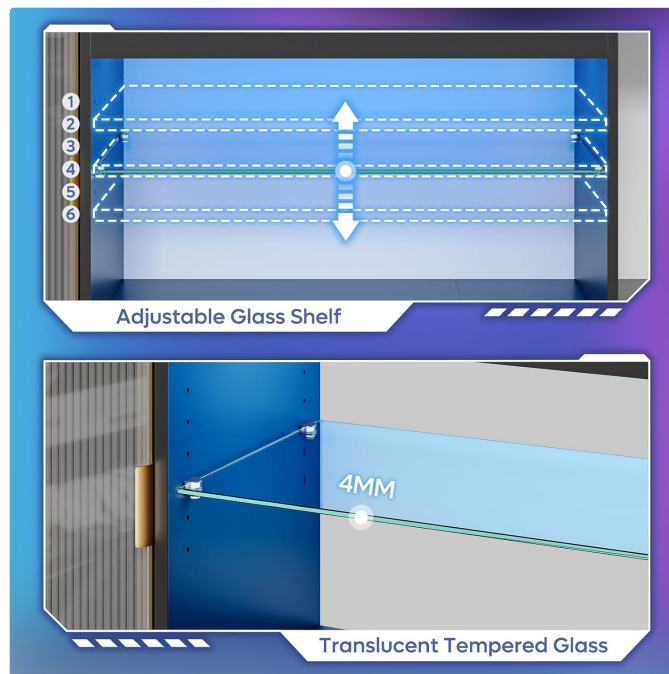


Image 4.2: A diagram illustrating the adjustable positions for the tempered glass shelf. The numbered holes on the side panels allow for flexible height customization.

5. MAINTENANCE

To maintain the appearance and longevity of your TV stand, follow these simple care instructions:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as they may damage the finish. The high-quality surface is moisture-resistant and easy to clean.
- **Glass Care:** Clean tempered glass shelves with a glass cleaner and a soft cloth. The tempered glass is scratch-resistant, but avoid sharp objects.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **LED Strip:** Ensure the LED strip and USB cable are free from dust and obstructions.

6. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common problems and solutions:

- **LED Lights Not Working:**
 - Ensure the USB cable is securely connected to a power source (e.g., USB adapter, TV USB port).
 - Check if the remote control has a working battery and that the plastic tab has been removed.
 - Verify that the LED strip is properly connected to the USB cable.
- **Doors Not Closing Properly:**
 - Check if the hinges are correctly installed and tightened.
 - Ensure the magnetic catches are aligned and securely attached.
- **Stand Feels Unstable:**
 - Confirm all assembly screws are fully tightened.
 - Ensure the anti-tip kits are properly installed and secured to the wall.

- Verify the adjustable feet are level on the floor.

7. SPECIFICATIONS

Feature	Detail
Brand	Bestier
Model Number	41602144665739
Product Dimensions	13.8"D x 70.8"W x 20.7"H (35cm D x 180cm W x 52.5cm H)
Color	Black Carbon Fiber
Material	Engineered Wood and Metal, 4mm Tempered Glass
Weight Limit	176 Pounds (80 kg)
Number of Shelves	3 (1 adjustable glass shelf)
Storage Options	2 Closed Cabinets, 3 Open Shelves
Special Features	Acrylic Doors, Adjustable Shelf, Anti-Tipping, RGB LED lights
Assembly Required	Yes

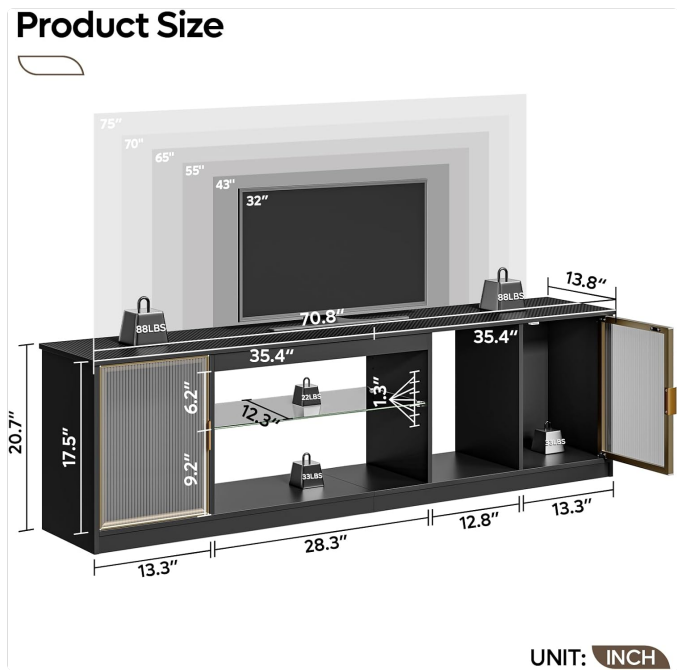 


Image 7.1: Detailed product dimensions for the Bestier 70-inch LED TV Stand, including height, width, and depth, along with internal compartment measurements.

8. WARRANTY AND SUPPORT

Bestier is committed to providing quality products and customer satisfaction.

- **Returns:** This product is eligible for 30-day easy returns. Please refer to your retailer's return policy for details.
- **Customer Support:** For any questions, missing parts, or assistance, please contact Bestier USA

customer support. Contact information can typically be found on the product packaging or the retailer's website.

- **Small Business Support:** Bestier is a small business brand. Your support is appreciated.