

Chef Preserve CP.V1.1

*chef
preserve*

Chef Preserve Compact Vacuum Sealer

Model: CP.V1.1

1. INTRODUCTION

Thank you for choosing the Chef Preserve Compact Vacuum Sealer. This device is designed to extend the freshness of your food by removing air from specially designed vacuum bags and containers. By creating an airtight seal, it helps to preserve flavor, nutrition, and texture, reducing food waste and saving you money.

2. SAFETY INFORMATION

- Read all instructions before using the appliance.
- Keep the vacuum sealer away from water or other liquids.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Use only Chef Preserve brand vacuum bags and accessories for optimal performance and safety.
- Ensure the vacuum sealer is fully charged before use to avoid interruptions.

3. PACKAGE CONTENTS

Your Chef Preserve Compact Vacuum Sealer package includes:

- 1 x Chef Preserve Compact Vacuum Sealer (Model: CP.V1.1)
- 10 x Reusable Vacuum Bags (5 Small, 5 Medium)
- 1 x Charging Cable
- 1 x Zipper Clip

SET INCLUDES VACUUM SEALER + 10 BAGS:

Small (S): 5 Bags
Medium (M): 5 Bags



Image: Chef Preserve Compact Vacuum Sealer shown with included small and medium reusable vacuum bags.

4. PRODUCT FEATURES

- **Compact & Portable:** Designed for easy storage and portability, ideal for home, travel, RVs, and camping.
- **Powerful & Quick:** Vacuum seals food in approximately 5 seconds.
- **Automatic Operation:** Device automatically shuts off once vacuum sealing is complete.
- **Reusable & Versatile Bags:** Included bags are dishwasher-safe, freezer-safe, refrigerator-safe, and microwave-safe. They are BPA-free, odor-free, and leak-proof.
- **Wide Food Compatibility:** Suitable for various food items including meat, fish, vegetables, fruits, dry goods, pizza, cooked food, and leftovers.
- **Rechargeable & Wireless:** One full battery charge can vacuum seal up to 1000 bags.

*chef
preserve*

#1 VACUUM SEALER ON THE MARKET

**Compact.
Powerful.
Easy To Use.**



Image: The Chef Preserve Compact Vacuum Sealer in action, sealing a bag of colorful peppers.

5. SETUP

5.1 Charging the Device

Before first use, fully charge your Chef Preserve Compact Vacuum Sealer using the provided charging cable. The indicator light will show charging status and turn off when fully charged.

5.2 Preparing Vacuum Bags

Ensure the reusable vacuum bags are clean and dry before use. Place food inside the bag, ensuring the zipper seal area is clean and free of food particles. Use the provided zipper clip to securely close the bag, leaving the circular valve accessible.

6. OPERATING INSTRUCTIONS

6.1 Vacuum Sealing a Bag

1. Place your food inside a Chef Preserve reusable vacuum bag.
2. Use the zipper clip to securely close the bag, ensuring a complete seal along the top edge.
3. Position the nozzle of the Chef Preserve Compact Vacuum Sealer directly over the circular air valve on the bag.
4. Press the power button on the vacuum sealer to start the vacuuming process. The device will begin to remove air from the bag.
5. The vacuum sealer will automatically shut off once the air has been sufficiently removed and a vacuum seal is achieved.

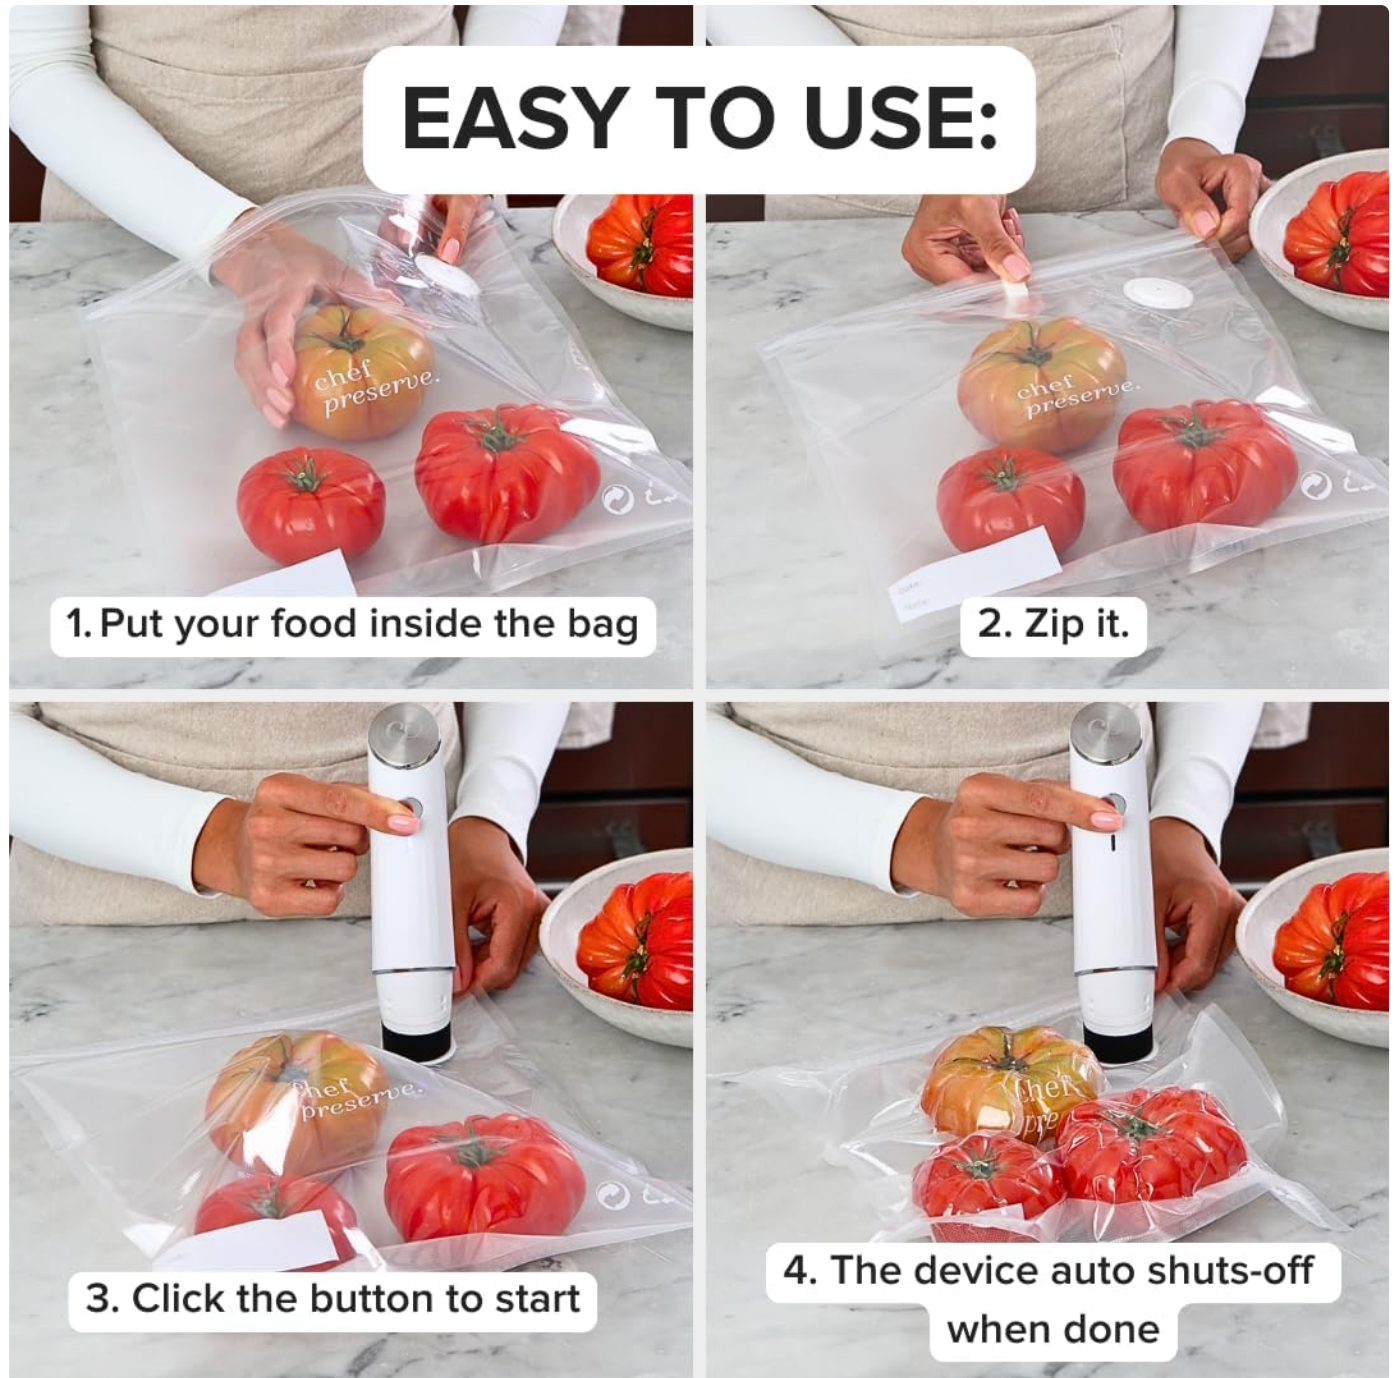


Image: Step-by-step visual guide on vacuum sealing food in a bag using the Chef Preserve device.

6.2 Using with Vacuum Containers (Sold Separately)

The Chef Preserve Compact Vacuum Sealer is compatible with Chef Preserve vacuum containers. To use, place the sealer over the container's valve and press the power button. The device will automatically stop when the desired vacuum level is reached.

Your browser does not support the video tag.

Video: Official demonstration of the Chef Preserve Vacuum Sealer, showcasing its use with both bags and containers.

6.3 Releasing the Vacuum Seal

To open a vacuum-sealed bag, simply pull the zipper seal apart. For vacuum containers, press the button on the lid's valve to release the vacuum before opening.

7. MAINTENANCE AND CLEANING

7.1 Cleaning the Vacuum Sealer

Wipe the exterior of the vacuum sealer with a soft, damp cloth. Do not immerse the device in water or use abrasive cleaners. Ensure the suction nozzle is clean and free of debris for effective operation.

7.2 Cleaning Reusable Bags

Chef Preserve reusable bags are dishwasher-safe. They can also be hand-washed with warm, soapy water. Ensure bags are thoroughly dried before reuse to prevent moisture from affecting future seals.

REUSABLE & RESEALABLE BAGS

- ✓ Dishwasher-Safe
- ✓ Freezer-Safe
- ✓ Microwave-Safe



Image: A Chef Preserve reusable vacuum bag containing cucumber slices, illustrating its multi-safe features.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on or operate.	Low battery or device malfunction.	Ensure the device is fully charged. If the issue persists, contact customer support.
Bag does not vacuum seal properly.	Bag not properly zipped, valve obstructed, or bag is damaged.	Ensure the bag is completely zipped. Check the valve for any food particles or obstructions. Use a new bag if damaged.
Vacuum sealer does not shut off automatically.	Possible internal sensor issue or continuous air leak.	Ensure the bag is properly sealed and the valve is clear. If the device continues to run, manually turn it off and contact customer support.

Problem	Possible Cause	Solution
Food loses vacuum seal after some time.	Bag damage, improper initial seal, or food with sharp edges.	Inspect the bag for punctures or tears. Ensure the zipper seal was completely closed. For foods with sharp edges, consider using a protective layer.

9. SPECIFICATIONS

Feature	Detail
Brand	Chef Preserve
Model Number	CP.V1.1
Material	Acrylonitrile Butadiene Styrene (ABS)
Color	White
Item Weight	200 Grams
Power Source	Battery Powered
Operation Mode	Automatic
Voltage	5V
Included Components	Charging Cable, Vacuum Bags, Zipper Clip

10. WARRANTY AND SUPPORT

10.1 Warranty Information

The Chef Preserve Compact Vacuum Sealer comes with a **2-year manufacturer warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or neglect.

10.2 Customer Support

For warranty claims, technical assistance, or any questions regarding your Chef Preserve product, please contact our customer support team:

- **Website:** www.chefpreserve.com/support
- **Email:** support@chefpreserve.com

Please have your model number (CP.V1.1) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question