

- Manuals.plus /
- > [Aiho](#) /
 - > Aiho 3-Piece Patio Furniture Set: Outdoor Rocking Chair and Coffee Table Manual (Model WR210-G)

Aiho WR210-G

Aiho 3-Piece Patio Furniture Set: Outdoor Rocking Chair and Coffee Table Instruction Manual

1. PRODUCT OVERVIEW

Thank you for choosing the Aiho 3-Piece Patio Furniture Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor furniture. Please read these instructions carefully before assembly and use to ensure proper function and longevity of your product.



Image 1.1: The Aiho 3-Piece Patio Furniture Set, featuring two rocking chairs with grey cushions and a square coffee table.

2. IMPORTANT SAFETY INFORMATION

Please adhere to the following safety guidelines to prevent injury or damage to the product:

- **Proper Assembly:** Ensure all components are correctly assembled and all fasteners are securely tightened according to the instructions. Do not fully tighten screws until all parts are loosely connected.
- **Load Capacities:** Each rocking chair is designed to support a maximum weight of 250 lbs (approximately 113 kg). Do not exceed this weight limit.
- **Safe Use of Rocking Chairs:** Use rocking chairs on a flat, stable surface to prevent tipping. Avoid excessive or aggressive rocking that could lead to instability.
- **Children and Pets:** Keep children and pets away from the assembly area. Supervise children when they are near or using the furniture.
- **Outdoor Use:** This furniture is designed for outdoor use. While weather-resistant, prolonged exposure to extreme weather conditions may reduce its lifespan.
- **Glass Table Top:** The coffee table features a tempered glass top. Handle with care to avoid breakage. Do not place extremely hot items directly on the glass without protection.

Failure to follow these safety instructions may result in personal injury or product damage.

3. PACKAGE CONTENTS

Verify that all components listed below are present in your package before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Rocking Chairs (x2)
- Coffee Table (x1)
- Seat Cushions (x2)
- Assembly Hardware Kit (screws, washers, wrench)
- Instruction Manual (this document)

Dimension

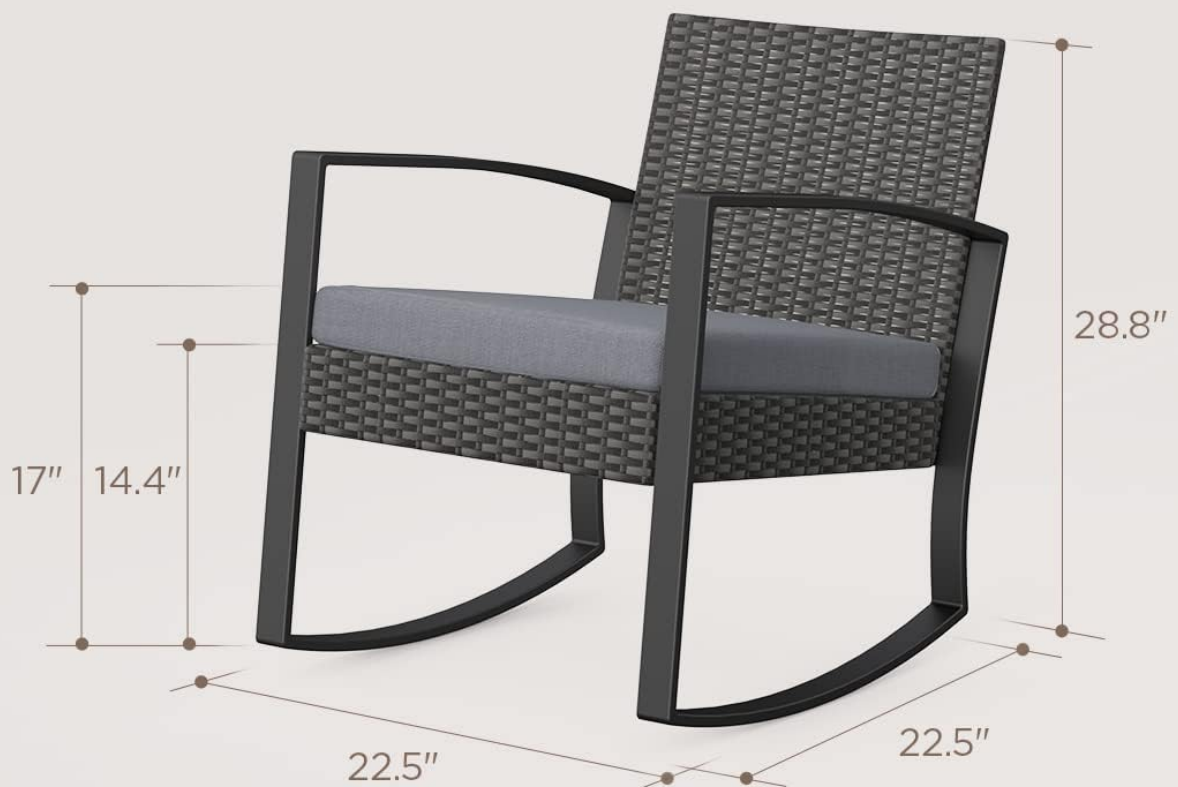


Image 3.1: Visual representation of the package contents and their approximate dimensions.

4. ASSEMBLY INSTRUCTIONS

Assembly is required for this furniture set. Please follow these general steps. A detailed assembly diagram and specific hardware instructions are included in the separate hardware kit.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface (e.g.,

a blanket or cardboard) to prevent scratches.

2. **Identify Parts:** Refer to the parts list in your hardware kit to identify each component of the chairs and table.
3. **Initial Assembly (Chairs):** Begin assembling the chair frames. Loosely attach all screws and bolts as indicated in the diagram. *Do not tighten them fully at this stage.*
4. **Initial Assembly (Table):** Assemble the coffee table frame, again loosely attaching all fasteners.
5. **Final Tightening:** Once all parts of a chair or the table are connected and aligned, gradually tighten all screws and bolts using the provided wrench. Ensure all connections are secure but do not overtighten.
6. **Attach Cushions:** Place the seat cushions onto the assembled chairs.

Important Tip: Not tightening screws until all are in place helps align the parts correctly and prevents misalignment or difficulty during assembly.

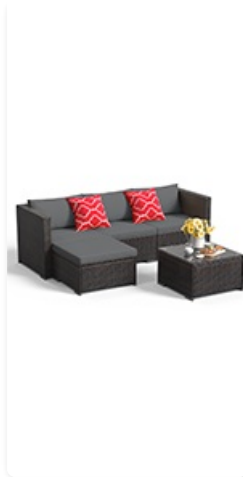


Image 4.1: Example of assembly hardware and tools.

5. OPERATION

Your Aiho patio furniture set is designed for comfortable outdoor relaxation.

5.1 Rocking Chairs

- The chairs feature a balanced rocking design for a smooth and comfortable motion.
- Sit centrally in the chair and gently push off with your feet to initiate the rocking motion.
- The ergonomic design with a wide backrest and thick cushions provides support and comfort.



Image 5.1: Illustration of the rocking chair's motion and design features.

5.2 Coffee Table

- The square coffee table provides a convenient surface for drinks, snacks, or small decorative items.
- Its tempered glass top is durable and easy to clean.



**Durable Tempered
Glass Top**



**Passivated Glass
Edge**



Image 5.2: Detail of the coffee table's durable tempered glass top.

6. MAINTENANCE AND CARE

Regular maintenance will help preserve the appearance and extend the life of your patio furniture set.

- **Cleaning Frames:** Wipe the powder-coated steel frames with a dry cloth to remove dust and debris. For stubborn dirt, use a mild soap solution and a soft cloth, then rinse thoroughly and dry immediately.

- **Cleaning Wicker:** The hand-woven PE wicker is weather-resistant. Clean with a soft brush or cloth and a mild soap solution. Rinse with water and allow to air dry.
- **Cushion Care:** The cushion covers feature a hidden zipper for easy removal. Machine wash the covers in cold water on a gentle cycle, or hand wash. Air dry only; do not tumble dry. Do not bleach.
- **Glass Table Top:** Clean the tempered glass top with a glass cleaner and a soft, lint-free cloth.
- **Seasonal Storage:** During harsh weather conditions or off-season, it is recommended to store the furniture indoors or cover it with a protective outdoor furniture cover to prevent damage.
- **Fastener Check:** Periodically check all screws and bolts to ensure they remain tight. Retighten as necessary.



Image 6.1: Demonstrating the removable cushion cover for easy cleaning.

7. TROUBLESHOOTING

If you encounter any issues with your Aiho patio furniture set, please refer to the following common solutions:

- **Wobbly Chair/Table:** Ensure all screws and bolts are fully tightened. If the issue persists, loosen all fasteners slightly, gently rock the furniture to settle it, then retighten all fasteners evenly.

- **Missing Parts/Hardware:** Double-check all packaging materials. If parts are genuinely missing, contact Aiho customer support with your product model number and a description of the missing items.
- **Difficulty Assembling:** Review the assembly instructions carefully. Ensure you are not fully tightening screws until all parts are loosely connected. Sometimes, swapping similar-looking parts can resolve alignment issues.
- **Cushion Discoloration/Wear:** Ensure cushions are cleaned regularly and stored away from direct, prolonged sunlight or harsh weather when not in use.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	WR210-G
Material	Powder-coated Steel Frame, PE Wicker, Tempered Glass, Fabric Cushions
Color	Grey (Cushions and Wicker)
Rocking Chair Dimensions (L x W x H)	28.74 x 25.59 x 22.83 inches (approximate)
Coffee Table Dimensions (L x W x H)	15.8 x 15.8 x 15.6 inches (approximate)
Item Weight	43.2 pounds (total package)
Weight Capacity (per chair)	250 lbs
UPC	850056273442

9. WARRANTY AND SUPPORT

For warranty information, missing parts, or any product-related inquiries, please contact Aiho customer support directly. Refer to your purchase documentation or the Aiho official website for contact details.

Please have your model number (WR210-G) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D3ZY7DRX>

More documents and user manuals: <https://manuals.plus/>