

[manuals.plus](#) /› [BLACK+DECKER](#) /› [BLACK+DECKER 6-Slice Convection Toaster Oven and 2-Slice Toaster Bundle Instruction Manual](#)**BLACK+DECKER 6-Slice Convection Toaster Oven and 2-Slice Toaster Bundle****BLACK+DECKER 6-Slice Convection Toaster Oven and 2-Slice Toaster Bundle Instruction Manual****INTRODUCTION**

This manual provides essential information for the safe and efficient operation of your BLACK+DECKER 6-Slice Convection Toaster Oven and 2-Slice Toaster Bundle. Please read all instructions carefully before use and retain this manual for future reference.

This bundle includes a versatile 6-Slice Stainless Steel Convection Countertop Toaster Oven and a sleek 2-Slice Toaster. The convection toaster oven utilizes circulating hot air for fast, even baking. It features dual cooking racks, a nonstick interior, a broiler pan, and a removable crumb tray. The 2-slice toaster is designed with extra-wide slots for various bread types and offers functions for Toast, Bagel, and Cancel, along with six shade settings.

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and similar products.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- Do not leave appliance unattended when in use.

PRODUCT COMPONENTS

Your BLACK+DECKER bundle includes the following items:

- 6-Slice Convection Toaster Oven
- 2-Slice Toaster
- Bake Pan
- Broil Rack
- Removable Crumb Tray (for Toaster Oven)



Image: The complete BLACK+DECKER 6-Slice Convection Toaster Oven and 2-Slice Toaster Bundle.

SETUP

1. **Unpacking:** Carefully remove all packaging materials, including any tape or labels.
2. **Cleaning:** Wash the bake pan, broil rack, and crumb tray in warm, soapy water. Wipe the interior and exterior of both appliances with a damp cloth. Dry thoroughly.
3. **Placement:** Place both the toaster oven and the slot toaster on a stable, heat-resistant surface, ensuring adequate ventilation around the appliances. Do not place directly under cabinets or near flammable materials.

4. **Power Connection:** Plug the power cords into a standard electrical outlet. Ensure the outlet voltage matches the appliance requirements.

OPERATING INSTRUCTIONS: 6-SLICE CONVECTION TOASTER OVEN

The convection toaster oven offers multiple cooking functions. Familiarize yourself with the control knobs for temperature, function, and timer.



Image: Front view of the BLACK+DECKER 6-Slice Convection Toaster Oven.



Engineered to Cook 20% Faster*

*20% faster cooking based on cooking Digiorno Rising Crust cheese pizza compared to Black and Decker

Image: Close-up of the control panel on the BLACK+DECKER 6-Slice Convection Toaster Oven, showing temperature, function, and timer dials.

Toasting


1. Place food directly on the wire rack or in the bake pan on the wire rack.
2. Turn the Function knob to 'Toast'.
3. Turn the Temperature knob to the desired toast shade setting (usually indicated by toast icons or a specific temperature for toast).
4. Turn the Timer knob to the desired toasting time. The oven will begin to toast.
5. A bell will sound when the toasting cycle is complete.

Baking

1. Place food in the bake pan and position it on the wire rack. The dual rack positions allow for versatility.
2. Turn the Function knob to 'Bake' or 'Convection Bake' for faster, more even results.
3. Turn the Temperature knob to the desired baking temperature.
4. Turn the Timer knob to the desired baking time. The oven will begin to bake.
5. A bell will sound when the baking cycle is complete.

Broiling

1. Place food on the broil rack within the bake pan to catch drippings. Position the rack in the upper slot for optimal broiling.
2. Turn the Function knob to 'Broil'.
3. Turn the Temperature knob to 'Broil' (typically the highest temperature setting).
4. Turn the Timer knob to the desired broiling time. Monitor food closely as broiling is a fast cooking method.
5. A bell will sound when the broiling cycle is complete.

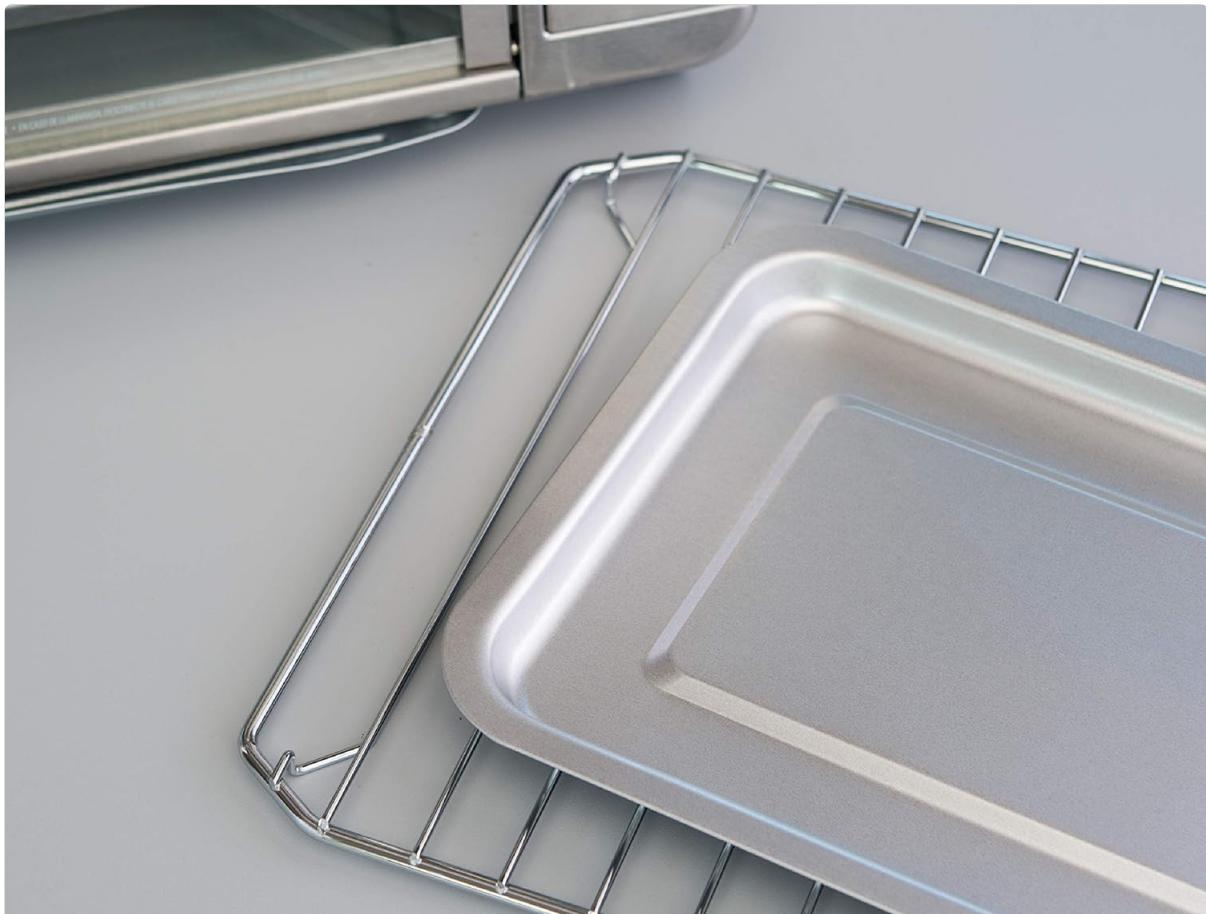

Includes

Bake Pan and Broil Rack

Image: Included accessories for the BLACK+DECKER 6-Slice Convection Toaster Oven, showing the bake pan and broil rack.

OPERATING INSTRUCTIONS: 2-SLICE TOASTER

The 2-slice toaster is designed for quick and convenient toasting of bread and bagels.



Image: Front view of the BLACK+DECKER 2-Slice Toaster with wide slots.



INDIVIDUAL CONTROLS FOR BAGEL, FROZEN AND CANCEL

Image: Close-up of the control buttons on the BLACK+DECKER 2-Slice Toaster, including Bagel, Frozen, and Cancel functions.

Toasting Bread/Bagels

1. Place up to two slices of bread or one sliced bagel into the extra-wide toasting slots.
2. Select the desired shade setting using the shade control knob (settings 1-6).
3. For bagels, press the 'Bagel' button. For frozen items, press the 'Frozen' button.
4. Press the toast lever down until it locks into place. The toasting cycle will begin.
5. The toast will automatically pop up when the cycle is complete. To stop toasting at any time, press the 'Cancel' button.

EXTRA-WIDE TOASTING SLOTS

TOAST BAGELS AND THICK ARTISAN BREADS WITH EASE



Image: Detailed view of the extra-wide toasting slots on the BLACK+DECKER 2-Slice Toaster, designed to accommodate thick bread and bagels.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliances.

Toaster Oven Cleaning

1. Always unplug the toaster oven and allow it to cool completely before cleaning.
2. Remove the bake pan, broil rack, and crumb tray. Wash these accessories in warm, soapy water or place them in the dishwasher if they are dishwasher-safe.
3. Wipe the interior walls with a damp cloth and mild liquid soap. Avoid abrasive cleaners or metal scouring pads.
4. Clean the exterior with a damp cloth. For stubborn stains, a mild non-abrasive cleaner may be used.
5. Ensure all parts are completely dry before reassembling and storing the appliance.

Slot Toaster Cleaning

1. Unplug the toaster and allow it to cool completely.
2. Locate the removable crumb tray at the bottom of the toaster. Slide it out and discard crumbs.
3. Wash the crumb tray in warm, soapy water, rinse, and dry thoroughly.
4. Wipe the exterior of the toaster with a damp cloth. Do not use abrasive cleaners.
5. Never insert utensils into the toaster slots.

TROUBLESHOOTING

If you encounter issues with your appliances, refer to the following common solutions:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household circuit breaker.
- **Food not toasting/cooking evenly:** For toaster oven, ensure the rack is positioned correctly for the food type. For slot toaster, adjust the shade setting. Ensure appliances are not overcrowded.
- **Excessive smoke:** This may be due to food particles or grease buildup. Unplug, allow to cool, and clean thoroughly.
- If problems persist, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model	6-Slice Convection Toaster Oven and 2-Slice Toaster Bundle
Color	Black
Material	Stainless Steel
Special Feature (Toaster Oven)	Convection Technology
Control Type	Knob
Door Style (Toaster Oven)	Dropdown Door
Included Components	Crumb Tray, Bake Pan, Broil Rack
Power Source	Electric
Number of Shelves (Toaster Oven)	2

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your product or visit the official BLACK+DECKER website. Keep your purchase receipt as proof of purchase for warranty claims.

