

topzee EK-2305

topzee Personal Smoothie Blender

Model: EK-2305

1. INTRODUCTION

Thank you for choosing the topzee Personal Smoothie Blender. This powerful 1000W single-serve blender is designed for quick and efficient blending of protein shakes, frozen drinks, smoothies, sauces, and more. Its compact design and portable travel cups make it ideal for daily use at home or on the go. Please read this manual thoroughly before operating the appliance to ensure safe and proper use.



Figure 1: The topzee Personal Smoothie Blender in use, demonstrating its powerful blending capabilities for various ingredients.

2. SAFETY INSTRUCTIONS

WARNING: Read all safety warnings and instructions before using this appliance.

- Always unplug the blender from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not immerse the motor base in water or any other liquid. Clean only with a damp cloth.
- Blades are sharp. Handle the blade assembly with extreme care to avoid injury.
- Keep hands and utensils out of the blending cup while operating to prevent personal injury or damage to the blender.
- Do not blend hot liquids, as pressure buildup may cause the container to rupture and result in injury.
- Ensure the cup and blade assembly are securely attached to the motor base before operating.
- Do not operate the blender for more than 1 minute continuously to prevent overheating. Allow

the motor to cool down between uses.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PARTS AND FEATURES

Familiarize yourself with the components of your topzee Personal Smoothie Blender:

1. **Motor Base:** Contains the powerful 1000W motor and suction cups for stability.
2. **Blade Assembly:** Features durable stainless steel 6-edge blades designed for efficient blending and ice crushing.
3. **24oz Travel Cup:** BPA-free, durable plastic cup for blending and on-the-go consumption. Marked with a MAX fill line.
4. **To-Go Lid:** Convenient lid for sealing the travel cup, allowing for easy portability.

Perfect Blends, Honest Claims



Figure 2: Detailed view of the 6-edge blade assembly and the 24oz travel cup, highlighting the MAX fill line for safe operation.

Strong Grip Small Footprint

Silicone Suction Cups for Stability



Figure 3: The motor base with its strong silicone suction cups, ensuring stability during blending and preventing movement on countertops.

4. SETUP

Before first use, wash all parts that will come into contact with food (travel cup, blade assembly, and to-go lid) in warm, soapy water. Rinse thoroughly and dry.

1. Place the motor base on a clean, dry, and stable surface. Ensure the suction cups firmly grip the countertop.
2. Add your desired ingredients to the 24oz travel cup. Do not exceed the 'MAX' fill line indicated on the cup.
3. Screw the blade assembly onto the open end of the travel cup until it is tightly sealed.

5. OPERATING INSTRUCTIONS

Operating your topzee Personal Smoothie Blender is simple and intuitive:

1. After preparing the cup with ingredients and attaching the blade assembly, invert the cup and place it onto the motor base.
2. Align the tabs on the cup with the slots on the motor base.
3. To begin blending, press down firmly on the cup. The indicator light on the base will turn blue, and blending will start.
4. For continuous blending, press down and then twist the cup clockwise to lock it into place.
5. Blend until desired consistency is achieved. Do not blend for more than 1 minute continuously. If blending for longer, allow the motor to rest for a few minutes before continuing.
6. To stop blending, either release pressure from the cup (if not locked) or twist the cup counter-clockwise to unlock and lift it from the base.
7. Unscrew the blade assembly from the cup. You can now attach the to-go lid for portability or pour your blended creation into another container.

**Blend More
Than Just Juice**
Endless Ideas with Our Recipe Book

12
RECIPE
BOOK

SMOOTHIES &
SMOOTHIE BOWLS

ICY DRINKS

MILKSHAKES

SALSA

PESTO

PROTEIN SHAKES

Figure 4: Visual guide for operating the blender, illustrating the 'Press to Start' and 'Twist to Lock' actions for blending.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your blender:

- **Motor Base:** Wipe the motor base clean with a damp cloth. Do not immerse it in water.
- **Travel Cup and To-Go Lid:** These parts are dishwasher safe (top rack recommended).
- **Blade Assembly:** Hand wash the blade assembly carefully with warm, soapy water. The blades are very sharp.
- **Quick Self-Cleaning:** For a quick clean, add a small amount of water and a drop of dish soap to the travel cup, attach the blade assembly, and blend for a few seconds. Rinse thoroughly.

Self-Cleaning and Dishwasher Safe

Detachable Blades, Also Easy to Rinse



Figure 5: Cleaning methods for the blender, including self-cleaning, dishwasher compatibility for the cup and lid, and hand rinsing the blade assembly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; cup/blade assembly not properly seated or locked; motor overheated.	Ensure power cord is securely plugged in. Re-seat the cup and blade assembly, pressing down firmly or twisting to lock. Unplug and let the motor cool for 15-20 minutes if overheated.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients too large or hard.	Add more liquid. Reduce the amount of ingredients. Cut large or hard ingredients into smaller pieces. Pulse the blender by pressing and releasing the cup.
Leakage from the cup.	Blade assembly not tightened sufficiently; cup overfilled.	Ensure the blade assembly is screwed on tightly. Do not fill ingredients past the 'MAX' line.
Burning smell from motor.	Overheating due to continuous use or blending very thick mixtures.	Unplug immediately and let the motor cool down for at least 20 minutes. Reduce load or add more liquid for thick mixtures. Do not operate for more than 1 minute continuously.

8. SPECIFICATIONS

Feature	Detail
Brand	topzee
Model Number	EK-2305
Power	1000W (Max 1200W)
Voltage	120V
Capacity	24oz (working capacity)
Blades	6-edge stainless steel
Dimensions (Product)	11"D x 10"W x 6.4"H
Item Weight	5.9 pounds
Special Feature	Lightweight, Suction Cup Base
UPC	860013285135

9. WARRANTY AND SUPPORT

topzee products are manufactured to the highest quality standards. For information regarding warranty coverage or technical support, please contact our customer service team.

Customer Support: Support@topzee.com

Please retain your proof of purchase for warranty claims.