

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [AXEFIT](#) /
- › [AXEFIT Walking Pad Under Desk Treadmill User Manual](#)

### AXEFIT treadmill 300

# AXEFIT Walking Pad Under Desk Treadmill User Manual

Brand: AXEFIT | Model: treadmill 300

## 1. INTRODUCTION

---

This manual provides essential information for the safe and effective operation and maintenance of your AXEFIT Walking Pad Under Desk Treadmill. Please read it thoroughly before initial use and retain it for future reference.

The AXEFIT Walking Pad is a versatile 2-in-1 device suitable for both walking and light jogging, designed to integrate fitness into your daily routine, whether at home or in the office. It features a quiet 2.5HP motor, a comfortable shock-absorbing running belt, and an intuitive LED display for tracking your workout progress.



Figure 1: AXEFIT Walking Pad Under Desk Treadmill in use. This image shows the compact design of the treadmill, suitable for under-desk use or standalone exercise.

## 2. SETUP

---

Your AXEFIT Walking Pad is designed for an installation-free setup, meaning it is ready for use almost immediately after unboxing.

### 2.1 Unboxing and Placement

1. Carefully remove the treadmill and all accessories from the packaging.
2. Place the treadmill on a flat, stable surface. Ensure there is adequate clear space around the unit for safe operation.
3. Connect the power cord to the treadmill and then to a grounded electrical outlet.

# Powerful & Silent Motor

**2.5 HP**  
Ours 2.5HP

**VS**

**2.0 HP**  
Others 2.0HP



Low Noise <45db



Weight Capacity **265lbs**



Speed **0.6-3.8mph**



Figure 2: Unboxing the AXEFIT Walking Pad. The treadmill is securely packaged with protective foam.



Figure 3: The AXEFIT Walking Pad features smooth wheels for easy movement and compact storage under furniture like beds or sofas.

### 3. OPERATING INSTRUCTIONS

The AXEFIT Walking Pad is controlled via a remote control, offering convenient access to all functions.

#### 3.1 Remote Control Functions

- **Power Button:** Press to turn the treadmill on or off.
- **Start/Pause Button:** Press to start or pause your workout.
- **Speed Adjustment (+/-):** Increase or decrease the walking/jogging speed. The speed range is 0.6 to 3.8 MPH.
- **Mode (M) Button:** Cycle through different display metrics on the LED screen.

# Accurate Display Data Logging

Real-time display allows you to clearly know your sports data



Figure 4: The clear LED display tracks time, speed, distance, and calories. The remote control allows for easy adjustment of settings.



Figure 5: The remote control can be conveniently stored in the integrated silicone slot on the treadmill.

### 3.2 LED Display

The integrated LED display provides real-time tracking of your exercise data, cycling through:

- **Time:** Duration of your workout.
- **Speed:** Current speed in MPH.
- **Distance:** Total distance covered.
- **Calories:** Estimated calories burned.

# Humanized Design

Minimize Knee Impact



**Double-Layer  
Run Platform**



**8 Shock  
Absorber Points**



**5 Layer  
Running Belt**



Figure 6: The AXEFIT Walking Pad operates quietly, making it suitable for office environments without disturbing others.

## 4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your treadmill.

### 4.1 Lubrication

The running belt requires periodic lubrication to maintain smooth operation and reduce friction. Refer to the detailed instructions in the included user's manual for the correct application procedure. Two bottles of lubricant are provided with your treadmill.

### 4.2 Belt Adjustment

If the running belt becomes misaligned or feels loose, use the provided L-shaped wrench to adjust it. Detailed instructions for belt alignment are available in the user's manual.



Figure 7: Package contents include the treadmill, power cord, remote control, lubricant, and tool kit for maintenance.

## 5. TROUBLESHOOTING

Should you encounter any operational issues with your AXEFIT Walking Pad, please consult the comprehensive troubleshooting section in the full user's manual. This section provides solutions for common problems. If the issue persists, please contact AXEFIT customer support for assistance.

## 6. SPECIFICATIONS

Feature	Detail
Brand	AXEFIT
Model Name	treadmill 300

<b>Color</b>	Black
<b>Product Dimensions</b>	45.27"D x 19.7"W x 4.1"H
<b>Item Weight</b>	45 Pounds
<b>Material</b>	Alloy Steel
<b>Maximum Speed</b>	3.8 Miles per Hour
<b>Minimum Speed</b>	0.6 Miles per Hour
<b>Special Feature</b>	Portable, Shock Absorbent, Compact Design
<b>Recommended Uses</b>	Home and Office
<b>Target Audience</b>	Adult
<b>Maximum Horsepower</b>	2.5 Horsepower
<b>Assembly Required</b>	No
<b>Display Type</b>	LED
<b>Power Source</b>	Corded Electric
<b>Included Components</b>	Power Cord, Remote Control, Lubricant, Tool Kit
<b>Metrics Measured</b>	Speed, Calories Burned, Time, Distance
<b>Maximum Weight Recommendation</b>	265 Pounds
<b>Deck Length</b>	40 Inches
<b>Input Power</b>	300 Watts
<b>UPC</b>	679065050703

## 7. WARRANTY AND SUPPORT

---

Your AXEFIT Walking Pad Under Desk Treadmill comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your product is free from material and workmanship flaws under normal use.

For warranty claims, technical support, or any inquiries regarding your product, please contact AXEFIT customer service. Refer to the contact information provided in your original product packaging or visit the official AXEFIT website.

