

[manuals.plus](#) /

- › [Edifier](#) /
- › [Edifier PP205 Portable Bluetooth Speaker User Manual](#)

Edifier PP205

Edifier PP205 Portable Bluetooth Speaker User Manual

Model: PP205

1. INTRODUCTION

Thank you for purchasing the Edifier PP205 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. The PP205 is designed for portability and versatility, offering multiple connectivity options and a long-lasting battery, making it ideal for various indoor and outdoor activities.



Image: The Edifier PP205 Portable Bluetooth Speaker, showcasing its compact design and integrated handle.

2. PACKAGE CONTENTS

Please check the package carefully to ensure all items are present:

- Edifier PP205 Bluetooth Speaker
- Type-C to USB-A Charging Cable
- User Manual

Note: A wired microphone is supported but not included with the speaker and must be purchased separately.

3. PRODUCT OVERVIEW

Control Panel



Image: Detailed view of the Edifier PP205's top control panel, showing buttons, knobs, and the LED display.

1. **Power ON/OFF:** Press and hold to power on or off.
2. **Previous Track:** Short press to go to the previous track.
3. **Play/Pause:** Short press to play or pause audio.
4. **Next Track:** Short press to go to the next track.
5. **Input Modes Quick Switching:** Press to cycle through Bluetooth, Line In, USB, and TF Card modes.
6. **Record & Playback:** For microphone recording and playback functions.
7. **Microphone Volume Knob:** Adjusts the volume of the connected microphone.
8. **Speaker Master Volume Knob:** Adjusts the overall speaker volume.
9. **LED Display Screen:** Shows current input mode, battery level, and other status indicators.
10. **Phone Stand:** Integrated slot for holding a smartphone.

Multifunctional Ports



Image: Close-up of the Edifier PP205's rear panel, highlighting the various input and charging ports.

- **MIC IN:** 6.35mm (quarter inch) input for wired microphone.
- **LINE IN:** 3.5mm auxiliary input for external audio devices.
- **USB:** USB-A port for playing audio from USB drives.
- **TF CARD:** Micro SD card slot for playing audio from TF cards.
- **TYPE-C:** USB Type-C port for charging the speaker.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the speaker. Connect the provided Type-C to USB-A charging cable to the speaker's Type-C port and the other end to a USB power adapter (not included) or a computer's USB port. The LED display will indicate charging status. A full charge takes approximately 3-4 hours.

4.2 Powering On/Off

To power on the speaker, press and hold the Power ON/OFF button (1) on the control panel until the LED display lights up. To power off, press and hold the same button until the display turns off.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Mode

Upon powering on, the speaker will automatically enter Bluetooth pairing mode, indicated by 'BLUE' flashing on the LED display. If not, press the Input Modes Quick Switching button (5) until 'BLUE' appears.

1. Enable Bluetooth on your device (smartphone, tablet, etc.).
2. Search for 'EDIFIER PP205' in your device's Bluetooth list.
3. Select 'EDIFIER PP205' to connect. Once connected, 'BLUE' will stop flashing and remain solid.
4. You can now play audio from your device through the speaker.

FLEXIBILITY IN CONNECTIVITY

With Bluetooth 5.0, LINE IN, USB, TF Card
multiple inputs for plug and play



Bluetooth 5.0



USB-A Port



Line In



TF Card



Image: The Edifier PP205 speaker with icons representing its multiple connectivity options: Bluetooth, USB-A, Line In, and TF Card.

5.2 Line In Mode (AUX)

Connect an external audio device (e.g., MP3 player, computer) to the speaker's LINE IN port using a 3.5mm audio cable (not included). Press the Input Modes Quick Switching button (5) until 'LINE' appears on the LED display. Audio will now play from the connected device.

5.3 USB-A Playback

Insert a USB flash drive into the USB-A port. Press the Input Modes Quick Switching button (5) until 'USB' appears on the LED display. The speaker will automatically begin playing supported audio files from the USB drive.

5.4 Micro SD Card Playback

Insert a Micro SD (TF) card into the TF CARD slot. Press the Input Modes Quick Switching button (5) until 'TF' appears on the LED display. The speaker will automatically begin playing supported audio files from the Micro SD card.

5.5 Microphone Usage (Karaoke/PA)

Connect a wired microphone (not included) to the MIC IN port. Adjust the microphone volume using the Microphone Volume Knob (7). You can use the speaker for karaoke or public address functions.

Wired Microphone Supported

*Microphone not included



Image: A woman singing into a wired microphone, with the Edifier PP205 speaker visible on a table, demonstrating its karaoke support.

5.6 Volume Control and Track Navigation

Adjust the overall speaker volume using the Speaker Master Volume Knob (8). Use the Previous Track (2) and Next Track (4) buttons to navigate through audio tracks in Bluetooth, USB, or TF Card modes. The Play/Pause button (3) controls playback.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Edifier PP205 speaker, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners, alcohol, benzene, or other chemical solvents, as they may damage the casing.
- **Battery Care:** For best battery life, avoid fully discharging the speaker frequently. Recharge the speaker regularly,

even if not in use for extended periods (e.g., once every 3 months).

- **Storage:** Store the speaker in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Water Resistance:** The speaker is water-resistant, meaning it can withstand splashes and light rain. Do not submerge the speaker in water or expose it to heavy rain.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Connect the speaker to a power source using the Type-C cable and charge it fully.
No sound from speaker.	Volume is too low; Incorrect input mode; Device not connected.	Increase master volume; Switch to the correct input mode (Bluetooth, Line In, USB, TF Card); Ensure device is properly connected/paired.
Bluetooth connection fails.	Speaker is not in pairing mode; Device is too far; Interference.	Ensure 'BLUE' is flashing on LED display; Move device closer to speaker (within 10m); Avoid obstacles between speaker and device.
Microphone not working.	Microphone not connected properly; Microphone volume too low.	Ensure microphone is securely plugged into MIC IN port; Increase Microphone Volume Knob.
Distorted sound.	Volume too high; Audio source quality is poor.	Reduce speaker volume; Try a different audio source or file.

8. SPECIFICATIONS

Detailed technical specifications for the Edifier PP205 Portable Bluetooth Speaker:



Image: Diagram showing the dimensions of the Edifier PP205 speaker: 9.53 inches (height), 6.5 inches (width), and 3.66 inches (depth).

- **Model Name:** PP205
- **Speaker Type:** Portable Outdoor Speaker
- **Connectivity Technology:** Bluetooth 5.0, Auxiliary (3.5mm Line In), USB-A, Micro SD Card (TF Card)
- **Speaker Maximum Output Power:** 24 Watts
- **Battery Life:** Up to 8 Hours

- **Battery Capacity:** 2000mAh Lithium Ion
- **Product Dimensions (D x W x H):** 3.66" x 6.5" x 9.53" (9.3cm x 16.5cm x 24.2cm)
- **Item Weight:** 1.2 Kilograms (2.64 pounds)
- **Control Method:** Touch, Button
- **Special Features:** Bass Boost, Portable, Lightweight, Display, Wired Microphone Support, Phone Stand
- **Water Resistance Level:** Water Resistant (Note: Not fully waterproof, avoid submersion)
- **Woofer Diameter:** 4 Inches
- **Signal-to-Noise Ratio:** 85 dB
- **Frequency Response:** 20 KHz

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Edifier PP205 Portable Bluetooth Speaker comes with a limited warranty. Please refer to the warranty card included in your package or visit the official Edifier website for detailed terms and conditions regarding warranty coverage and duration.

9.2 Customer Support

For technical assistance, troubleshooting, or any inquiries regarding your Edifier PP205 speaker, please contact Edifier customer support through their official website or the contact information provided in your product documentation. Ensure you have your product model number (PP205) and purchase details ready when contacting support.