

[Manuals.plus](#) /

› [ARSSLY](#) /

› ARSSLY Samsung Galaxy Tab A9 Plus Screen Replacement User Manual

ARSSLY SM-X210, SM-X215, SM-X216B

ARSSLY Samsung Galaxy Tab A9 Plus Screen Replacement User Manual

Model: SM-X210, SM-X215, SM-X216B

INTRODUCTION

This manual provides detailed instructions for the installation and proper handling of your ARSSLY LCD display replacement for the Samsung Galaxy Tab A9 Plus. Please read all instructions carefully before beginning the installation process to ensure correct procedure and prevent damage to your device.

COMPATIBILITY

This screen replacement is specifically designed for the following Samsung Galaxy Tab A9 Plus models:

- Samsung Galaxy Tab A9+ SM-X210 (Wi-Fi Version)
- Samsung Galaxy Tab A9+ SM-X215
- Samsung Galaxy Tab A9+ SM-X216B

Please verify your device's model number before proceeding with installation.

PACKAGE CONTENTS

Upon opening the package, ensure all the following items are present:

- 1 x LCD Display for Samsung Galaxy Tab A9 Plus
- 1 x Repair Kit (includes various tools)
- 1 x Spudger
- 1 x Tweezer
- 1 x Adhesive Tape

SCREEN REPLACEMENT FOR SAMSUNG TAB A9+ 11 INCH

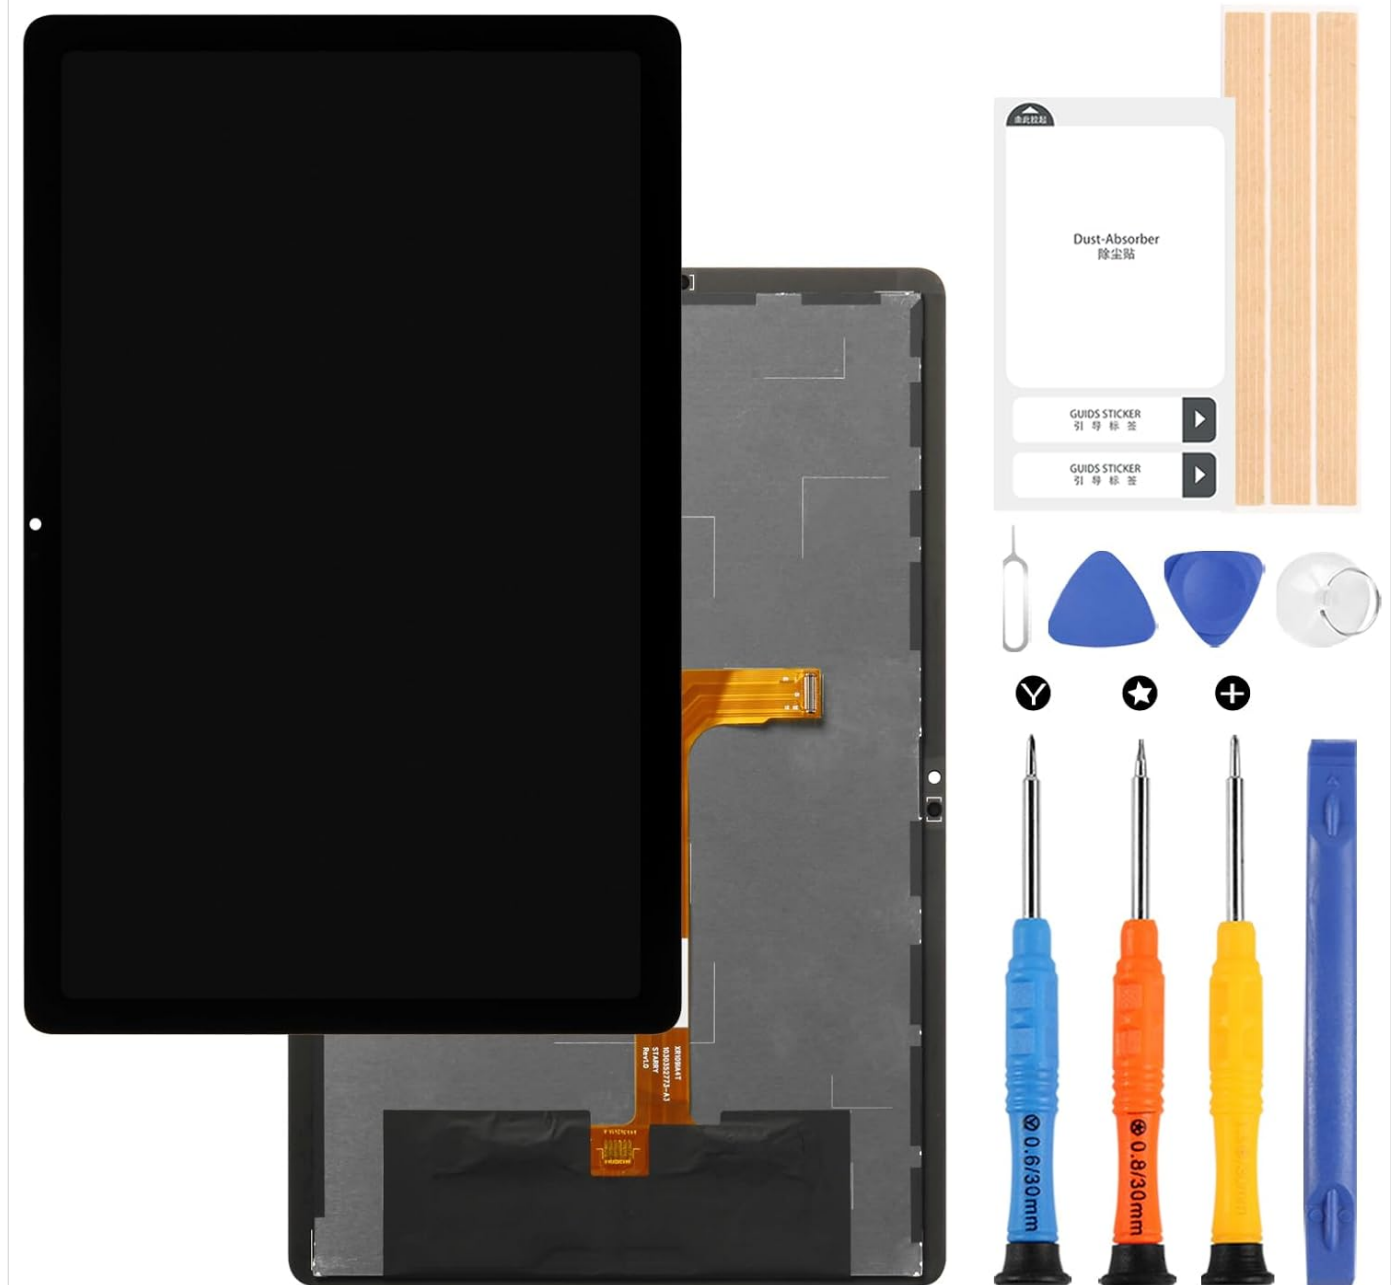 


Image: The ARSSLY LCD display replacement for Samsung Galaxy Tab A9 Plus shown alongside the included repair kit, spudger, tweezers, and adhesive tape.

SETUP AND INSTALLATION

Replacing a tablet screen requires precision and care. It is highly recommended that you possess prior experience in device repair or seek professional assistance. Incorrect installation can lead to damage to the screen or your device.

Before You Begin:

- **Power Off Device:** Ensure your Samsung Galaxy Tab A9 Plus is completely powered off before starting.
- **Backup Data:** Back up any important data on your device.
- **Watch Installation Videos:** Search for "Samsung Galaxy Tab A9 Plus screen replacement" on platforms like YouTube for visual guidance.
- **Prepare Workspace:** Work in a clean, well-lit, and static-free environment.

General Installation Steps:

1. **Heat the Edges:** Carefully apply heat to the edges of the existing screen to soften the adhesive. A heat gun or hairdryer on a low setting can be used.
2. **Pry Open:** Use the provided spudger and other prying tools to gently separate the old screen from the tablet frame. Work slowly and carefully to avoid damaging internal components.
3. **Disconnect Cables:** Once the old screen is partially lifted, locate and carefully disconnect the flex cables connecting it to the tablet's motherboard. These are typically secured with small connectors.
4. **Remove Old Screen:** Completely remove the old, damaged screen.
5. **Clean Frame:** Thoroughly clean any remaining adhesive residue from the tablet frame. Ensure the surface is smooth and free of debris.
6. **Connect New Screen:** Carefully connect the flex cables of the new ARSSLY LCD display to the corresponding ports on the tablet's motherboard. Ensure a secure and proper connection.

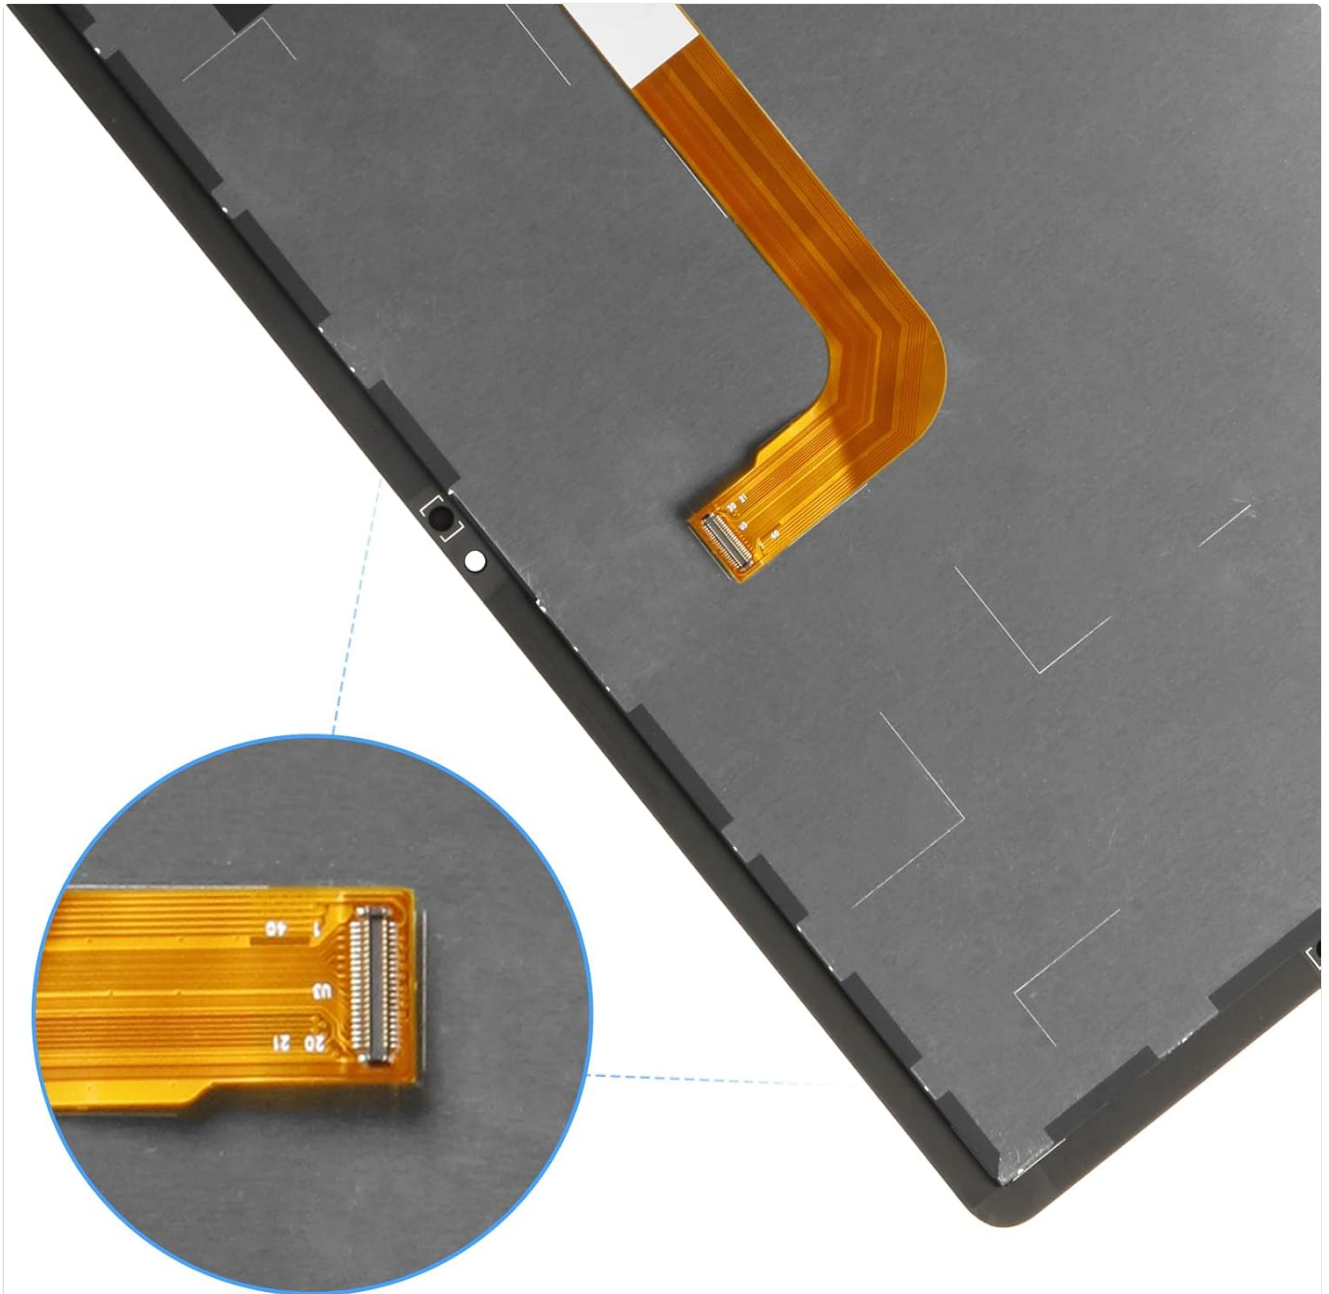 


Image: A detailed view of the flex cable connector on the new LCD display, highlighting the connection points for the tablet's motherboard.

7. **Test Functionality (Before Final Adhesion):** Before fully adhering the new screen, temporarily power on the tablet to test the display and touch functionality. Check for dead pixels, color issues, and touch responsiveness across the entire screen.
8. **Apply Adhesive:** If the test is successful, apply the new adhesive tape around the edges of the tablet frame.
9. **Secure New Screen:** Carefully align and press the new screen into place on the tablet frame, ensuring even pressure.
10. **Final Assembly:** Reassemble any other components removed during the process.



Image: The ARSSLY LCD display for Samsung Galaxy Tab A9 Plus, showing both the front display and the reverse side with the integrated ribbon cable for connection.

OPERATING (Post-Installation Check)

After successful installation, perform the following checks:

- **Power On:** Turn on your tablet.
- **Display Quality:** Observe the screen for any abnormalities such as dead pixels, discoloration, or uneven backlighting.
- **Touch Functionality:** Test the touch response across the entire screen. Open various applications and try gestures like swiping, pinching, and typing.
- **Brightness Adjustment:** Ensure screen brightness can be adjusted correctly.

FOR SAMSUNG GALAXY TAB A9+ SCREEN REPLACEMENT

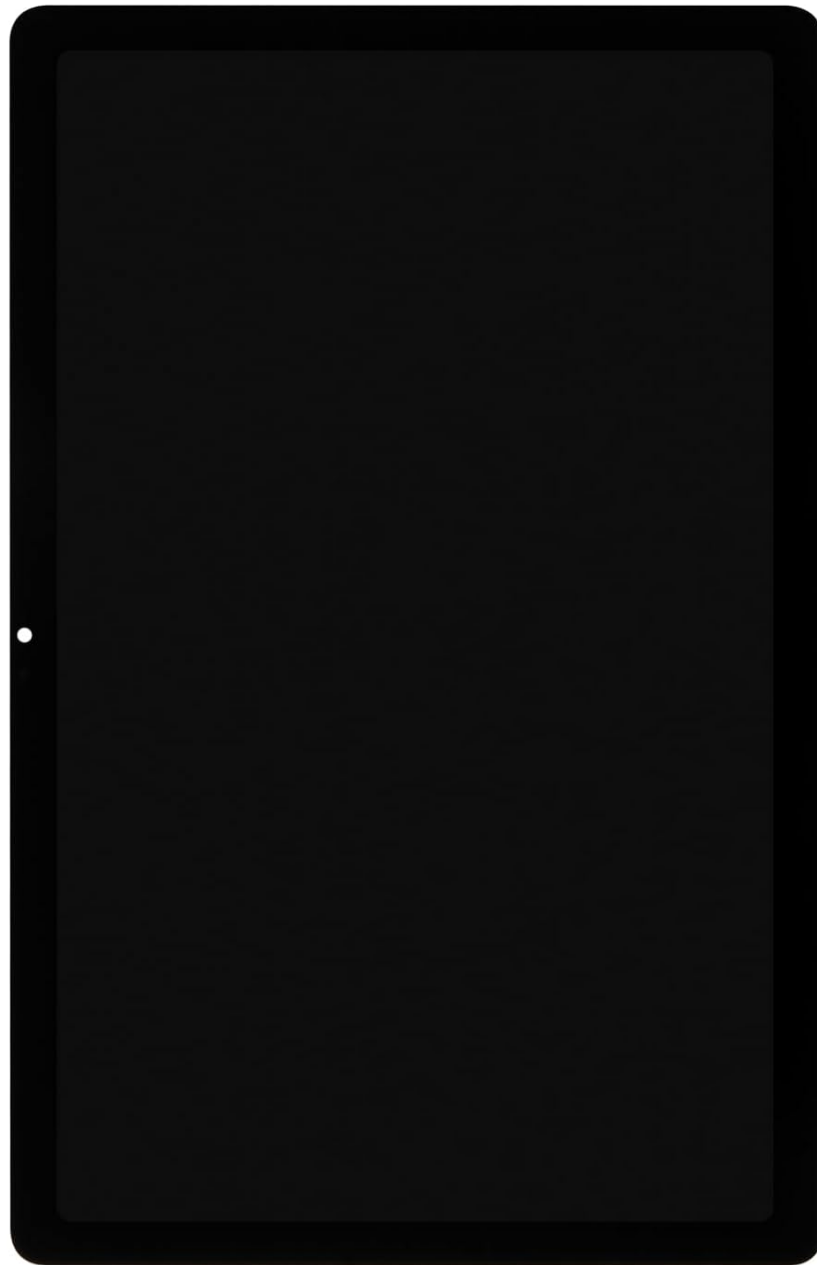 


Image: The ARSSLY LCD display for Samsung Galaxy Tab A9 Plus, showcasing the full front view of the screen.

MAINTENANCE

To ensure the longevity and optimal performance of your new screen:

- **Cleaning:** Use a soft, lint-free cloth specifically designed for electronics to clean the screen. Avoid harsh chemicals or abrasive materials.
- **Protection:** Consider using a screen protector and a protective case for your tablet to prevent future damage.
- **Avoid Pressure:** Do not apply excessive pressure to the screen, as this can cause internal damage.
- **Temperature:** Avoid exposing the tablet to extreme temperatures.

TROUBLESHOOTING

If you encounter issues after installation, consider the following:

- **Screen Not Turning On:**

- Ensure all flex cables are securely connected.
- Check if the battery is charged.
- Perform a hard reset on your tablet (refer to your tablet's original manual for instructions).

- **Touch Not Responding:**

- Verify the touch digitizer flex cable is properly seated.
- Restart the tablet.
- Ensure there is no debris or liquid on the screen.

- **Display Issues (Lines, Discoloration):**

- Recheck all display flex cable connections.
- Ensure no pressure is being applied to the screen from the frame or internal components.

If problems persist, contact customer support for further assistance.

SPECIFICATIONS

Product Type	LCD Display and Digitizer Touch Screen Assembly
Compatibility	Samsung Galaxy Tab A9 Plus (SM-X210, SM-X215, SM-X216B)
Screen Size	11 inches
Manufacturer	ARSSLY
Item Weight	14.4 ounces
Package Dimensions	11.85 x 8.58 x 1.38 inches

WARRANTY AND SUPPORT

Warranty: This product comes with a **3-month warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions not caused by user error or improper installation. If a quality problem is identified within this period, you are eligible for a free repair or replacement service.

Customer Support: For any questions, concerns, or warranty claims, please contact our customer support team. We aim to respond to all inquiries within 24 hours.

Contact information is typically provided by the seller at the point of purchase or on their official website.

© 2026 ARSSLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question