

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VOUNOT](#) /

> [VOUNOT 3x6m Folding Garden Gazebo Instruction Manual](#)

VOUNOT 9221776933213

VOUNOT 3x6m Folding Garden Gazebo Instruction Manual

Model: 9221776933213

IMPORTANT SAFETY WARNINGS

Please read these safety instructions carefully before assembly and use to prevent injury and damage to the product.

- Ensure the gazebo is securely anchored using all provided accessories, considering wind resistance.
- Exercise caution with sharp steel edges during assembly and disassembly.
- Be aware of UV protection and fire safety considerations when using the gazebo.
- Do not use in extreme weather conditions such as heavy winds, storms, or heavy snowfall.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly.

Cadre de tente
Tent frame
Zeltrahmen




Sacs de tente
Tent bag
Zelttasche



Bâche
Canopy
Überdachung



Panneaux de fenêtre / Window panel / Fensterplatte x4

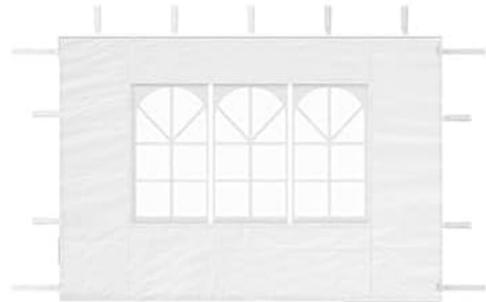

Sac de sable / Sand bag / Sandsack x6



Piquets de fixation / Ground stakes / Fixieren von Heringen x12
Piquets spirales / Spirals stakes / Spiralförmige Pfähle x4
3.2M Cordes / 3.2M Rope / 3.2M Seile x4



Panneau de porte / Door panel / Türplatte X2



Image: Detailed view of all components included in the package, such as the folding frame, canopy, side walls, and anchoring accessories.

1x Garden Gazebo (Folding Frame and Canopy)

1x Transport Bag

1x Instruction Manual (this document)

12x L-shaped Ground Stakes

4x Spiral Ground Stakes

6x Sandbags

4x Ropes (3.2m each)

4x Window Panels

2x Door Panels with zippers

SETUP AND ASSEMBLY

This gazebo features a foldable frame designed for quick and tool-free installation. It is recommended that at least two people assist with assembly for ease and safety.

Step 1: Unpacking and Initial Frame Expansion

Remove the gazebo frame and canopy from the transport bag. Place the folded frame in the desired location. With a partner, gently pull the opposing corners of the frame outwards to begin expanding it.



Image: Illustration of the frame expansion process and the push-and-lift mechanism for adjusting leg height.

Step 2: Attaching the Canopy

Once the frame is partially expanded, drape the canopy fabric over the top. Secure the canopy to the frame corners and edges using the integrated fasteners (e.g., Velcro straps or ties).

Step 3: Full Frame Extension and Height Adjustment

Continue to expand the frame until it is fully open. Extend each leg to the desired height by pressing the red button and sliding the inner leg section upwards until it clicks into place. There are three adjustable height levels: 295 cm, 305 cm, and 315 cm.

- **Height Adjustment:** Push the red button on each leg and lift to adjust.
- **Powder Coated Steel Frame:** Ensures durability and resistance.



Image: Details of the height adjustment mechanism and other features.

Step 4: Attaching Side Walls (Optional)

The gazebo includes four window panels and two door panels with zippers. Attach these to the frame using the provided fasteners (e.g., Velcro or hooks) to create an enclosed space. The door panels allow for easy access.

Step 5: Anchoring the Gazebo

For maximum stability, especially in windy conditions, securely anchor the gazebo using all provided accessories:

- **Ground Stakes:** Use the 12 L-shaped stakes and 4 spiral stakes to secure the gazebo legs and ropes to the ground.
- **Ropes:** Attach the 4 ropes to the canopy corners and secure them with the spiral stakes.
- **Sandbags:** Fill the 6 sandbags with sand or other heavy material and attach them to the gazebo legs for additional weight and stability.



Image: Visual guide to anchoring points and accessories for enhanced stability.

OPERATING AND USAGE

The VOUNOT 3x6m Folding Garden Gazebo is designed for various outdoor events and provides protection from sun and moderate rain.

Weather Protection

- **UV Protection:** The canopy fabric offers UV50+ protection, blocking harmful UV rays.
- **Water Resistance:** The high-quality waterproof fabric is suitable for moderate rain (up to 8mm/h). It is not designed for heavy downpours or prolonged exposure to severe weather.



Image: Visual representation of the gazebo's UV blocking and water-resistant properties.

Configuration Options

- **Open Configuration:** Use without side walls for an open-air shelter.
- **Enclosed Configuration:** Attach the window and door panels to create a more enclosed space, ideal for privacy or protection from light wind.
- **Door Panels:** The two door panels feature zippers for easy entry and exit.



Image: Examples of the gazebo in use for different events and purposes.



Image: The gazebo used in both summer and winter settings.

MAINTENANCE

- **Cleaning:** Clean the canopy and side walls with a mild soap solution and water. Do not use harsh chemicals or abrasive cleaners. Allow all fabric components to dry completely before storage to prevent mold and mildew.
- **Frame Care:** Inspect the steel frame periodically for any signs of rust or damage. Clean any dirt or debris from the frame.
- **Storage:** When not in use, disassemble the gazebo and store all components in the provided transport bag in a dry, cool place, away from direct sunlight.
- **Inspection:** Before each use, inspect all parts for wear and tear, especially ropes, stakes, and fabric integrity. Replace any damaged parts immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or sways in light wind.	Insufficient anchoring.	Ensure all ground stakes are fully inserted and ropes are taut. Use all 6 sandbags filled with heavy material and attached to the legs. Do not use in winds exceeding 45 km/h.
Water pooling on the canopy.	Canopy not taut enough or heavy rain.	Adjust the frame height to ensure the canopy is stretched tightly. The gazebo is designed for moderate rain; disassemble in heavy rain to prevent damage.
Difficulty expanding or collapsing the frame.	Frame joints are stiff or misaligned.	Ensure all locking mechanisms are disengaged. Apply a silicone-based lubricant to joints if necessary. Ensure at least two people are assisting.
Side walls do not fit properly.	Incorrect attachment or frame not fully extended.	Verify the frame is fully extended and locked at the correct height. Re-attach side walls, ensuring all fasteners are properly aligned and secured.

SPECIFICATIONS

Feature	Detail
Model Number	9221776933213
Brand	VOUNOT
Dimensions (L x W x H)	600 x 300 x 315 cm (max height)
Adjustable Height Levels	295 cm, 305 cm, 315 cm
Weight	28.6 Kilograms
Material	Alloy Steel (frame), Polyester (canopy and walls)
Color	White (for this variant)
Water Resistance Level	Waterproof (suitable for moderate rain)
UV Protection	UV50+ Anti-UV
Recommended Uses	Receptions, weddings, family parties, outdoor markets
Country of Origin	China



Image: Dimensional drawing of the gazebo and its packed size.

WARRANTY AND SUPPORT

Specific warranty information for the VOUNOT 3x6m Folding Garden Gazebo is not provided in the product data. For warranty details, support, or to inquire about replacement parts, please contact VOUNOT customer service directly or refer to your purchase documentation.

Always retain your proof of purchase for any warranty claims.