

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [NOUGAT](#) /

> [NOUGAT MF02 Rechargeable Handheld Milk Frother Instruction Manual](#)

## NOUGAT MF02

# NOUGAT MF02 Rechargeable Handheld Milk Frother Instruction Manual

Model: MF02

## INTRODUCTION

---

Thank you for choosing the NOUGAT MF02 Rechargeable Handheld Milk Frother. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read it thoroughly before first use and keep it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using the appliance.
- Keep the appliance out of reach of children.
- Do not immerse the main body of the frother in water. The whisk head is waterproof for cleaning, but the handle should not be submerged.
- Use only the provided USB cable for charging.
- Do not operate the frother if it has been damaged in any way. Contact customer service for assistance.
- Avoid touching moving parts during operation.
- This appliance is intended for household use only.

## PACKAGE CONTENTS

---

Please check the package for the following items:

- NOUGAT MF02 Handheld Milk Frother (Main Unit)
- Milk Frothing Whisk Head
- Egg Beater Whisk Head
- USB Charging Cable
- Wall-Mounted Stand
- Instruction Manual (this document)

# Replaceable Multi-function Stirrer



Image: The NOUGAT MF02 handheld frother, shown with two different whisk attachments (a frothing whisk and an egg beater whisk) and its accompanying metal stand for storage.

## SETUP

### 1. Initial Charging

Before first use, fully charge the frother. Connect the USB charging cable to the charging port on the frother and to a suitable USB power source (e.g., computer, wall adapter). The charging indicator light will illuminate during charging.



Image: The NOUGAT MF02 frother with its USB charging port visible, connected to a charging cable, indicating its rechargeable design.

## 2. Attaching the Whisk Head

Select the desired whisk head (milk frothing or egg beater). Align the whisk head with the connector on the frother's main unit and push firmly until it clicks into place. Ensure it is securely attached before use.

# Detachable Handheld Milk Frother

Coming with 2 whisks, it's convenient to replace it.



FIGURE 1



FIGURE 2



FIGURE 3



Image: A visual guide demonstrating the simple process of attaching and detaching the whisk heads from the frother's main body.

## 3. Stand Installation (Optional)

The frother comes with a stand for convenient storage. You can place the frother in the stand on a countertop or use the wall-mounted bracket to hang it, saving space and keeping it dry.

## OPERATING INSTRUCTIONS

---

### 1. Power On and Speed Selection

Press the power button to turn on the frother. The MF02 features three speed settings: Low, Medium, and High. Press the corresponding speed button (Low, Mid, High) to select your desired speed. The selected speed will be indicated by an illuminated light.

# Rechargeable 3-Speed Handheld Milk Frother



Rechargeable



3-Speed



Image: The NOUGAT MF02 frother highlighting its rechargeable feature and three distinct speed settings (Low, Mid, High) for versatile use.

## 2. Frothing Milk

1. Pour cold or warm milk into a cup or pitcher. For best results, fill the container no more than one-third full to allow space for foam.
2. Insert the frothing whisk head into the milk, ensuring it is submerged but not touching the bottom.
3. Press the desired speed button (Low, Mid, or High). Start with a lower speed and gradually increase if needed.
4. Move the frother up and down gently to create foam. Frothing typically takes 15-30 seconds.
5. Once desired foam consistency is achieved, turn off the frother by pressing the power button or the currently active speed button.

# Low Decibel



High quality motor



Less noise



Image: The NOUGAT MF02 frother actively frothing milk, demonstrating its quiet operation and effectiveness in creating foam.

### 3. Mixing Other Beverages

The NOUGAT MF02 can also be used to mix various hot and cold beverages, including protein shakes, matcha lattes, and powdered drinks. Follow the same steps as frothing milk, adjusting the speed and duration as needed for your specific beverage.

# Perfect for All Beverages



Image: An assortment of coffee and mixed drinks, illustrating the wide range of beverages that can be prepared using the NOUGAT MF02 frother.

## CARE AND MAINTENANCE

---

### 1. Cleaning the Whisk Head

After each use, clean the whisk head immediately. Place the whisk head into running water or a glass of water and briefly turn on the frother to clean it quickly. The whisk head is waterproof (IPX6 rated). Ensure no water enters the main body of the frother.

# Waterproof Design

Place the whicks into water and press button to clean it quickly.



Image: The whisk head of the NOUGAT MF02 frother being cleaned in water, highlighting its IPX6 waterproof rating for convenient rinsing.

## 2. Cleaning the Main Unit

Wipe the main unit with a damp cloth. Do not immerse the main unit in water or other liquids. Ensure the unit is completely dry before storing or recharging.

## 3. Storage

Store the frother in its stand on a countertop or use the wall-mounted bracket to keep it dry and easily accessible. Store in a cool, dry place away from direct sunlight.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Frother does not turn on.	Battery is low or depleted.	Charge the frother using the provided USB cable.
Whisk head is not spinning or spinning slowly.	Whisk head not properly attached or obstructed.	Ensure the whisk head is securely attached. Check for any obstructions and clean if necessary.
Frother produces insufficient foam.	Milk type or temperature not ideal; insufficient frothing time.	Use cold, fresh milk for best results. Ensure the frother is operated for sufficient time (15-30 seconds) and moved gently up and down.
Frother overheats or malfunctions.	Prolonged use or internal issue.	Immediately turn off the device and disconnect from power. Allow it to cool down. If the issue persists, discontinue use and contact customer support.

If you encounter any issues not listed here or if the problem persists after attempting the solutions, please contact NOUGAT customer service for further assistance.

## SPECIFICATIONS

<b>Brand</b>	NOUGAT
<b>Model Name</b>	MF02
<b>Color</b>	White
<b>Material</b>	Plastic (Main Unit), Stainless Steel (Whisk Head)
<b>Special Feature</b>	Rechargeable
<b>Power Source</b>	Battery Powered (1 Lithium Ion battery included)
<b>Motor Speed</b>	Up to 13000 RPM (3-speed settings)
<b>Noise Level</b>	Below 70dB
<b>Included Components</b>	Battery, Mixers (Whisk Heads), USB Cable, Stand
<b>Product Dimensions</b>	1 x 1 x 11.5 inches
<b>Item Weight</b>	0.25 Kilograms (8.8 ounces)
<b>Product Care Instructions</b>	Hand Wash Only (Whisk Head is waterproof, main unit wipe clean)
<b>UPC</b>	787996601977

## WARRANTY AND SUPPORT

### Warranty Information

The NOUGAT MF02 Rechargeable Handheld Milk Frother comes with a **2-YEAR MANUFACTURER'S WARRANTY**. This warranty covers free replacement or refund for any manufacturing defects. Please retain your proof of purchase for warranty claims.

## Customer Support

For any questions, concerns, or assistance with your product, please contact our customer service team. We offer **7x24 friendly customer service** to ensure your satisfaction.

Contact details (placeholder, as none provided in JSON):

- Email: [support@nougat.com](mailto:support@nougat.com)
- Website: [www.nougat.com/support](http://www.nougat.com/support)

