

IBELL SM3010M

iBELL Sm3010M 3-in-1 Sandwich Maker

INSTRUCTION MANUAL

Introduction and Safety Information

Thank you for purchasing the iBELL Sm3010M 3-in-1 Sandwich Maker. This appliance is designed for preparing sandwiches, waffles, and grilled items efficiently. Please read this instruction manual carefully before using the appliance to ensure safe operation and optimal performance. Keep this manual for future reference.

Important Safety Precautions:

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.

Product Overview

The iBELL Sm3010M is a versatile 3-in-1 appliance featuring interchangeable plates for various cooking needs. It operates at 1300 Watts for fast and even cooking and includes automatic temperature control.

Key Components:

- Main Unit with Handle Locking Function
- Interchangeable Non-Stick Plates:

- Sandwich Plates (for sealed sandwiches)
- Waffle Plates (for waffles)
- Grill Plates (for grilling various foods)
- Power Indicator Light
- Ready Indicator Light
- Plate Release Buttons

Product Features:

- **High Power:** 1300 Watts for rapid heating and efficient cooking.
- **Automatic Temperature Control:** Maintains optimal cooking temperature.
- **Detachable Non-Stick Plates:** Easy to change and clean.
- **Shock Proof ABS Body:** Durable and safe construction.
- **Handle Locking Function:** Secures the appliance during cooking.
- **Large Size:** Accommodates big sandwich breads (28.5 x 25 x 10 cm).

HIGH POWER CAPACITY

1300 W

Fast and Even Cooking



Image: The iBELL Sm3010M Sandwich Maker main unit, showcasing its sleek design and power indicator lights.



3 in 1 SANDWICH MAKER

Toast



Waffle



Grill



Image: The iBELL Sm3010M Sandwich Maker displayed with its three sets of interchangeable plates: sandwich, waffle, and grill.



**Just Press button
& Change grill plates**



Image: A close-up view of the plate release button on the iBELL Sm3010M Sandwich Maker, indicating how to change plates.



**Handle Locking
Function**

**1300 W
POWER**

Image: The handle locking mechanism of the iBELL Sm3010M Sandwich Maker, ensuring secure closure during operation.



Image: A diagram illustrating the dimensions of the iBELL Sm3010M Sandwich Maker: 28.5 cm length, 25 cm width, and 10 cm height.

Setup

Unpacking:

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any protective films or stickers from the appliance and plates.
3. Retain packaging for storage or disposal according to local regulations.

Initial Cleaning:

1. Before first use, wipe the non-stick cooking plates with a damp cloth or sponge.
2. Wipe the exterior of the appliance with a soft, damp cloth.
3. Dry all parts thoroughly.

Installing/Changing Plates:

1. Ensure the appliance is unplugged and cool.
2. To remove plates, locate the plate release buttons on the side of the appliance. Press the buttons firmly and lift the plates out.
3. To install plates, align the plate's tabs with the slots in the appliance. Gently press the plate down until it clicks into place. Ensure both plates are securely fastened.
4. Always install both upper and lower plates of the same type (e.g., both sandwich plates).

Operating Instructions

Always ensure the correct plates are installed for your desired cooking method.

General Operation:

1. Plug the appliance into a suitable power outlet. The red power indicator light will illuminate, indicating the appliance is receiving power.
2. Allow the appliance to preheat with the lid closed. The green 'ready' indicator light will illuminate when the desired cooking temperature is reached. This typically takes 3-5 minutes.
3. Lightly grease the cooking plates with a small amount of cooking oil or butter, especially for the first use or if food tends to stick.
4. Place your food onto the lower cooking plate.
5. Close the lid and engage the handle locking function.
6. Cook for the recommended time or until desired browning is achieved. The green 'ready' light may cycle on and off during cooking as the automatic temperature control maintains heat.
7. Once cooking is complete, carefully open the lid using the handle. Use a heat-resistant plastic or wooden utensil to remove the food. Do not use metal utensils, as they can damage the non-stick coating.
8. Unplug the appliance from the power outlet after use.

Specific Plate Usage:

- **Sandwich Plates:** Ideal for making sealed sandwiches. Place bread with filling on the lower plate. Close the lid. Cooking time typically 3-6 minutes, depending on desired crispness and filling.
- **Waffle Plates:** For preparing waffles. Pour waffle batter onto the lower plate, ensuring not to overfill. Close the lid. Cooking time typically 5-8 minutes, or until golden brown.
- **Grill Plates:** Suitable for grilling vegetables, paneer, chicken, or other items. Place food evenly on the lower plate. Close the lid. Cooking time varies based on food type and thickness.

Maintenance and Cleaning

Proper cleaning and maintenance will extend the life of your iBELL Sm3010M Sandwich Maker.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cleaning the Plates:** Press the plate release buttons to detach the cooking plates. Wash the plates in warm, soapy water using a soft sponge or cloth. The plates are dishwasher safe. Rinse thoroughly and dry completely before reattaching or storing.
3. **Cleaning the Exterior:** Wipe the exterior surfaces of the appliance with a soft, damp cloth. Do not use abrasive

cleaners or scouring pads, as they may damage the finish.

- 4. Never immerse the main unit of the appliance in water or any other liquid.
- 5. For stubborn residue on plates, soak them in warm soapy water for a few minutes before cleaning.
- 6. Ensure all parts are dry before storing the appliance.

Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food sticks to the plates.	Plates not sufficiently greased; residue from previous use.	Lightly grease plates before each use. Ensure plates are thoroughly cleaned after each use.
Food is not cooking evenly.	Appliance not fully preheated; uneven food distribution.	Wait for the green 'ready' light to illuminate before placing food. Distribute food evenly across the plates.
Green 'ready' light does not illuminate.	Appliance not reaching temperature; sensor issue.	Ensure the appliance is plugged in and powered on. If the issue persists after several minutes, contact customer support.

Specifications

- **Model Number:** IBL SM 3010EZ (UK-SM3010)
- **Brand:** IBELL
- **Power:** 1300 Watts
- **Voltage:** Standard household voltage (check product label for specific rating)
- **Dimensions (L x W x H):** 28.5 x 25 x 10 cm
- **Weight:** 3.4 Kilograms
- **Material:** Metal Plates and Premium Plastic Body
- **Special Features:** Automatic Temperature Control, Non-Stick Coating, Removable Plates, Handle Locking Function
- **Included Components:** 1 Main Unit, 3 Sets of Plates (Sandwich, Waffle, Grill)

Warranty Information

The iBELL Sm3010M Sandwich Maker comes with a**1-year standard warranty**. An additional **1-year warranty** can be obtained upon product registration. Registration must be completed within 30 days from the date of purchase to avail the extended warranty.

Please retain your purchase receipt as proof of purchase for warranty claims.

Customer Support

For any queries, assistance, or warranty claims regarding your iBELL Sm3010M Sandwich Maker, please contact our customer support team:

- **Toll-Free Number:** 1800 2020 260
- **Email:** connect@ibellstore.com
- **Manufacturer Address:** Innovative Technologies, Fida's Building, Thottumugham P.O, Aluva, Kerala - 683105

© 2026 IBELL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question