

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Princess](#) /

› [Princess 332890 Foldable Garment Steamer and Lint Remover Instruction Manual](#)

## Princess 332890

# Princess 332890 Foldable Garment Steamer and Lint Remover Instruction Manual

## INTRODUCTION

---

Thank you for choosing the Princess 332890 Foldable Garment Steamer and Lint Remover. This 2-in-1 device is designed to provide efficient and hygienic garment care, combining powerful steam for wrinkle removal with a built-in lint remover. Its compact and portable design makes it ideal for both home use and travel. Please read this manual carefully before first use to ensure safe and optimal operation.

## Important Safety Instructions

- Always ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Never direct steam towards people, pets, or electrical appliances. Steam is hot and can cause burns.
- Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the appliance.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been dropped.
- Allow the appliance to cool completely before storing.

## PRODUCT OVERVIEW

---

The Princess 332890 is a versatile garment care tool, featuring a foldable design for easy storage and portability. It combines a powerful steam function with an integrated lint remover for comprehensive fabric maintenance.



Figure 1: Front view of the Princess 332890 Foldable Garment Steamer, showing the steam head and handle.



Figure 2: The Princess 332890 Garment Steamer in its folded, compact position, ideal for travel or storage.

## Key Features:

- **Compact and Portable Design:** The foldable handle allows for easy storage and transport, making it perfect for travel.
- **Powerful 1300W Performance:** Delivers robust steam to effectively remove wrinkles and creases from various fabrics.
- **2-in-1 Functionality:** Combines a garment steamer with an integrated lint remover for complete fabric care.
- **Rapid Heat-up:** Ready to use in approximately 30 seconds, saving you time.
- **Hygienic Garment Care:** Eliminates up to 99% of bacteria and dust mites, ensuring your clothes are fresh and clean.
- **Automatic Shut-off:** For enhanced safety, the device automatically turns off when the water level is low or if it overheats.
- **Continuous Steam:** The removable water tank allows for easy refilling during use, providing uninterrupted steaming sessions.

## SETUP

---

1. **Unpack the Steamer:** Carefully remove all packaging materials and ensure all components are present.
2. **Unfold the Handle:** Gently unfold the handle until it locks into place. You may hear a click.
3. **Fill the Water Tank:**
  - Locate the removable water tank, usually at the base of the handle.
  - Remove the tank and open its cap.
  - Fill the tank with distilled or demineralized water up to the MAX fill line. Do not overfill.
  - Close the cap securely and reinsert the water tank into the steamer until it clicks into place.
4. **Position the Garment:** Hang the garment you wish to steam on a hanger. Ensure there is enough space around the garment for steam to circulate.

# OPERATING INSTRUCTIONS

---

## Steaming Garments:

1. **Connect to Power:** Plug the steamer into a suitable electrical outlet. The indicator light will illuminate, signaling that the device is heating up.
2. **Wait for Heat-up:** The steamer will heat up in approximately 30 seconds. The indicator light may change color or turn off when ready for use, depending on the model.
3. **Start Steaming:** Hold the steamer upright and press the steam trigger/button. Direct the steam nozzle towards the garment, keeping it a few inches away from the fabric.
4. **Steam Technique:** Move the steamer slowly over the fabric, from top to bottom. For stubborn wrinkles, gently pull the fabric taut with your free hand.
5. **Continuous Steam:** If your model supports continuous steam, you may be able to lock the steam trigger in the 'on' position. Refer to the device for specific button functions.
6. **Refilling During Use:** If the water tank empties during steaming, the automatic shut-off feature will activate. Unplug the device, allow it to cool slightly, refill the tank as described in the Setup section, and then reconnect to power to continue.
7. **Finish Steaming:** Once you have finished, release the steam trigger and unplug the steamer from the power outlet.

## Using the Lint Remover:

The Princess 332890 features an integrated lint remover on the steam head. This allows you to remove lint, pet hair, and small fibers from your garments while or after steaming.

1. Ensure the steamer is unplugged and cool if you are using the lint remover without steaming.
2. Gently brush the lint remover surface over the fabric in one direction to collect lint and hair.
3. Periodically clean the collected lint from the lint remover surface.

## MAINTENANCE AND CLEANING

---

Regular maintenance ensures the longevity and optimal performance of your garment steamer.

1. **After Each Use:**
  - Unplug the steamer and allow it to cool completely.
  - Empty any remaining water from the water tank.
  - Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners.
2. **Cleaning the Steam Head:** If the steam head becomes clogged or dirty, gently wipe it with a damp cloth. Do not use sharp objects to clear the steam holes.
3. **Descaling (Monthly or as needed):** Mineral deposits can build up over time, especially if tap water is used. To descale:
  - Mix a solution of 50% white vinegar and 50% distilled water.
  - Fill the water tank with this solution.
  - Plug in the steamer and allow it to heat up.
  - Steam the solution until the tank is empty (direct steam into a sink or bucket).
  - Repeat the process with clean distilled water to rinse out any vinegar residue.

4. **Storage:** Once completely cool and dry, fold the handle for compact storage. Store the steamer in a dry place, away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or weak steam	Water tank is empty or low. Steamer not heated sufficiently. Mineral buildup.	Refill water tank. Wait 30 seconds for heat-up. Perform descaling procedure.
Water leakage from steam head	Overfilling the water tank. Steamer not fully heated. Mineral buildup.	Do not overfill the tank. Wait for the indicator light to show it's ready. Perform descaling procedure.
Steamer not turning on	Not plugged in correctly. Power outlet issue. Automatic shut-off activated.	Check power connection. Try a different outlet. Check water level and allow to cool if overheated.
Lint remover not effective	Lint remover surface is dirty.	Clean the lint and debris from the lint remover surface.

If you encounter problems not listed here, or if the issue persists after attempting the solutions, please contact customer support.

## SPECIFICATIONS

<b>Model Number</b>	332890 (01.332890.01.001)
<b>Brand</b>	Princess
<b>Power</b>	1300 Watts
<b>Voltage</b>	230 Volts
<b>Heat-up Time</b>	30 Seconds
<b>Water Tank Capacity</b>	100 Milliliters
<b>Product Dimensions (L x W x H)</b>	17.4 x 7.5 x 22.2 cm
<b>Product Weight</b>	800 grams
<b>Color</b>	Anthracite

## WARRANTY AND SUPPORT

This Princess 332890 Garment Steamer comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

Spare parts availability for this product is typically 1 year from the date of purchase.

For technical support, service, or warranty claims, please contact your retailer or the Princess customer service department. Contact information can usually be found on the manufacturer's official website or on the product packaging.