Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Scheppach /
- > Scheppach ETHT1000 Electric Telescopic Hedge Trimmer User Manual

Scheppach ETHT1000

Scheppach ETHT1000 Electric Telescopic Hedge Trimmer User Manual

Model: ETHT1000

1. Introduction

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Scheppach ETHT1000 Electric Telescopic Hedge Trimmer. Please read this manual thoroughly before first use and keep it for future reference.

The Scheppach ETHT1000 is a powerful electric telescopic hedge trimmer designed for cutting tall bushes, hedges, and shrubs. It features a 1000W motor, a 135° rotatable cutting head, and a total length of up to 2590mm.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury and damage to the tool:

- Wear appropriate personal protective equipment (PPE), including safety glasses, gloves, and sturdy footwear.
- Ensure the work area is clear of obstacles, children, and pets.
- Do not operate the hedge trimmer in wet conditions or near flammable liquids or gases.
- Always disconnect the power supply before cleaning, maintenance, or when the tool is not in use.
- Inspect the power cord for damage before each use.
- Maintain a firm grip on the tool with both hands during operation.
- · Avoid overreaching and maintain proper balance at all times.

3. Product Components and Features

Familiarize yourself with the main components of your hedge trimmer:

- Motor Unit: Houses the powerful 1000W electric motor.
- Telescopic Shaft: Extends the reach of the trimmer up to 2590mm total length.
- Cutting Head: Features a laser-cut steel blade with a 500mm blade length and 410mm maximum cutting length.
- Adjustable Cutting Head: Can be rotated 135° and adjusted in 10 steps for versatile cutting angles.

- Shoulder Strap: Provides comfort and reduces fatigue during extended use.
- Practical Strain Relief: Helps prevent accidental disconnection of the power cord.
- Quick Release Mechanism: For easy assembly and disassembly of the telescopic shaft.



Image: Overview of the Scheppach ETHT1000 Electric Telescopic Hedge Trimmer, showing the main unit, telescopic pole, cutting head, and shoulder strap. These components allow for extended reach and comfortable operation.

Schwertlänge 500 mm / Schnittlänge 410 mm

Schnittstärke 20 mm





Schnittgeschwindigkeit 1000 min⁻¹

Motorleistung 230 –240 V – 1000 W



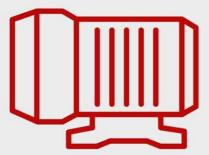


Image: Diagram illustrating key specifications of the Scheppach ETHT1000. It shows a blade length of 500mm / cutting length of 410mm, a cutting thickness of 20mm, a cutting speed of 1000 min⁻¹, and a motor power of 230-240V / 1000W.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your hedge trimmer:

- 1. Unpacking: Carefully remove all components from the packaging. Check for any damage or missing parts.
- 2. **Attaching the Cutting Head:** Align the cutting head with the telescopic shaft and secure it using the quick-release mechanism. Ensure it clicks firmly into place.
- 3. **Assembling the Telescopic Shaft:** Connect the upper and lower sections of the telescopic shaft. The quick-release mechanism allows for easy connection and disconnection for storage.
- 4. **Attaching the Shoulder Strap:** Secure the shoulder strap to the designated attachment points on the main unit. Adjust the strap length for comfortable and balanced operation.
- 5. **Power Connection:** Connect the power cord to a suitable outdoor extension cord with practical strain relief. Ensure the connection is secure.

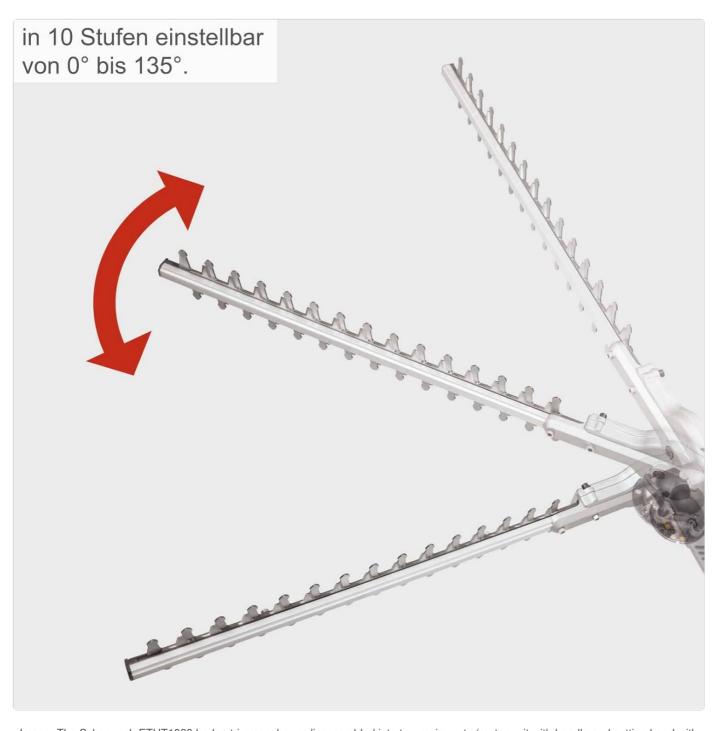


Image: The Scheppach ETHT1000 hedge trimmer shown disassembled into two main parts (motor unit with handle and cutting head with telescopic pole). This illustrates its space-saving storage capability due to the divisible shaft.

5. OPERATING INSTRUCTIONS

Before operating, ensure you have read and understood all safety instructions.

5.1. Adjusting the Telescopic Length

To adjust the length of the telescopic shaft, unlock the locking mechanism, extend or retract the shaft to the desired length, and then firmly lock it in place. The maximum total length is 2590mm.

5.2. Adjusting the Cutting Head Angle

The cutting head can be adjusted in 10 steps, rotating up to 135°. To change the angle, press the release button/lever on the cutting head joint, adjust to the desired angle, and ensure it locks securely into position before operation.



Image: The cutting head of the Scheppach ETHT1000 shown rotating from 0° to 135° in multiple steps. This feature allows for versatile trimming angles, especially useful for reaching the tops of tall hedges.

5.3. Starting and Stopping the Trimmer

- **Starting:** Ensure the tool is connected to power. Press and hold the safety switch, then squeeze the trigger switch to start the motor.
- Stopping: Release the trigger switch to stop the motor. Always disconnect from power after use.

5.4. Cutting Techniques

Use a smooth, sweeping motion when cutting. For optimal results, cut smaller amounts at a time rather than attempting to cut through thick branches in one pass. The maximum cutting thickness is 20mm.



Image: A collage showing the types of vegetation the Scheppach ETHT1000 is suitable for: shrubs, hedges, and bushes. This demonstrates the versatility of the tool for various garden trimming tasks.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your hedge trimmer.

6.1. Blade Care

- Cleaning: After each use, disconnect the power and clean the blades of sap and debris using a stiff brush and a suitable cleaning agent.
- **Lubrication:** Apply a light machine oil or blade lubricant to the blades regularly to prevent rust and ensure smooth operation.
- Sharpening: If the blades become dull, they can be sharpened by a qualified technician or using appropriate sharpening tools.



Image: A close-up view of the laser-cut steel blade of the Scheppach ETHT1000, highlighting its sharp edges designed for maximum cutting performance. Regular cleaning and lubrication are essential for maintaining this sharpness.

6.2. General Cleaning

Wipe down the exterior of the tool with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure no water enters the motor housing.

6.3. Storage

Store the hedge trimmer in a dry, secure location, out of reach of children. The divisible shaft allows for space-saving storage.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem Possible Cause Solution	
---------------------------------	--

Problem	Possible Cause	Solution
Trimmer does not start.	No power supply; Safety switch not engaged; Damaged cord.	Check power connection; Ensure safety switch is pressed before trigger; Inspect and replace damaged cord.
Blades not cutting effectively.	Dull blades; Debris caught in blades; Overloading.	Sharpen blades; Clean blades thoroughly; Cut smaller sections.
Excessive vibration.	Loose components; Damaged blade.	Check all connections and tighten; Inspect blade for damage and replace if necessary.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	ETHT1000
Power	1000 W
Blade Length	500 mm
Max. Cutting Length	410 mm
Max. Cutting Thickness	20 mm
Cutting Speed	1000 min ⁻¹
Adjustable Cutting Head	0° to 135° (10 steps)
Total Length (extended)	Up to 2590 mm
Weight	6.53 kg
Material	Alloy Steel

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Scheppach website. Keep your proof of purchase for any warranty claims.

Manufacturer: Scheppach Model Number: 5910510901

© 2024 Scheppach. All rights reserved.



Scheppach PMT520 Multifunctional Petrol Device Manual

This manual provides comprehensive instructions for the Scheppach PMT520 multifunctional petrol device, covering setup, operation, maintenance, and safety guidelines for various attachments including a grass trimmer, hedge trimmer, and pole pruner.



scheppach MFH5200-4P Bedienungsanleitung | Multifunktions-Gartengerät

Umfassende Bedienungsanleitung für das scheppach MFH5200-4P Multifunktions-Gartengerät. Erfahren Sie mehr über Montage, Bedienung, Wartung und Sicherheit für Ihr Gartengerät.



Scheppach C-HTGS200-X Akku-Gras- und Strauchschere Bedienungsanleitung

Umfassende Bedienungsanleitung für die Scheppach C-HTGS200-X Akku-Gras- und Strauchschere. Erfahren Sie alles über sichere Bedienung, Wartung und technische Daten für optimale Gartenergebnisse.



scheppach C-PHTS410-X Akku-Multifunktionsgerät Bedienungsanleitung

Die Originalbetriebsanleitung für das scheppach C-PHTS410-X Akku-Multifunktionsgerät. Enthält wichtige Informationen zur sicheren Verwendung, Montage, Bedienung und Wartung.



Scheppach C-PHTS410-X Cordless Multi-Function Device User Manual

Comprehensive user manual for the Scheppach C-PHTS410-X cordless multi-function device, covering safety instructions, product description, technical data, and operating guidelines for hedge trimming and pole saw functions.



Scheppach PBC526Pro Petrol Brush Cutter Operating Manual

Discover the Scheppach PBC526Pro petrol brush cutter with this comprehensive operating manual. Learn about safe operation, assembly, maintenance, and troubleshooting for your garden tool. Visit Scheppach for more.