

[Manuals.plus](#) /

› [VGR](#) /

› VGR 331 Electric Shaver User Manual

VGR VGR-331

VGR 331 Electric Shaver User Manual

Model: VGR-331

PRODUCT OVERVIEW

The VGR 331 Electric Shaver is designed for men, featuring cordless operation with dual floating blades for a smooth and precise shave. It is suitable for both facial and bald head shaving, offering a comfortable experience without skin tugging. The shaver is equipped with a USB-C rechargeable battery, providing extended runtime for daily use and travel.



Image: VGR 331 Electric Shaver with its retail packaging, highlighting its sleek design and key features.

PACKAGE CONTENTS

- VGR 331 Electric Shaver
- Replacement Foil
- Protective Cap
- USB-C Charging Cable
- Cleaning Brush
- Storage Pouch

Men's Foil Shaver



Image: An exploded view showing the shaver, its protective cap, ON/OFF switch, dual independent flexing foils, and USB charging port.

SETUP AND CHARGING

Initial Charge

Before first use, fully charge the shaver. The built-in 600mAh Ni-MH battery provides up to 50 minutes of cordless use on a full charge. A full charge typically takes approximately 8 hours.

1. Connect the provided USB-C charging cable to the shaver's charging port.
2. Plug the other end of the USB-C cable into a compatible USB power source (e.g., computer, laptop, USB wall adapter, power bank).
3. Allow the shaver to charge until the charging indicator (if present) shows a full charge.

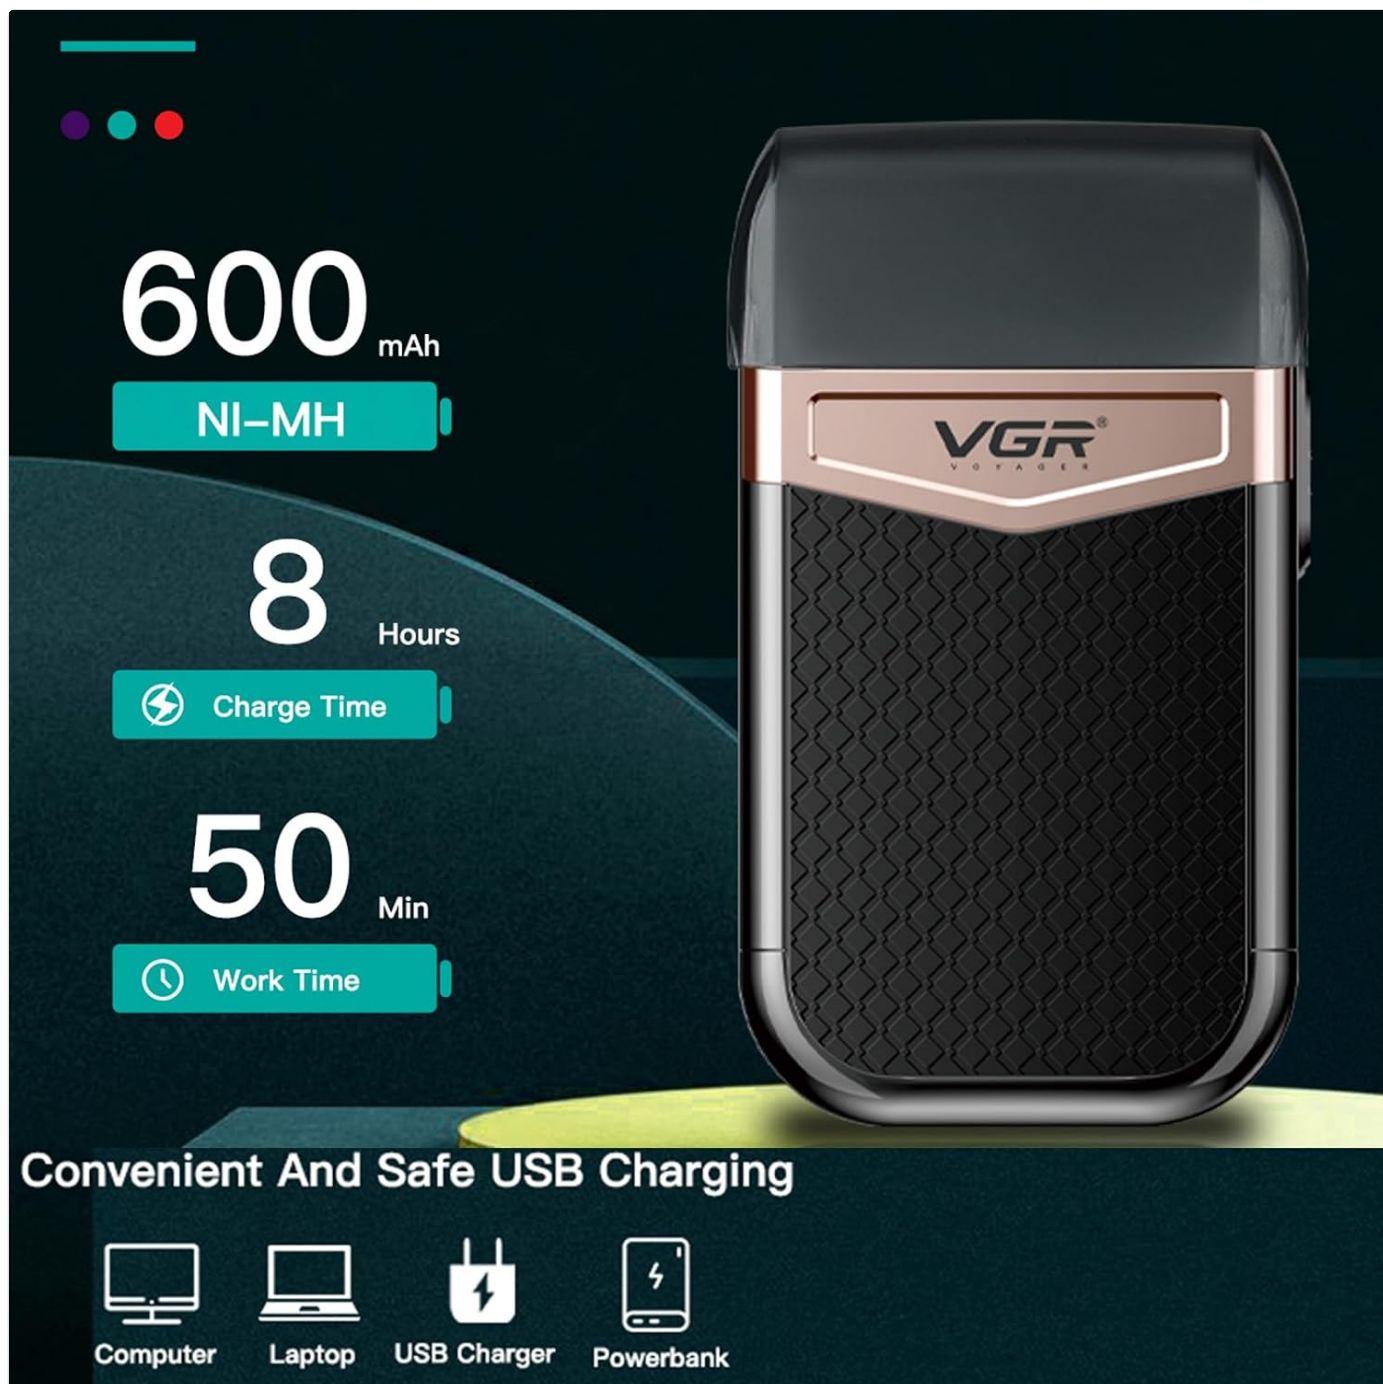


Image: Visual representation of the shaver's 600mAh battery, 8-hour charge time, and 50-minute work time, along with compatible USB charging sources.

OPERATING INSTRUCTIONS

Shaving Technique

For optimal results, ensure your skin is clean and dry before shaving. The dual floating blades are designed to adapt to the contours of your face and head.

1. Turn on the shaver using the ON/OFF switch.
2. Hold the shaver at a right angle (90 degrees) to your skin.
3. Gently stretch your skin with your free hand to make the hairs stand upright.
4. Move the shaver in short, circular motions or straight strokes against the direction of hair growth.
5. Apply light pressure; do not press too hard, as this can cause irritation.
6. For a closer shave, make multiple passes over the same area.

7. After shaving, turn off the shaver.

FLOATING SHAVING



Professional blades super cutting performance
independent floating

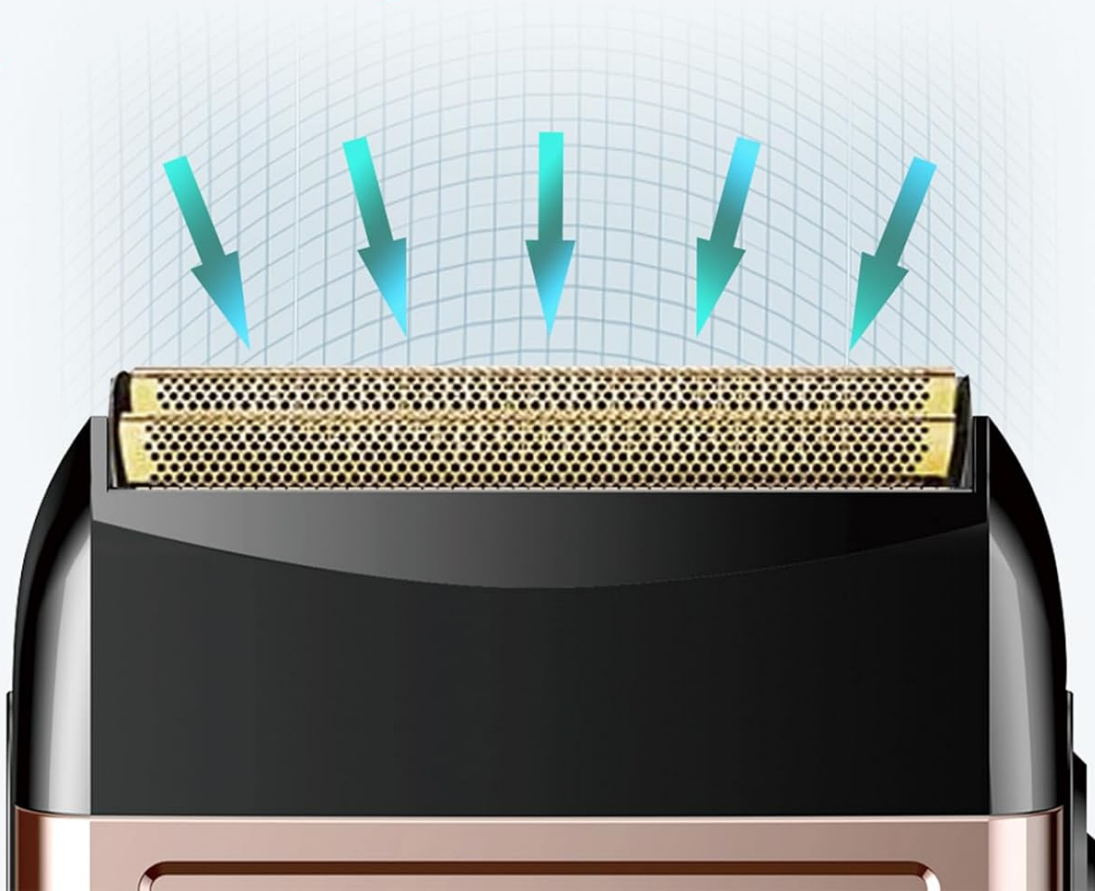


Image: Diagram illustrating the floating shaving mechanism of the VGR 331, showing how the professional blades adapt for super cutting performance.



Image: A man demonstrating the use of the VGR 331 Electric Shaver on his facial hair, showing the ergonomic design in action.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your shaver. The detachable head makes cleaning simple.

Daily Cleaning

1. After each use, turn off the shaver.
2. Remove the protective cap and the detachable blade net.
3. Use the provided cleaning brush to remove hair clippings from the foils and the shaver body.
4. Rinse the detachable blade net under running water. Ensure the shaver body does not get wet if it's not fully waterproof (refer to specifications for IPX rating).
5. Allow all parts to air dry completely before reassembling.
6. Replace the protective cap.

Replacing the Foil and Blades

The foil and blades should be replaced periodically (e.g., every 6-12 months, depending on usage) to maintain optimal shaving performance.

1. Ensure the shaver is turned off.
2. Carefully remove the old foil and blades.
3. Insert the new replacement foil and blades, ensuring they click securely into place.



Image: Close-up view of the VGR 331 shaver showing its detachable head, emphasizing the ease of cleaning.



Image: Hands demonstrating the removal and replacement of the shaver's foil and blade assembly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.
Poor shaving performance / tugging.	Blades/foil are dull or clogged with hair.	Clean the shaver thoroughly. Consider replacing the foil and blades.
Shaver stops during use.	Low battery.	Recharge the shaver.
Skin irritation after shaving.	Incorrect shaving technique or sensitive skin.	Ensure light pressure and shave against the grain. Allow skin to adapt.

SPECIFICATIONS

Model Name: VGR-331

Power Source: Battery Powered

Battery: 600mAh Ni-MH (1 CR5 battery included)
Runtime: Up to 50 minutes
Charge Time: Approximately 8 hours
Charging Interface: USB-C
Special Features: Portable, Cordless, Rechargeable, Ergonomic Design, Dual Floating Blades
Dimensions: 5.87 x 4.02 x 2.28 inches
Weight: 4.48 ounces
Manufacturer: VGR

Safety Information

Please read and understand all safety instructions before using the VGR 331 Electric Shaver.

- Always keep the shaver away from water.
- Allow the shaver to cool before storing.
- Do not use the shaver while charging.
- Keep the shaver out of reach of children and pets.
- Always use the shaver with caution to avoid cuts or skin irritation.
- Clean the shaver regularly to prevent bacterial growth.
- Always follow the manufacturer's instructions for use and care.

Warranty and Support

VGR stands behind the quality of its products. The VGR 331 Electric Shaver comes with a **1-Year Warranty** from the date of purchase.

For any questions, technical assistance, or warranty claims, please contact VGR customer support. We offer **24-hour support** to assist you.

You can find more information and contact details on the official VGR website or through your retailer's support channels.



Image: Icons representing 1 Year Warranty and 24 Hour Support, indicating VGR's commitment to customer service.