

VINABTY SG15J,SG15D

VINABTY Universal Remote Control Instruction Manual

For Mitsubishi Air Conditioners (Models SG15J, SG15D, MSZ-GE Series)

INTRODUCTION

This manual provides instructions for the VINABTY universal replacement remote control, designed for various Mitsubishi air conditioner models. This infrared remote control requires no programming or complex setup, offering a straightforward replacement for your original unit.

Key Features:

- **No Programming Required:** Ready to use out of the box.
- **Ergonomic Design:** Lightweight and comfortable to hold.
- **Durable Construction:** Made from ABS material for longevity.
- **Infrared Technology:** Provides reliable transmission up to 10 meters.





Image 1: Front view of the VINABTY Universal Remote Control. This image displays the remote's overall design, including the display screen and primary control buttons for temperature adjustment and power.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

- Slide the battery compartment cover back into place until it clicks securely.



Image 2: Rear view of the remote control with the battery compartment open, showing where to insert two AAA batteries. The protective slide cover is shown detached to the right.

2. Initial Use

Once batteries are installed, the remote is ready for immediate use. Point the remote directly at your Mitsubishi air conditioner unit and press the **OFF/ON** button to power it on or off.

OPERATING INSTRUCTIONS

The VINABTY remote control features a sliding cover that reveals additional functions. The primary buttons are always accessible.





Image 3: Full view of the VINABTY Universal Remote Control with the sliding cover retracted, revealing all operational buttons and the LCD screen.

Basic Functions (Cover Closed)

- **OFF/ON Button:** Powers the air conditioner unit on or off.
- **TEMP + / TEMP - Buttons:** Adjust the desired temperature setting upwards or downwards.

Advanced Functions (Cover Open)

Slide down the front cover to access additional control options:

- **MODE Button:** Cycles through operating modes such as Cool, Dry, Fan, and Auto. *Note: Some users have reported that the heating mode may not be available or functional on all compatible air conditioner models with this remote.*
- **FAN Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **VANE Button:** Controls the vertical airflow direction (louvers).
- **WIDE VANE Button:** Controls the horizontal airflow direction.
- **ECONO COOL Button:** Activates the energy-saving cooling mode.
- **POWERFUL Button:** Initiates rapid cooling or heating (if available).
- **i save Button:** Recalls a preferred setting.
- **TIMER ON / TIMER OFF Buttons:** Sets the time for the unit to automatically turn on or off.
- **WEEKLY TIMER ON/OFF Button:** Activates or deactivates the weekly timer schedule.
- **EDIT/SEND Button:** Used for confirming timer settings.
- **SET Button:** Confirms selections or enters setting modes.
- **CANCEL Button:** Cancels current settings or timer programs.
- **DAY Button:** Selects the day for weekly timer programming.
- **TIME Buttons (Up/Down Arrows):** Adjusts the time for timer settings.
- **CLOCK Button:** Sets the current time on the remote's display.
- **RESET Button:** Resets the remote control to factory defaults.
- **DELETE Button:** Deletes programmed timer settings.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or the display fades. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding	<ul style="list-style-type: none">• Check battery orientation and ensure they are fresh.• Ensure there are no obstructions between the remote and the air conditioner unit.• Verify the remote is within the operating range (up to 10 meters).
Air conditioner does not respond to heating mode commands	Some users have reported that this universal remote may not fully support the heating function on all Mitsubishi air conditioner models, even if the original remote did. This remote is primarily designed for cooling functions. If heating is critical, verify compatibility with the manufacturer or consider using the original remote if available.
Display is dim or blank	Batteries are low or depleted. Replace with new AAA batteries.

SPECIFICATIONS

- **Brand:** VINABTY
- **Model Numbers:** SG15J, SG15D
- **Compatible Devices:** Mitsubishi Air Conditioners (various models including MSZ-GE series)
- **Connectivity Technology:** Infrared
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Maximum Range:** 10 meters
- **Number of Buttons:** 15 (visible and under cover)
- **Power Source:** 2 x AAA Batteries (not included)

Compatible Air Conditioner Models:

SG15J, SG15D, MSZ-GE60VA, MSZ-GE71VA, MSZ-GE60VAD, MSZ-GE60VAD-A1, MSZ-GE80VAD, MSZ-GE71VAD, MSZ-GE50VA-A1, MSZ-GE50VAD-A1, MSZ-GE25VAD-A1, MSZ-GE60VA-A1, MSZ-GE22VAD-A1, MSZ-GE35VAD-A1, MSZ-GE80VA-A1, MSZ-GE42VA-A1, MSZ-GE80VA2-A1, MSZ-GE42VAD-A1, MSZ-GE80VAD-A1, MSZ-GE60EA A1/MUZ-GE60EA A1, MSZGE60VA, MSZGE80VA2-A1, MSZGE80VA-A1, MUZGE60VA-A1, E22F28083, MSZ-GE50VA2-A1, MSZ-GE33VA-A1, MSZ-GE25VA-A1, MSZ-GE35VA-A1, MSZ-GE71VA-A1, MSZ-GE35VA2-A1, MSZ-GE71VAD-A1.

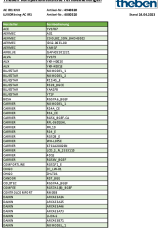 
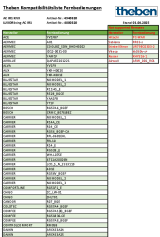 

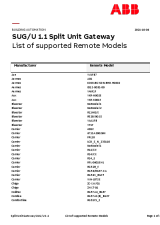 
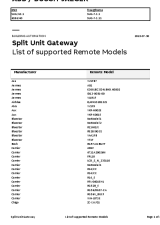 
SUPPORT

If you encounter any issues or have questions regarding the compatibility or functionality of your VINABTY remote control, please contact the seller or manufacturer for assistance. They aim to provide a satisfactory solution within

24 hours.

Note: Specific warranty information is not provided in the product details. Please refer to your purchase documentation or contact the seller for warranty details.

Related Documents - SG15J,SG15D

	<p>Theben Remote Control Compatibility List</p> <p>A comprehensive compatibility list of remote controls for various manufacturers, compatible with Theben AC IR1 KNX and LUXORliving AC IR1 systems. This list details manufacturers and their corresponding remote control model numbers.</p>
	<p>Theben Remote Control Compatibility List</p> <p>A comprehensive list of compatible and unsupported remote controls for Theben devices, organized by manufacturer and remote model. Includes article numbers and status date.</p>
	<p>Roku Remote Button Customization: Options and Guides</p> <p>Explore how to change or customize Roku remote buttons, including third-party remote options, compatibility with various Roku models, and alternatives for enhanced usability.</p>
	<p>ABB SUG/U 1.1 Split Unit Gateway Supported Remote Models</p> <p>Comprehensive list of remote control models supported by the ABB SUG/U 1.1 Split Unit Gateway, detailing compatible models from various manufacturers.</p>
	<p>ABB Busch-Jaeger Split Unit Gateway Supported Remote Models List</p> <p>Comprehensive list of remote models supported by the ABB Busch-Jaeger Split Unit Gateway, including manufacturer and remote model compatibility. This document details compatible remote controls for building automation systems.</p>

