

Easytry22910

Generic Remote Control Instruction Manual

For Sharp LC-19SH7E, LC-26SH7E, LC-42SH7E Series TVs and compatible models

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your new Generic replacement remote control. This remote is designed to be compatible with various Sharp TV models, including LC-19SH7E, LC-26SH7E, LC-42SH7E, LC-19SH7E-BK, LC-26SB25E, LC-26SB25S, LC-26SB25RU, LC-32SB25E, LC-32SB25S, and LC-32SB25RU. Please ensure your original remote matches the appearance of this replacement for full compatibility.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery cover removed, revealing the battery compartment. Two AAA battery slots are visible with polarity markings.



Image: An angled view of the back of the remote control, showing the battery compartment open and ready for battery insertion.

2. Initial Use

This remote control is an infrared (IR) replacement and typically requires no programming. Once batteries are installed, point the remote directly at your Sharp TV and begin operation.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. The layout is designed for intuitive use with compatible Sharp TV models.



Image: Front view of the remote control, displaying all buttons including power, number pad, channel, volume, menu, and navigation controls.



Image: An angled front view of the remote control, providing a clear perspective of the button layout and ergonomic design.

Key Functions:

- **POWER:** Turns the TV on or off.
- **VIDEO / COMP / PC/HDMI / TV:** Selects input sources.
- **0-9:** Number buttons for direct channel selection.
- **CH +/-:** Changes channels up or down.
- **VOL +/-:** Adjusts volume up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **MENU:** Accesses the TV's main menu.
- **DISPLAY:** Shows on-screen information.
- **EXIT:** Exits the current menu or function.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Used to navigate menus and confirm selections.
- **SLEEP:** Sets the TV sleep timer.
- **FREEZE:** Freezes the current image on screen.
- **MTS/SAP:** Selects audio modes.
- **WIDE:** Adjusts screen aspect ratio.
- **FAV:** Accesses favorite channels.
- **SOURCE:** Cycles through input sources.
- **EPG:** Electronic Program Guide (if supported by TV).
- **Y-CHIP / VIDEO ADJ / AUDIO ADJ / CC:** Advanced picture, sound, and closed caption controls.

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the remote control or exposing it to excessive force, as this can damage internal circuitry.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following troubleshooting tips:

- **Remote not responding:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm that the remote control is pointed directly at the TV.
- **Some functions not working:**
 - This replacement remote may not support all advanced functions of your original TV remote. Refer to your TV's original manual for specific function compatibility.
 - Verify that your TV model is listed as compatible. If your model is not listed, some functions may not work as expected.
- **Intermittent operation:**
 - Weak batteries can cause intermittent operation. Replace them.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

SPECIFICATIONS

Model Number	Easytry22910
Brand	Generic
Connectivity Technology	Infrared (IR)
Compatible Devices	Sharp Plasma, LCD, LED HDTV TVs (Specific models: LC-19SH7E, LC-26SH7E, LC-42SH7E, LC-19SH7E-BK, LC-26SB25E, LC-26SB25S, LC-26SB25RU, LC-32SB25E, LC-32SB25S, LC-32SB25RU)

Power Source	2 x AAA Batteries (not included)
Maximum Range	8 Meters
Color	Black

WARRANTY INFORMATION

This product comes with a 90-day warranty from the date of purchase. This warranty covers manufacturing defects. For warranty claims or issues, please contact your retailer or the manufacturer, Easytry.

SUPPORT

For further assistance or inquiries regarding your remote control, please contact the seller or manufacturer. When contacting support, please provide your product model number (Easytry22910) and details of the issue.
Manufacturer: Easytry