

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [IBELL](#) /

› [iBELL SM1700G Sandwich Maker Instruction Manual](#)

IBELL SM1700G

iBELL SM1700G Sandwich Maker Instruction Manual

Model: SM1700G | Brand: IBELL

1. INTRODUCTION

Thank you for purchasing the iBELL SM1700G Sandwich Maker. This manual provides important information for the safe and efficient operation of your appliance. Please read these instructions carefully before use and retain them for future reference.

Important Safety Instructions

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use the appliance for other than intended use.

2. PRODUCT OVERVIEW

The iBELL SM1700G Sandwich Maker is designed for versatile grilling and toasting. It features a floating hinge system and 180-degree openable plates for various cooking needs.

Key Components

- **Floating Hinges:** Automatically adjust to the thickness of food items.
- **180 Degree Openable Plates:** Allows the appliance to lay flat for use as an open grill.
- **Temperature Control Knob:** Adjusts the heating temperature.
- **Non-Stick Grill Plates:** For easy food release and cleaning.
- **Handle:** For safe opening and closing.
- **Drip Tray:** Collects excess fats and oils.
- **Lid-Lock:** Secures the plates when closed or for storage.



Image: The iBELL SM1700G Sandwich Maker showcasing its floating hinge system, handle, drip tray, and 1700W power rating.

180 degree Fully Openable Plates

Perfect for grilling Barbeque , Patties and many more



Image: The sandwich maker with its plates fully opened to 180 degrees, demonstrating its use as a grill for items like patties and skewers.



Lid-Lock



Image: A detailed view of the Lid-Lock mechanism, showing its 'Open' and 'Lock' positions.

3. SETUP

Unpacking

1. Carefully remove the sandwich maker and all packaging materials from the box.
2. Remove any promotional stickers or labels.
3. Retain the packaging for storage or if the product needs to be returned.

Initial Cleaning

1. Wipe the grill plates with a damp cloth or sponge.
2. Dry thoroughly with a soft cloth.
3. Wipe the exterior of the appliance with a damp cloth. Do not immerse the appliance in water.

First Use

1. Place the sandwich maker on a stable, heat-resistant surface.

2. Plug the appliance into a 220V AC power outlet. The indicator light will illuminate.
3. Set the temperature control knob to the desired setting. Allow the appliance to preheat for approximately 5-10 minutes until the ready indicator light illuminates (if applicable). During the first use, a slight odor or smoke may be emitted as manufacturing residues burn off. This is normal and will dissipate.
4. Unplug the appliance and allow it to cool completely before wiping the plates again.

4. OPERATING INSTRUCTIONS

Making Sandwiches/Paninis

1. Ensure the appliance is clean and plugged into a power outlet.
2. Set the temperature control knob to your desired heat level. Allow the appliance to preheat until the ready indicator light signals it's ready.
3. Carefully open the lid using the handle.
4. Place your sandwich or panini onto the bottom grill plate. The floating hinge system will automatically adjust to the thickness of your food.
5. Gently close the lid. Do not force it shut.
6. Cook for 3-8 minutes, or until the sandwich is golden brown and heated through. Cooking time may vary based on ingredients and desired crispness.
7. Once cooked, carefully open the lid and remove the sandwich using a heat-resistant plastic or wooden utensil. Avoid metal utensils to prevent scratching the non-stick coating.
8. Unplug the appliance after use.

Using as an Open Grill (180 Degree Openable Plates)

1. Ensure the appliance is clean and plugged into a power outlet.
2. Set the temperature control knob to your desired heat level. Allow the appliance to preheat.
3. To open the plates to 180 degrees, gently lift the top plate until it locks into the fully open position. This transforms the sandwich maker into a flat grilling surface.
4. Place food items such as patties, vegetables, or skewers onto both grill plates.
5. Cook until desired doneness, turning food as needed.
6. Once cooked, carefully remove food using heat-resistant utensils.
7. To close, gently lift the top plate slightly to disengage the 180-degree lock, then lower it back into the closed position.
8. Unplug the appliance after use.



Image: The iBELL SM1700G Sandwich Maker in its 180-degree open position, actively grilling food items like skewers and patties on a kitchen counter.

5. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your iBELL SM1700G Sandwich Maker.

Cleaning Instructions

1. Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Grill Plates:** Wipe the non-stick plates with a soft, damp cloth or sponge. For stubborn food residue, dampen a cloth with warm, soapy water and gently scrub. Avoid abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
3. **Drip Tray:** Remove the drip tray and wash it with warm, soapy water. Rinse thoroughly and dry before reinserting.
4. **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
5. Never immerse the main unit of the appliance in water or any other liquid.

Storage

Once the appliance is clean and completely cool, close the lid and engage the lid-lock. Store the sandwich maker in an upright position to save space, or lay it flat in a dry, safe place.



Image: The iBELL SM1700G Sandwich Maker in its closed position, illustrating its compact dimensions (27.5 cm depth, 30 cm width, 9 cm height) for easy storage.

6. TROUBLESHOOTING

If you encounter issues with your iBELL SM1700G Sandwich Maker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not heat up.	Not plugged in; power outlet faulty; appliance malfunction.	Ensure the plug is securely inserted. Test the outlet with another appliance. If still not working, contact customer support.

Problem	Possible Cause	Solution
Food sticks to the plates.	Plates not properly cleaned; insufficient preheating; no oil/butter applied (if desired).	Clean plates thoroughly. Allow sufficient preheating time. Lightly brush plates with cooking oil or butter before placing food.
Uneven cooking.	Food not evenly distributed; appliance not fully preheated.	Ensure food is spread evenly on the plates. Allow the appliance to fully preheat until the ready indicator light illuminates.
Smoke or odor during initial use.	Manufacturing residues burning off.	This is normal for the first few uses. Ensure good ventilation. It will dissipate.

7. SPECIFICATIONS

Feature	Detail
Model Number	SM1700G (IBL SM 1700GEZ)
Power	1700 Watts
Voltage	220 Volts (AC)
Dimensions (D x W x H)	27.5D x 30W x 9H Centimeters
Item Weight	2.1 Kilograms
Material	Shock Proof Plastic Body & Non Stick Plate
Special Features	Automatic Shut-Off, Floating Hinge, 180 Degree Openable, Temperature Control Knob
Included Components	User Manual

8. WARRANTY AND SUPPORT

Warranty Information

The iBELL SM1700G Sandwich Maker comes with a **1 Year standard warranty**. An **additional 1 Year warranty** can be obtained upon product registration. Registration should be completed within 30 days from the date of purchase.

For warranty claims or service, please retain your purchase receipt and contact customer support.

Customer Support

For any queries, assistance, or service requests, please contact iBELL customer support:

- **Manufacturer:** Innovative Technologies
- **Address:** Fida's Building, Thottumugham P.O, Aluva, Kerala - 683105, India

- **Phone:** 1800-2020-260
- **Email:** connect@ibellstore.com

© 2026 IBELL. All rights reserved.