

COSTWAY FB32426DE

COSTWAY Wooden Sandbox with Kitchen Accessories Instruction Manual

Model: FB32426DE

INTRODUCTION

Thank you for choosing the COSTWAY Wooden Sandbox with Kitchen Accessories. This manual provides essential information for the safe assembly, operation, and maintenance of your product. Please read it thoroughly before use and retain it for future reference.

This sandbox is designed to provide an engaging play experience for children aged 3 to 8 years, combining traditional sand play with simulated kitchen activities.

SAFETY INFORMATION

- **Adult Supervision Required:** Always supervise children during play to prevent accidents.
- **Material Safety:** The sandbox is constructed from natural fir wood and features BPA-free materials for all components. Surfaces are designed to be scratch-resistant.
- **Stable Connections:** Ensure all connections are securely fastened during assembly and periodically check for tightness.
- **Placement:** Place the sandbox on a level, stable surface away from hazards such as fences, walls, or other play equipment to ensure adequate clearance.
- **Sand Quality:** Use only clean, washed play sand suitable for children's sandboxes.
- **Weight Limit:** Do not exceed the maximum sand capacity of 75 kg.
- **Age Appropriateness:** This product is intended for children aged 3-8 years. Small parts may pose a choking hazard for younger children.



Image: Details highlighting the burr-free surface, firm connections, and integrated seating bench for enhanced safety and comfort.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Wooden Sandbox Frame (various panels)
- PP Ground Liner
- Simulated Kitchen Accessories (e.g., sink, faucet, burners, grill, knobs)
- Assembly Hardware (screws, bolts, etc.)
- Instruction Manual

SETUP AND ASSEMBLY

Detailed assembly instructions are provided in the separate assembly manual included with your product. Please follow those instructions carefully. The general steps are outlined below:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Identify Parts:** Refer to the parts list in the assembly manual to identify each component.
3. **Assemble Sandbox Frame:** Connect the wooden panels to form the sandbox frame using the provided hardware. Ensure all connections are tight and secure.
4. **Install PP Ground Liner:** Place the durable PP ground liner inside the assembled sandbox frame.

This liner helps regulate sand depth, promotes ventilation, and facilitates water drainage.

5. **Attach Kitchen Accessories:** Secure the simulated kitchen components, including the sink, faucet, burners, and grill, to the designated areas of the sandbox.
6. **Final Check:** Before use, ensure all parts are correctly assembled and tightened.



Image: The sandbox is constructed from massive fir wood, known for its natural durability and solid structure.

Bodenloses Design mit Liner



Langlebiges PP-Material

-  Sandtiefe einstellen
-  Förderung der Belüftung
-  Erleichtert die Entwässerung



Image: The bottomless design with a durable PP liner allows for adjustable sand depth, promotes ventilation, and ensures proper drainage.

OPERATING INSTRUCTIONS

Using the Sandbox

- **Filling with Sand:** Once assembled, fill the sandbox with clean play sand. Do not exceed the maximum recommended sand capacity of 75 kg.
- **Play Area:** The spacious design accommodates multiple children for shared play.

Simulated Kitchen Function

The integrated kitchen area provides an interactive play experience:

- **Burners and Grill:** Use the simulated double burners and grill for imaginative cooking play. The knobs can be turned to simulate control.
- **Sink and Faucet:** The removable sink can be filled with water for washing play, and the rotatable faucet adds to the realistic experience.
- **Kitchen Accessories:** Utilize the included kitchen accessories (e.g., pots, pans, utensils) for enhanced role-playing.



Image: Children and adults can enjoy interactive play in the spacious wooden sandbox.

Simulierte Küchenfunktion



Image: Detailed view of the simulated kitchen functions, including stove burners, BBQ grill, sink with faucet, and interactive turning knobs.

Reichlich Küchengeschirr



Image: The sandbox includes a rich assortment of kitchen play accessories for imaginative cooking.

2-in-1 Versatile Design

The sandbox features a versatile 2-in-1 design. When children outgrow sand play, the structure can be repurposed as a flower bed, offering continued utility in your garden.



Image: The 2-in-1 versatile design allows the product to function as a children's sandbox or be repurposed as a flower box.

MAINTENANCE

- **Regular Inspection:** Periodically check all screws, bolts, and connections to ensure they remain tight. Tighten as necessary.
- **Wood Care:** The fir wood is naturally durable. To prolong its lifespan, consider applying a non-toxic, child-safe wood sealant annually, especially if exposed to harsh weather.
- **Clean Sand:** Regularly rake and clean the sand to remove debris, leaves, and foreign objects. Replace sand if it becomes contaminated.
- **Liner Care:** The PP ground liner can be rinsed with water to clean. Ensure it is properly positioned to maintain drainage.
- **Kitchen Accessories:** Clean the plastic kitchen accessories with mild soap and water. Ensure they are dry before storing or reusing.
- **Storage:** During periods of non-use or inclement weather, consider covering the sandbox to protect the sand and wood from elements.

TROUBLESHOOTING

- **Loose Connections:** If the sandbox feels wobbly, check all assembly points and tighten screws or bolts.
- **Poor Drainage:** Ensure the PP ground liner is correctly installed and not obstructed. Clear any debris from the bottom of the sandbox that might impede water flow.

- **Wood Discoloration:** Natural wood may change color over time due to sun exposure. This is normal and does not affect structural integrity. Applying a wood sealant can help maintain appearance.

SPECIFICATIONS

Model Number	FB32426DE
Brand	COSTWAY
Material	Fir Wood, PP, ABS, Stainless Steel
Product Dimensions (L x W x H)	135 x 125 x 20 cm (53.1 x 49.2 x 7.9 inches)
Ground Liner Dimensions (L x W)	153 x 144 cm (60.2 x 56.7 inches)
Countertop Width	28 cm (11 inches)
Bench Width	12 cm (4.7 inches)
Net Weight	10 kg (22 lbs)
Max. Sand Capacity	75 kg (165 lbs)
Recommended Age	3-8 years
Country of Origin	China

Produktabmessungen



Geeignete Altersgruppen:
3-8 Jahre alt



Gewichtskapazität des
Sandes (nicht enthalten):
75 kg



Image: Product dimensions and key specifications for the sandbox.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact COSTWAY customer service directly. Keep your purchase receipt for warranty claims.

© 2024 COSTWAY. All rights reserved.