

Artloge XM1372

Artloge Art Deco Wall Clock Model XM1372 Instruction Manual

Your guide to setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the Artloge Art Deco Wall Clock Model XM1372. This elegant mirrored clock is designed to enhance your living space with its unique aesthetic and functional timekeeping. This manual provides essential information for the safe and proper installation, operation, and care of your new wall clock.

Please read this manual thoroughly before installation and retain it for future reference.

2. PRODUCT OVERVIEW

The Artloge Art Deco Wall Clock features a distinctive design combining a mirrored surface with a functional clock. Key features include:

- **Elegant Design:** An oblong oval silver mirror with a classic arched top, reflecting indoor light to add sophistication.
- **Dual-Tone Mirror:** Incorporates a round tea-brown dial beneath an ultra-silver mirror, both crafted from 4mm thick high-definition, antioxidant glass.
- **Silent Mechanism:** Equipped with a silent flow clock mechanism for accurate timekeeping without audible ticking, ensuring a peaceful environment.
- **Durable Construction:** Features a robust metal hook for secure hanging and a 15mm thick MDF back panel for stability. Roman numerals are painted with glass black paint for longevity.
- **Safety Features:** A high-viscosity anti-shattering film is applied to the back of the mirror to prevent glass breakage.



Figure 1: Front view of the Artloge Art Deco Wall Clock Model XM1372.

3. SETUP

3.1 Unboxing

1. Carefully open the packaging. The clock is protected with thick foam.
2. Remove the clock from its protective materials.
3. Inspect the clock for any signs of damage. If damage is found, contact customer support immediately.
4. Retain packaging materials for potential future transport or returns.

3.2 Battery Installation

The clock requires one (1) AA battery (not included).

1. Locate the battery compartment on the back of the clock mechanism. This is typically covered by an integrated back cover.
2. Open the battery compartment.
3. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment securely.





Figure 2: Detail of the clock face, indicating the area where the mechanism is located on the reverse side for battery access.

3.3 Mounting the Clock

Due to the clock's weight (approximately 17.6 pounds) and dimensions (12.6"W x 39.3"H), secure mounting is crucial. It is recommended to mount the clock to a wall stud or use appropriate heavy-duty wall anchors.

1. **Select Location:** Choose a suitable wall location, considering the clock's dimensions and weight. Ensure the wall material can support the clock.
2. **Measure and Mark:** Hold the clock against the wall at the desired height and mark the position of the metal hanging hook.
3. **Install Hardware:**
 - If mounting to a wall stud, drill a pilot hole and securely fasten a screw (not included) into the stud, leaving enough of the screw head exposed for the clock's hook.
 - If mounting to drywall without a stud, use heavy-duty drywall anchors (not included) rated for the clock's weight. Follow the anchor manufacturer's instructions for installation.
4. **Hang the Clock:** Carefully lift the clock and align the metal hanging hook on the back with the installed screw or anchor. Ensure the clock is securely seated and level.

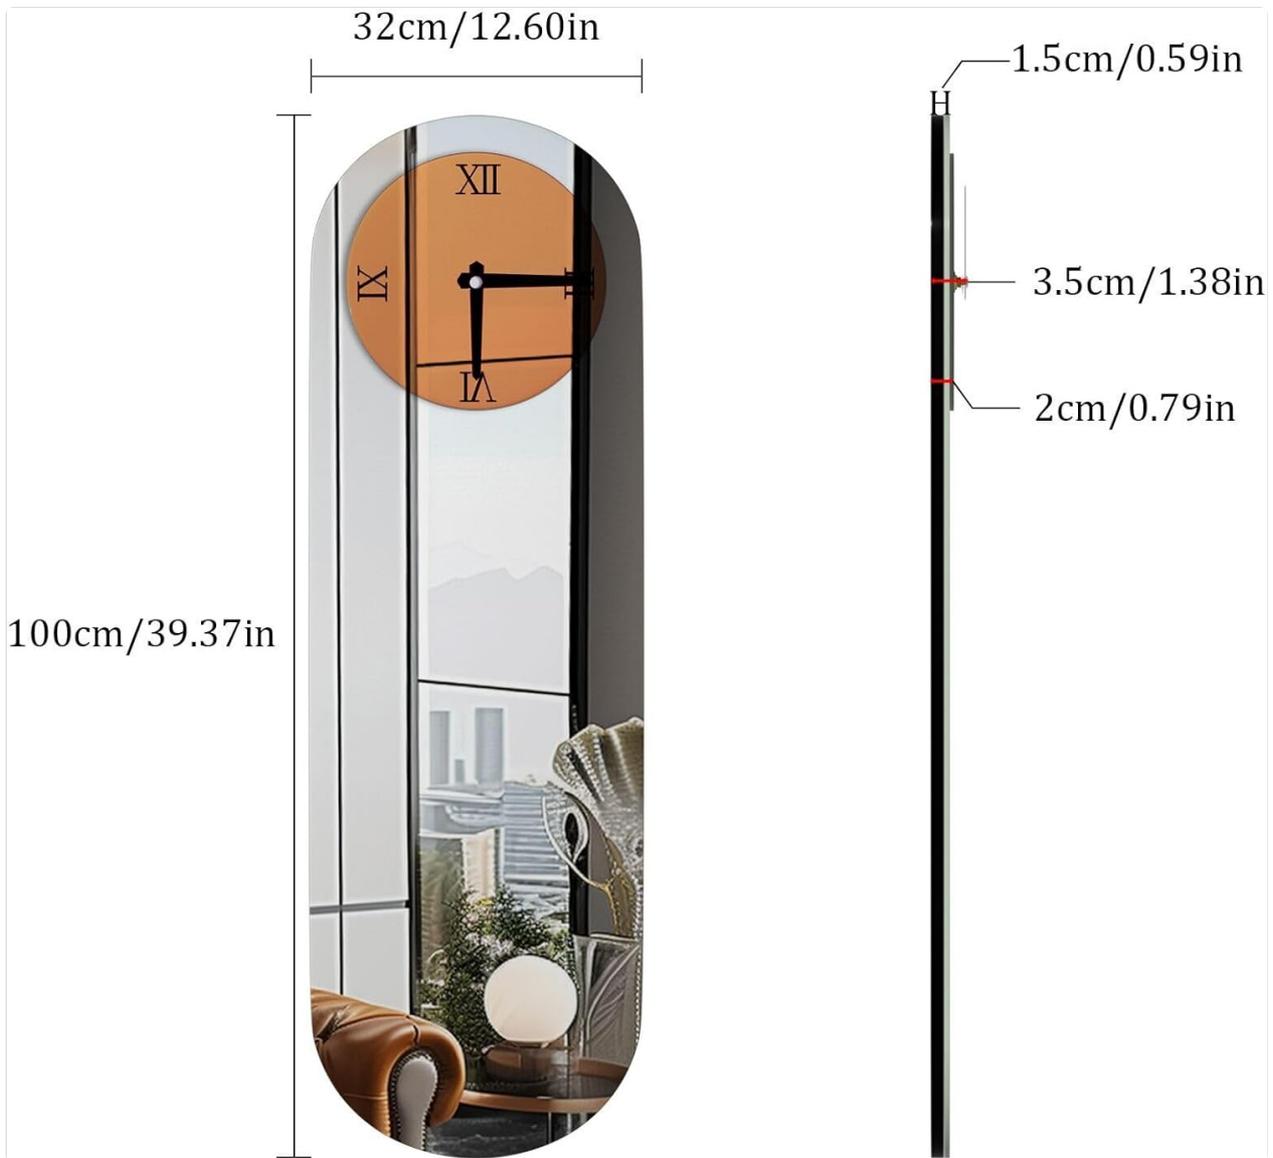


Figure 3: Dimensions and side profile of the clock, illustrating the hanging mechanism.

4. OPERATING INSTRUCTIONS

4.1 Setting the Time

After installing the battery, the clock hands will begin to move. To set the correct time:

1. Locate the time-setting knob on the back of the clock mechanism.
2. Gently turn the knob in either direction until the clock hands display the correct time.
3. Avoid forcing the hands directly, as this may damage the mechanism.

5. MAINTENANCE

5.1 Cleaning

To maintain the appearance of your mirrored clock:

- Use a soft, lint-free cloth to gently wipe the mirror and glass surfaces.
- For stubborn marks, a small amount of glass cleaner can be applied to the cloth (not directly to the clock) and then wiped clean.

- Avoid abrasive cleaners or materials that could scratch the glass or mirror finish.

5.2 Battery Replacement

Replace the AA battery annually or when the clock begins to lose time or stop functioning. Follow the battery installation steps in Section 3.2.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running	Battery is dead or incorrectly installed.	Check battery polarity. Replace with a fresh AA battery.
Clock runs inaccurately (too fast/slow)	Low battery power.	Replace with a fresh AA battery.
Hands are stuck or not moving smoothly	Hands are bent or obstructed.	Gently check if hands are touching each other or the clock face. Carefully adjust if necessary. If a protective plastic case is present, ensure it is not interfering.
Clock makes noise	This model features a silent mechanism. Any noise may indicate an issue.	Ensure the clock is securely mounted and not vibrating against the wall. If noise persists, contact customer support.

7. SPECIFICATIONS

- **Brand:** Artloge
- **Model Number:** XM1372
- **Style:** Art Deco
- **Color:** Brown + Silver
- **Product Dimensions:** 12.6 inches (W) x 39.3 inches (H)
- **Item Weight:** Approximately 17.6 pounds
- **Power Source:** 1 x AA Battery (not included)
- **Material:** Glass, Engineered Wood (Frame)
- **Mounting Type:** Wall Mount
- **Indoor/Outdoor Usage:** Indoor only

8. WARRANTY AND SUPPORT

For any questions, concerns, or issues regarding your Artloge Art Deco Wall Clock, please contact Artloge customer support. Refer to your purchase documentation for specific warranty details and contact information.

Please note that the product is subject to a 30-day return policy from the date of purchase. Protection plans may be available for extended coverage.

© 2025 Artlog. All rights reserved.