

eKids BU-533

eKids Bluey Kids Camera Instruction Manual

Model: BU-533

INTRODUCTION

Welcome to your new eKids Bluey Kids Camera! This digital camera is designed for young users, allowing them to capture photos and videos with ease. It features a built-in screen, digital stickers, and fun games, all inspired by the popular Bluey series. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure a fun and seamless experience.

WHAT'S IN THE BOX

- eKids Bluey Kids Camera
- 512MB SD Card
- Wrist Strap
- Micro USB Cable



The eKids Bluey Kids Camera package includes the camera unit, a 512MB SD card for storage, a wrist strap for secure handling, and a micro USB cable for connectivity.

SETUP

Battery Installation

The camera requires 3 AA batteries (not included).

1. Locate the battery compartment on the bottom of the camera.
2. Open the battery compartment cover.
3. Insert 3 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

SD Card Installation

A 512MB SD card is included for storing photos and videos.

1. Locate the SD card slot on the side of the camera.
2. Insert the 512MB SD card into the slot until it clicks into place.
3. To remove, gently push the card until it pops out.



This image illustrates the battery compartment and SD card slot on the eKids Bluey Kids Camera, highlighting where to insert the 3 AA batteries and the included 512MB SD card.

OPERATING INSTRUCTIONS

Powering On/Off

Press and hold the Power button (located on the back) to turn the camera on or off.

This video demonstrates how to power on the eKids Bluey Digital Camera and navigate its main menu, showcasing the user-friendly interface for children.

Taking Photos


In photo mode, press the Camera Shutter / OK Button (top right) to capture a picture.



A child is shown holding the eKids Bluey Kids Camera, demonstrating the ease of use for taking photos.

Recording Videos

Switch to video mode using the Mode Select button, then press the Camera Shutter / OK Button to start and stop recording.

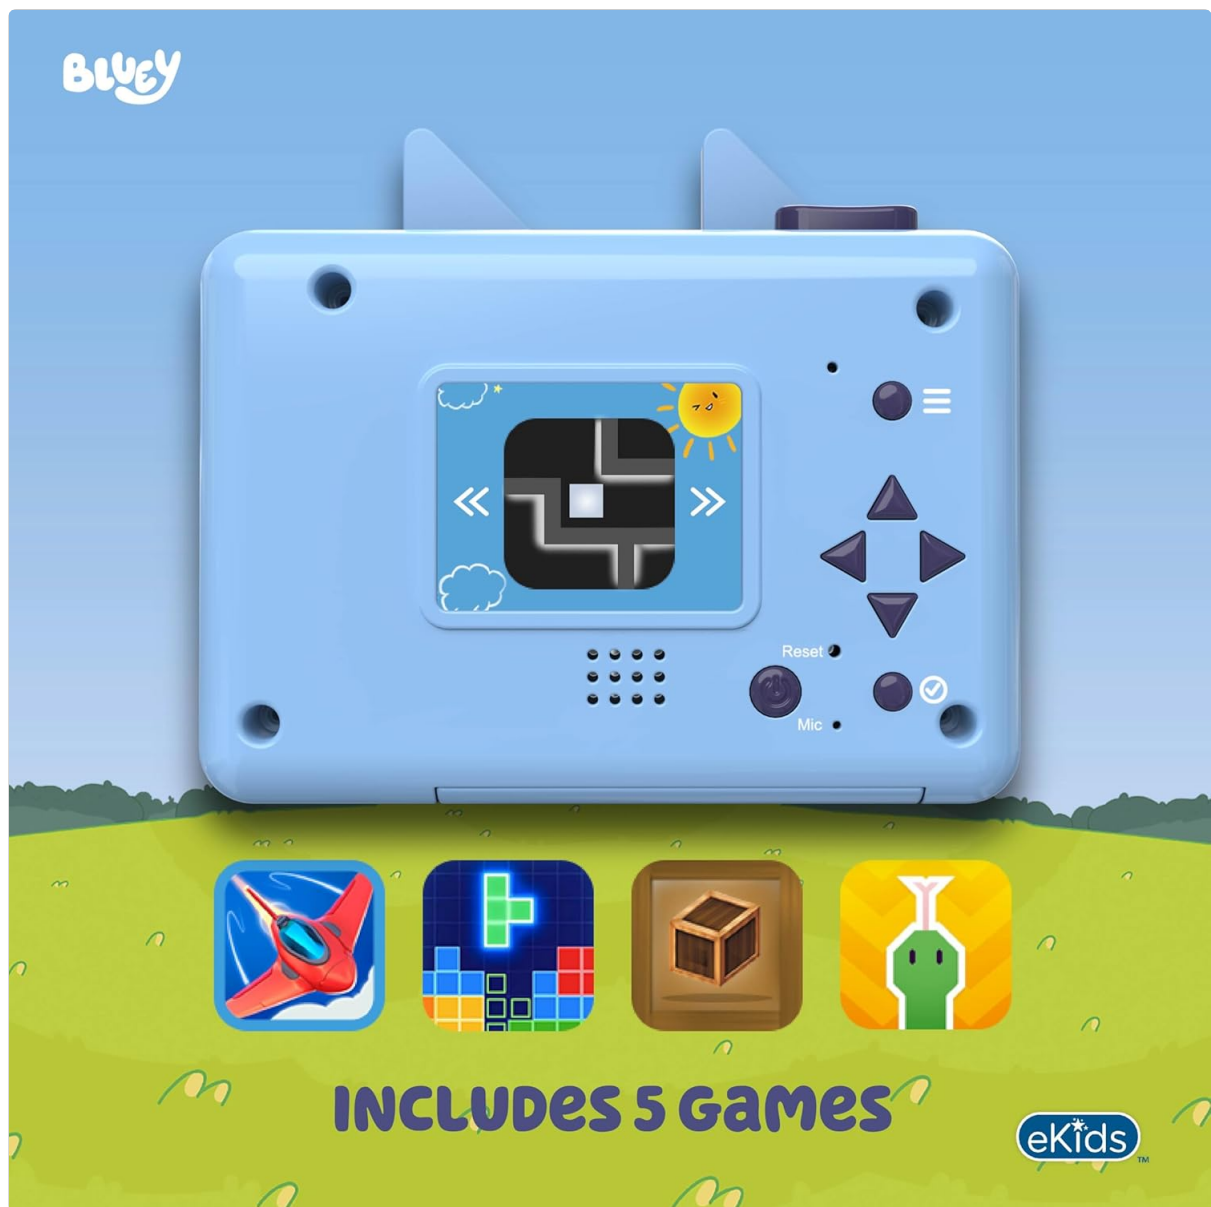

This image captures a child actively recording a video with the eKids Bluey Kids Camera, highlighting its video recording capability.

Navigating Menus

Use the Up, Down, Forward, and Reverse buttons to navigate through menus and options on the 2-inch full-color screen.



A detailed view of the back of the eKids Bluey Kids Camera, labeling all control buttons including the Camera Shutter/OK, Power, Up, Forward/Photo Frames, Reverse/Mode Select, Down, and Reset buttons, along with the Display Speaker and Mic.

FEATURES

Digital Stickers & Photo Frames

Decorate your images with over 25 built-in photo frames and stickers inspired by Bluey characters.

BLUEY



- ✓ **1080P VIDEO**
- ✓ **512MB SD CARD**
- ✓ **2 INCH FULL COLOR SCREEN**
- ✓ **WRIST STRAP**
- ✓ **25+ BLUEY GRAPHICS**



- ✗ **BAD VIDEO QUALITY**
- ✗ **NO SD CARD**
- ✗ **NO SCREEN**
- ✗ **NO WRIST STRAP**
- ✗ **NO GRAPHICS**

eKids™

This image demonstrates the fun digital stickers and photo frames available on the eKids Bluey Kids Camera, allowing users to add Bluey characters to their pictures.

Built-in Games

The camera includes 5 built-in games for entertainment. Access them through the main menu.



The eKids Bluey Kids Camera features 5 built-in games, as shown on the camera's screen, providing additional entertainment for children.

2-inch Full Color Screen


View your photos and videos directly on the camera's vibrant 2-inch full-color LCD screen.

Expandable Memory

While a 512MB SD card is included, you can replace it with your own SD memory card (up to 32GB max) to store even more content.

Connectivity

Connect the camera to your computer using the micro USB cable to transfer and share your captured memories.

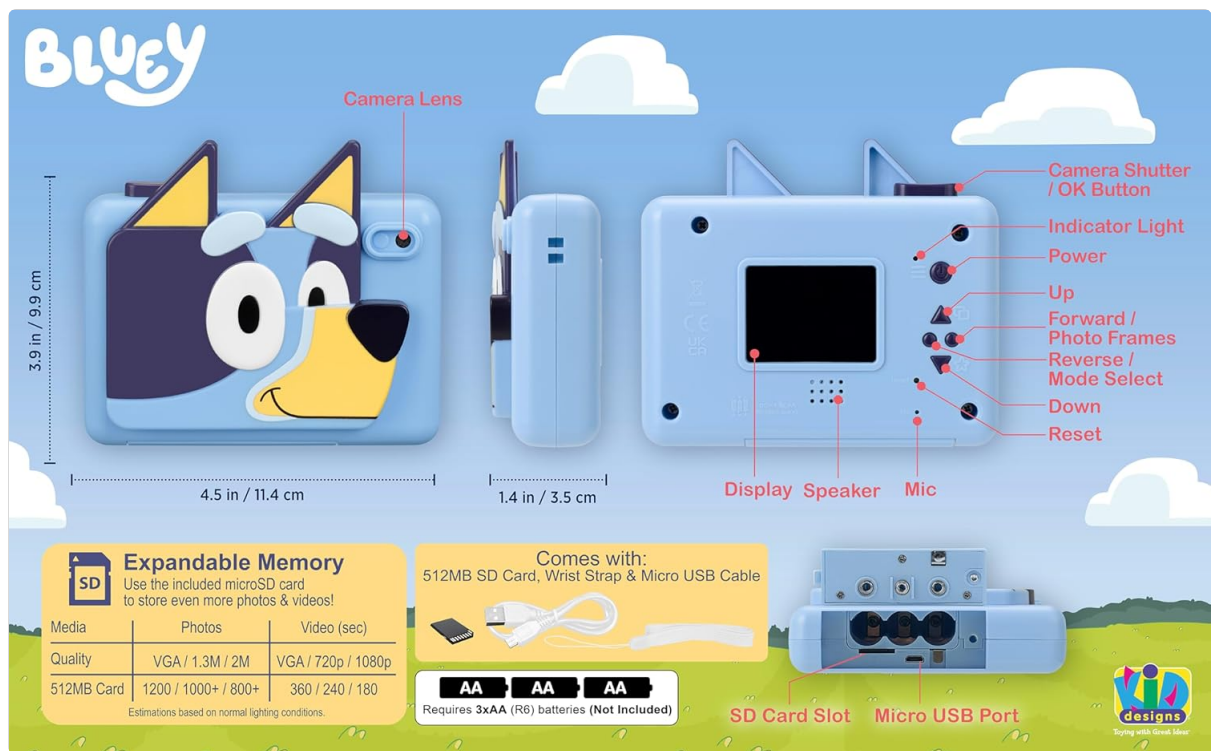

The eKids Bluey Kids Camera connected to a laptop via its micro USB cable, illustrating the ease of transferring photos and videos to a computer.

MAINTENANCE

- Keep the camera clean by wiping it with a soft, dry cloth.
- Avoid exposing the camera to extreme temperatures or direct sunlight.
- Do not immerse the camera in water, as it is not water resistant.
- Remove batteries if the camera will not be used for an extended period.

TROUBLESHOOTING

Problem	Solution
Camera does not turn on.	Check battery installation and ensure batteries are fresh.
Cannot take photos/videos.	Ensure an SD card is properly inserted and has sufficient free space.
Screen is blank or frozen.	Try resetting the camera using the Reset button (if available) or remove and reinsert batteries.
Poor image/video quality.	Ensure adequate lighting. The camera is designed for children and may not produce professional-grade images.

SPECIFICATIONS

- Brand: eKids

- Model Name: BU-533
- Display Type: LCD
- Screen Size: 2 Inches
- Photo Sensor Resolution: 4 MP
- Video Resolution: 720p
- Flash Memory Type: SD (512MB included, expandable up to 32GB)
- Battery Type: AA Alkaline (3 required, not included)
- Connectivity Technology: Micro USB
- Color: Blue
- Item Dimensions (D x W x H): 4.02" x 1.3" x 3.85"
- Special Feature: Built-In Microphone
- Water Resistance Level: Not Water Resistant




WARRANTY AND SUPPORT



This product comes with a 1 Year Limited Warranty. For support or more information, please visit the official eKids brand store.

[Visit the eKids Brand Store](#)

© 2025 eKids. All rights reserved.

Related Documents - BU-533

	<p>eKids DG-556 TR-556 Bluetooth MP3 Karaoke with Microphone User Manual</p> <p>Comprehensive user manual for the eKids DG-556 TR-556 Bluetooth MP3 Karaoke machine. Includes setup, operation for USB, MP3, and Bluetooth modes, voice control, troubleshooting, FCC/IC compliance, and warranty information.</p>
	<p>eKids B50 Bluetooth Headphones User Manual and Guide</p> <p>Comprehensive user manual for the eKids B50 Bluetooth Headphones, covering setup, operation, controls, charging, and warranty information. Learn how to pair, use, and maintain your wireless headphones.</p>
	<p>Shopkins Sing-Along Boombox SN-115 User Manual and Instructions</p> <p>Official user manual and instructions for the eKids Shopkins Sing-Along Boombox (Model SN-115), covering setup, operation, troubleshooting, and warranty information.</p>

	<p>eKids DE-072 MP3 Microphone User Manual and Instructions</p> <p>User manual for the eKids DE-072 MP3 Microphone by Disney, detailing battery installation, maintenance, FCC compliance, and how to use the Song and MP3 playback modes.</p>
	<p>Pokémon Walkie Talkies PK-207.EXv24 User Guide</p> <p>User guide for the Pokémon Walkie Talkies PK-207.EXv24, featuring static-free extended range and an easy push-to-talk button. Includes setup, battery installation, and FCC compliance information.</p>
	<p>eKids Iron Man Helmet 1:2 Scale Speaker User Manual and Safety Guide</p> <p>User manual and safety instructions for the eKids Iron Man Helmet 1:2 Scale Speaker, model Vi-B72IM. Learn how to charge, connect via Bluetooth, use speakerphone, and find important safety and warranty information.</p>