



[Manuals.plus](#) /

› [LOUKIENE](#) /

› LOUKIENE Restaurant Pager System Instruction Manual

LOUKIENE LK-P1B24

LOUKIENE Restaurant Pager System Instruction Manual

Model: LK-P1B24

INTRODUCTION

The LOUKIENE Restaurant Pager System is designed to enhance customer service and operational efficiency in various environments such as restaurants, food courts, hotels, hospitals, churches, and for inventory management. This system includes a keypad transmitter and 24 pagers, providing reliable and convenient communication to notify customers when their service is ready.



Image: The LOUKIENE Restaurant Pager System, featuring a charging base with 24 individual pagers. The pagers are neatly arranged in slots, ready for use.

SETUP

The LOUKIENE Restaurant Pager System is designed for easy and simple setup, requiring no reprogramming for initial use.

Initial Setup Steps:

1. **Unpack Components:** Carefully remove the keypad transmitter, 24 pagers, and power adapter from the packaging.
2. **Connect Power:** Plug the power adapter into the keypad transmitter and then into a standard electrical outlet.
3. **Charge Pagers:** Place all 24 pagers into the charging slots on the keypad transmitter. Ensure they are properly seated to begin charging. The pagers come with built-in rechargeable Lithium Ion batteries.
4. **System Ready:** The system is pre-programmed and ready for immediate use once the pagers are charged.



Image: A close-up view of the pager charging base and a single pager, illustrating the contact charging mechanism and emphasizing the built-in rechargeable battery for long standby time.

OPERATING INSTRUCTIONS

Calling a Pager:

1. **Enter Pager Number:** On the keypad transmitter, enter the number of the pager you wish to call (e.g., "01" for pager 1).
2. **Press "GO":** Press the "GO" button on the keypad. The corresponding pager will activate with its set prompt mode.



Image: A detailed view of the keypad transmitter, highlighting its responsive touch keyboard for easy number entry.

Prompt Modes:

The system offers 7 different prompt combinations, allowing you to enable or disable Vibration, Flash, and Beep modes as needed.

- **Vibration:** The pager vibrates to alert the customer.
- **Flash:** The pager lights up with a flashing indicator.
- **Beep:** The pager emits an audible beep sound.

Prompt Modes



Image: This graphic illustrates the three primary alert modes: Vibration, Flash, and Buzzer, which can be combined for various notification preferences.

Setting Beep Speed and Turning On/Off Beep Prompt:

You can adjust the beep speed or completely turn off the buzzer sound. Refer to the video below for a visual guide.

Your browser does not support the video tag.

Video: This video demonstrates how to set the beep speed (slow, medium, fast) and how to turn the beep prompt on or off on the LOUKIENE Restaurant Pager System. Setting the beep speed to 0 will disable the buzzer sound.

Mute Button:

Each pager is equipped with a mute button. When a customer receives an alert, pressing this button will cancel the prompt, preventing prolonged buzzing and ensuring a quiet environment for other customers.



Image: A close-up of a pager, clearly showing the mute button located on its side, which allows users to silence the alert.

MAINTENANCE

To ensure the longevity and optimal performance of your LOUKIENE Restaurant Pager System, follow these simple maintenance guidelines:

- **Cleaning:** The pagers and keypad are designed to be waterproof and oilproof, making them easy to clean. Use a soft, damp cloth to wipe down surfaces. For stubborn stains, a mild, non-abrasive cleaning solution can be used. Ensure the device is dry before placing pagers back on the charging base.
- **Charging:** Always return pagers to the charging base when not in use to ensure they are fully charged for the next use. This helps maintain battery health.
- **Storage:** Store the system in a cool, dry place away from direct sunlight and extreme temperatures when not in active use for extended periods.

Waterproof & Oilproof Easy to Clean



Image: The pager system base and pagers are shown with water droplets, illustrating their waterproof and oilproof design for easy cleaning.

TROUBLESHOOTING

If you encounter any issues with your LOUKIENE Restaurant Pager System, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Pager not responding to call.	Pager is out of range or battery is low.	Ensure pager is within the 984 feet open area range. Place pager on charging base to recharge.
Pager not charging.	Pager not properly seated on the charging base or power adapter issue.	Re-seat the pager firmly on the charging slot. Check if the power adapter is securely connected and receiving power.

Problem	Possible Cause	Solution
No beep sound from pager.	Beep sound might be turned off or set to silent mode.	Refer to the "Setting Beep Speed and Turning On/Off Beep Prompt" section or video to enable the beep sound.
System not powering on.	Power adapter not connected or faulty.	Verify power adapter connection to both the unit and the power outlet. Try a different outlet.

SPECIFICATIONS

Feature	Detail
Model Number	LK-P1B24
Product Dimensions	11.5 x 10.6 x 3.5 inches
Item Weight	4.11 pounds
Number of Pagers	24 (expandable up to 998)
Battery Type	Lithium Ion (included)
Prompt Modes	Vibration, Flash, Beep (7 combinations)
Operating Range	Up to 984 feet in open area
Special Features	Mute Button, Waterproof & Oilproof, Easy Sticker Changing

WARRANTY AND SUPPORT

For warranty information or technical support, please contact LOUKIENE Wireless System directly through their official channels. Details can typically be found on the product packaging or the seller's store page on Amazon.

Visit the official LOUKIENE Store for more products and support: [LOUKIENE Wireless System Store](#)