



Manuals.plus /

- › **BLACK+DECKER** /
- › BLACK+DECKER Cordless Wet Dry Vacuum Cleaner and Mop User Manual

BLACK+DECKER BXUVXA01

BLACK+DECKER Cordless Wet Dry Vacuum Cleaner and Mop User Manual

Model: BXUVXA01

PRODUCT OVERVIEW

The BLACK+DECKER Cordless Wet Dry Vacuum Cleaner and Mop is an all-in-one cleaning solution designed for hard floors and area rugs. It combines powerful vacuuming with hydro mopping to effectively clean wet and dry messes simultaneously, leaving surfaces clean without water marks. Its cordless design offers convenient portability for cleaning various areas of your home.



Image: The BLACK+DECKER Cordless Wet Dry Vacuum Cleaner and Mop, showcasing its sleek design and upright position.



An all-in-one floor cleaning solution

Image: An illustration demonstrating the vacuum's ability to clean various types of messes, including pet food, crumbs, spilled egg, powder, and oatmeal, highlighting its versatility.



Image: The cordless BLACK+DECKER vacuum cleaner in action on a wooden floor, emphasizing its portability and ease of use without being tethered to an outlet.

SETUP AND ASSEMBLY

Before first use, ensure all components are present and the unit is fully charged. The vacuum cleaner requires minimal assembly.

1. Charging the Battery

The unit comes with a Lithium Ion battery included. Place the vacuum on its charging base and connect the charger to a power outlet. The digital display will indicate charging status.

2. Filling the Clean Water Tank

Locate the clean water tank (650ML capacity). Remove the tank, open the cap, and fill with clean water. For

enhanced cleaning, you may add cleaning tablets or appropriate cleaning fluids as per instructions. Ensure the cap is securely closed before reattaching the tank to the unit.



Large capacity water tanks to cover a wider cleaning area

Image: A visual guide showing the clean water tank (650ml) being removed and filled, and the dirty water tank (550ml) being detached, illustrating the large capacities for extended cleaning.

3. Attaching the Handle

Align the handle with the main body of the vacuum and push firmly until it clicks into place. Ensure it is securely fastened.

OPERATING INSTRUCTIONS

The BLACK+DECKER Wet Dry Vacuum Cleaner and Mop is designed for efficient cleaning on various sealed hard floors, including hardwood, tile, marble, and laminate.

1. Powering On and Mode Selection

Press the power button on the handle to turn on the unit. The digital display will illuminate, showing battery status and current mode. Easily switch between multiple functions using the intuitive controls on the display.

**Easily switch
between multiple
functions**



Image: A detailed view of the vacuum's digital display, showing various function icons and the battery level indicator, emphasizing ease of switching between modes.

2. Wet and Dry Cleaning

The vacuum and wash duo feature powerful suction and hydro mopping. It draws in dirt, debris, wet spills, stains, and grime, cleaning the surface without leaving water marks. For optimal performance on wet messes, ensure the clean water tank is adequately filled.



Image: A woman using the BLACK+DECKER vacuum and mop in a kitchen setting, demonstrating its "vacuum+wash duo" capability for simultaneous cleaning.

3. Edge Cleaning

The unit features an edge-cleaning design, allowing it to clean close to baseboards and furniture, reaching areas within 0.23 inches of edges. This ensures thorough cleaning in hard-to-reach spots.



Image: A close-up shot illustrating the vacuum's edge-cleaning design, showing its ability to clean very close to walls and furniture, with a small inset highlighting the minimal gap (less than 0.23 inches).

4. Maneuverability

The lightweight and ergonomic design makes the vacuum easy to maneuver around furniture and obstacles, providing a comfortable cleaning experience.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your BLACK+DECKER vacuum cleaner.

1. One-Button Self-Cleaning Mode

After use, place the vacuum on its base. Press the self-cleaning button to activate the self-cleaning mode. This feature cleans and decontaminates the roller brush automatically, eliminating the need for manual contact with the

brush and preparing it for the next use.



Image: A finger activating the one-touch self-cleaning roller function, with an animated overlay showing water and debris being flushed through the system, illustrating the automated cleaning process.

2. Cleaning the Dirty Water Tank

The dirty water tank has a 550ML capacity and is easy to disassemble. After each use, remove the dirty water tank and empty its contents. Rinse the tank thoroughly with clean water. Ensure all solid debris is removed to prevent odors and blockages. Allow it to air dry before reattaching.

3. Roller Brush Cleaning

Even with self-cleaning, occasional manual inspection and cleaning of the roller brush may be necessary, especially if large debris or pet hair is frequently picked up. Remove the roller brush as per the manual's instructions and clean any tangled hair or debris. Ensure it is completely dry before reinserting.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Roller brush stops turning or unit clogs.	Excessive pet hair or large debris caught in the roller or dirty water reservoir.	<ul style="list-style-type: none">• Activate self-cleaning mode.• If problem persists, manually remove roller brush and clear any obstructions.• Ensure dirty water tank is emptied and cleaned regularly to prevent buildup.
Unpleasant odor from the unit.	Dirty water reservoir not thoroughly cleaned, allowing bacteria growth.	<ul style="list-style-type: none">• Completely empty and rinse the dirty water tank after each use.• Disassemble the dirty water tank components and clean all parts, ensuring no solid residue remains.• Allow all components to air dry completely before reassembly.
Leaves too much water on the floor.	Incorrect usage or roller brush saturation.	<ul style="list-style-type: none">• Ensure the unit is not over-saturating the floor.• Run the self-cleaning cycle to ensure the roller brush is properly wrung out.• Check if the dirty water tank is full and needs emptying.

PRODUCT SPECIFICATIONS

Model: BXUVXA01

Product Dimensions: 11.46 x 10.2 x 42.56 inches

Item Weight: 9.92 Pounds

Batteries: 1 Lithium Ion battery required (included)

Clean Water Tank Capacity: 650ML

Dirty Water Tank Capacity: 550ML

Manufacturer: BLACK+DECKER

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video demonstrating the BLACK+DECKER Wet Dry Vacuum Cleaner and Mop in action, highlighting its features such as wet and dry cleaning, self-cleaning, and ease of use in a home environment. The video shows the vacuum effectively cleaning various spills and debris on hard floors.

WARRANTY AND SUPPORT

Your BLACK+DECKER Cordless Wet Dry Vacuum Cleaner and Mop comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures replacement service. For any issues or technical support, please contact BLACK+DECKER customer service. We offer lifetime online technical support within 24 hours.

For further assistance, you may visit the official BLACK+DECKER store on Amazon: [BLACK+DECKER Amazon Store](#).