

[Manuals.plus](#) /

› [JOYIN](#) /

› JOYIN Play Kitchen Toy Set with BBQ Grill and Pretend Appliances - Instruction Manual

JOYIN B0D46GPCT7

JOYIN Play Kitchen Toy Set with BBQ Grill and Pretend Appliances - Instruction Manual

Model: B0D46GPCT7

INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your JOYIN Play Kitchen Toy Set with BBQ Grill and Pretend Appliances. Please read this manual thoroughly before use and retain it for future reference. This toy set is designed for children aged 3 years and up.

WHAT'S INCLUDED

Your JOYIN Play Kitchen Toy Set includes the following components:

- 1 BBQ grill set
- 1 charcoal
- 1 lighter
- 1 spatula
- 1 tong
- 1 kitchen knife
- 2 table knives
- 2 spoons
- 2 forks
- 2 cups
- 2 plates
- 1 ketchup bottle
- 1 honey mustard bottle
- 1 black pepper shaker
- 1 sea salt shaker
- 1 oil bottle
- 1 basket
- 2 napkins
- 1 corn cob

- 1 burger
- 1 hot dog
- 3 green pepper slices
- 2 chicken fillets
- 1 coffee maker machine
- 1 toaster
- 1 blender
- 2 teacups
- 2 saucers
- 2 toast slices
- 4 additional food items (e.g., fried egg, banana)



Image: Overview of the entire JOYIN Play Kitchen Toy Set, showcasing the BBQ grill, coffee maker, toaster, blender, and various food and utensil accessories.

SETUP INSTRUCTIONS

Follow these steps to set up your play kitchen and BBQ grill:

BBQ Grill Assembly

1. Carefully unpack all components of the BBQ grill set from the packaging.
2. Attach the four legs to the main grill body, ensuring they are securely fastened.
3. Place the bottom shelf onto the designated slots on the legs.
4. Insert the wheels onto the axle and attach them to the appropriate legs.
5. Position the grill grate and the two side trays onto the main grill body.
6. Place the pretend charcoal in the designated area beneath the grill grate.
7. Hang the spatula, tong, and kitchen knife on the hooks provided on the side of the grill.



Image: The assembled JOYIN BBQ grill, showing the grill grate, side trays, and hanging utensils, along with pretend food items.

Kitchen Appliances Setup

1. Place the coffee maker, toaster, and blender on a stable, flat surface.
2. For the coffee maker, ensure the water reservoir is accessible. If batteries are required for the dispensing function, insert them according to the markings (batteries not included).
3. For the toaster, place the two pretend toast slices into the slots.
4. For the blender, ensure the mixing bowl is securely attached to the base. If batteries are required for rotation, insert them according to the markings (batteries not included).



Image: The JOYIN pretend kitchen appliances, including the coffee maker, toaster, and mixer, displayed with accompanying plates and food items.

OPERATING INSTRUCTIONS

Using the BBQ Grill

- Place pretend food items such as the burger, hot dog, corn, and chicken fillets onto the grill grate.
- Use the toy lighter to simulate lighting the charcoal.
- Utilize the spatula and tongs to flip and move the food items on the grill, mimicking real grilling actions.

- Once

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0D46GPCT7>

More documents and user manuals: <https://manuals.plus/>