

## JALL B02

# JALL Fabric Alarm Clock User Manual

Model: B02

Brand: JALL

## INTRODUCTION

Thank you for choosing the JALL Fabric Alarm Clock. This multifunctional device combines an alarm clock, Bluetooth stereo sound speaker, FM radio, fast wireless charging pad, USB charging port, nightlight, and white noise machine into one stylish unit. Designed to enhance your bedroom, living room, or office, it provides convenience and comfort for your daily routine.

## KEY FEATURES

- Multifunctional Design:** Integrates an alarm clock, 10W Bluetooth stereo sound speaker, FM radio, 10W fast wireless charging pad, USB charging port, nightlight, and white noise machine.
- High-Quality Audio:** Enjoy excellent sound quality for music, radio, or white noise through the powerful 10W stereo Bluetooth speaker.
- Dual Charging Options:** Features efficient 10W wireless charging on top and an additional USB charging port for versatile device charging.
- Adjustable Display Brightness:** Screen dimmer from 0-100% with auto-dimming at fixed time intervals (e.g., 10 PM to 7 AM) to ensure optimal visibility without disturbing sleep.
- Soothing White Noise:** Built-in collection of 25 natural, high-quality white noise sounds for effortless sleep and relaxation.
- Multi-Color Nightlight:** Offers 7 color light options with adjustable brightness to create the perfect ambiance.
- Stylish Fabric Finish:** Modern and elegant design that complements any home decor.
- Time Memory Function:** Retains time settings even when unplugged for short periods, ensuring convenience during power outages.

## SETUP

### Unpacking

Carefully remove the JALL Fabric Alarm Clock from its packaging. Ensure all components are present:

- JALL Fabric Alarm Clock Unit
- Power Adapter

- User Manual (this document)

## Power Connection

Connect the provided power adapter to the "INPUT 12V" port on the back of the alarm clock. Plug the other end into a standard wall outlet. The display will illuminate, and the clock will be ready for initial setup.



Image: Rear view of the JALL Fabric Alarm Clock, highlighting the power input and USB charging port.

## Initial Time Setting

Upon first power-on, the clock may display a default time or require setting. Use the "Dimmer/Time Set" button and the main rotary knob on the back panel to adjust the time. Refer to the "Operating Instructions" section for detailed steps on setting the time and date.

## OPERATING INSTRUCTIONS

### Control Panel Overview

The main controls are located on the back panel of the unit. Familiarize yourself with the buttons and knobs:

- **Volume Knob:** Adjusts speaker volume.
- **Light Knob:** Adjusts nightlight brightness.
- **Snooze/Light Button:** On top, for snooze function and turning nightlight on/off.
- **Music Note Button:** Cycles through white noise sounds.
- **Alarm 1 & Alarm 2 Buttons:** Set and activate individual alarms.
- **FM Radio Button:** Activates FM radio mode.
- **BT (Bluetooth) Button:** Activates Bluetooth pairing mode.
- **Auto Dimmer Button:** Toggles automatic display dimming.
- **Dimmer/Time Set Button:** Adjusts display brightness manually and enters time setting mode.
- **Main Rotary Knob:** Used for tuning radio, setting time, and navigating menus.
- **USB Charging Port:** For wired device charging.



Image: Detailed view of the control panel on the back of the alarm clock.

## Setting Time and Date

1. Press and hold the "Dimmer/Time Set" button until the time display flashes.
2. Use the Main Rotary Knob to adjust the hour. Press the "Dimmer/Time Set" button to confirm and move to minutes.
3. Repeat for minutes, then for the day of the week (MON, TUE, etc.).
4. Press the "Dimmer/Time Set" button again to exit time setting mode.

## Setting Alarms

The clock supports two independent alarms (Alarm 1 and Alarm 2).

1. Press the "Alarm 1" or "Alarm 2" button. The alarm time will flash.
2. Use the Main Rotary Knob to set the desired alarm hour and then minutes, pressing the alarm button to confirm each step.
3. After setting the time, you can choose the alarm sound source (e.g., buzzer, FM radio, or white noise). Use the Music Note button or FM Radio button to select.
4. Press the alarm button again to activate the alarm. An alarm icon will appear on the display.
5. To deactivate an alarm, press its corresponding alarm button until the alarm icon disappears.

## Using the Nightlight

The nightlight is located on the top surface of the clock.

1. Press the "Snooze/Light" button on top to turn the nightlight on/off.
2. To change the nightlight color, rotate the "Light Knob" on the back panel. There are 7 color options available.
3. To adjust the brightness of the nightlight, use the "Light Knob" by sliding it up or down.

# 10W Powerful Bluetooth Speaker & FM Radio



Image: The JALL Fabric Alarm Clock displaying its multi-color nightlight feature.

## White Noise Function

The clock features 25 built-in natural white noise sounds.

1. Press the "Music Note" button on the back panel to cycle through the available white noise sounds.
2. Adjust the volume using the "Volume Knob".
3. To turn off the white noise, press the "Music Note" button repeatedly until it stops, or press the "Snooze/Light" button.

# 25 Bulit-in Natural Sounds

Bulit-in 25 soothing natural sounds for effortless sleep



Image: Visual representation of the 25 built-in natural white noise sounds available on the alarm clock.

## FM Radio Operation

1. Press the "FM Radio" button to enter FM radio mode.
2. Use the Main Rotary Knob to manually tune to your desired station.
3. Adjust the volume using the "Volume Knob".
4. To turn off the FM radio, press the "FM Radio" button again.

## Bluetooth Speaker Mode

1. Press and hold the "BT (Bluetooth)" button on the back panel until the display shows "BT" and starts flashing, indicating pairing mode.
2. On your mobile device, enable Bluetooth and search for "B02" (or similar model name).
3. Select "B02" to pair. Once connected, the "BT" indicator on the clock's display will stop flashing.
4. You can now play audio from your device through the JALL Fabric Alarm Clock's speaker.

5. Adjust the volume using the "Volume Knob" on the clock or your connected device.
6. To disconnect, press and hold the "BT" button again.

Your browser does not support the video tag.

Video: An overview of the JALL Fabric Alarm Clock's features, including Bluetooth connectivity, wireless charging, and white noise functions.

## Wireless Charging

The top surface of the clock features a 10W fast wireless charging pad.

1. Place your Qi-compatible smartphone or other device directly on the charging pad, ensuring it is centered over the lightning bolt icon.
2. The device's screen should indicate that charging has begun.
3. For optimal charging, ensure there are no metallic objects or thick cases between your device and the charging pad.



Image: The JALL Fabric Alarm Clock demonstrating its wireless charging capability with a smartphone placed on top.

## USB Charging Port

An additional USB-A charging port is located on the back panel for wired charging of devices.

1. Connect your device's USB charging cable to the USB port on the back of the alarm clock.
2. Connect the other end of the cable to your device. Charging will begin automatically.

# Five-in-One



Wireless  
Charger



10W  
Speaker



Alarm  
Clock



Night  
Light



FM  
Radio



Image: The JALL Fabric Alarm Clock simultaneously charging a smartphone wirelessly and a smartwatch via its USB port.

## Display Dimmer

The display brightness can be adjusted manually or automatically.

1. **Manual Dimming:** Press the "Dimmer/Time Set" button repeatedly to cycle through brightness levels (0-100%).
2. **Auto Dimming:** Press the "Auto Dimmer" button to enable or disable automatic dimming. When enabled, the display will automatically dim between 10:00 PM and 7:00 AM.



## Auto dimming with fixed time



Has 4 levels of brightness adjustment



Image: Comparison of the JALL Fabric Alarm Clock's display brightness in morning and night settings, illustrating the auto-dimming feature.

## MAINTENANCE

### Cleaning

To clean the unit, wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.

### Storage

If storing the alarm clock for an extended period, unplug it from the power source and keep it in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

### No Power/Display Off

- Ensure the power adapter is securely connected to both the alarm clock and a working wall outlet.
- Check if the wall outlet is functioning by plugging in another device.

## Wireless Charging Not Working

- Verify that your device is Qi-compatible.
- Ensure your device is centered correctly on the charging pad.
- Remove any thick phone cases or metallic objects that may interfere with charging.

## Bluetooth Pairing Issues

- Ensure the alarm clock is in Bluetooth pairing mode (flashing "BT" on display).
- Make sure Bluetooth is enabled on your mobile device.
- Move your device closer to the alarm clock.
- Try unpairing and re-pairing the device.

## Poor FM Radio Reception

- Adjust the position of the alarm clock to improve signal reception.
- Ensure there are no large electronic devices nearby that might cause interference.

## Alarm Not Sounding

- Verify that the alarm is activated (alarm icon visible on display).
- Check the alarm volume setting.
- Ensure the alarm time is set correctly (AM/PM).

## SPECIFICATIONS

Feature	Detail
Brand	JALL
Model	B02
Color	Gray
Display Type	Digital LED
Product Dimensions	4.2"W x 3.1"H
Power Source	Corded Electric (Input 12V)
Wireless Charging Output	10W Fast Wireless Charging
USB Charging Port	Yes (Standard USB-A)
Speaker Output	10W Stereo Bluetooth Speaker
FM Radio	Yes
White Noise Sounds	25 Built-in Natural Sounds
Nightlight Colors	7 Color Options


Display Dimmer	0-100% Manual & Auto Dimming
Time Memory	Yes (Retains settings when unplugged)

## WARRANTY AND SUPPORT

JALL products are manufactured with high-quality materials and craftsmanship. For specific warranty details and support inquiries, please refer to the warranty card included with your product or visit the official JALL website. Keep your purchase receipt as proof of purchase for any warranty claims.


For technical assistance or customer service, please contact JALL support through the contact information provided in your product packaging or on the official JALL brand store on Amazon: [JALL Store](#).

### Documents - JALL – B02

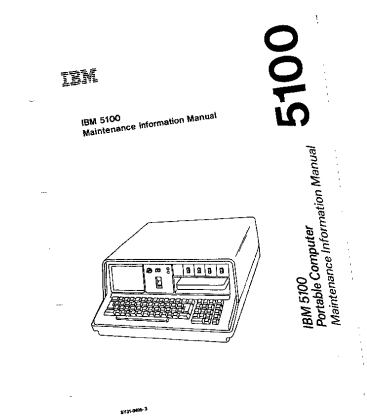


[\[pdf\]](#) User Manual

IBM 5100 maintenance manual rescanned by Marcus Bennett maben homeip net static S100 ||| ,MaMain5t1e0n0ance nformation ua Man o o I I Fourth Edition October 1979 This is a maj ... wer on reset DOS Ground D09 Typamatic 010 Not used 011 - Keyboard lockout 012 Not used 013 -Bit 5 **B02** Not used B03 Not used B04 -Odd parity B05 -Bit 7 BOO Not used B07 -Strobe out BOB -Bit 4 BOO -Bi...  
lang:en **score:14** filesize: 11.08 M page\_count: 388 document date: 2008-07-29

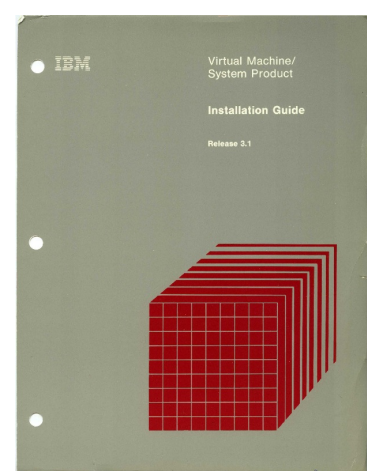

[\[pdf\]](#) Installation Guide Guide Declaration of Conformity

SC24 5237 1 VM SP Installation Guide Release 3 Feb84 doc layout org science 0 Computer Science History old hardware ibm 370  
/ ----=----- Virtual Machine/ System Product Installation Guide Release 3.1  
Se ... S R MDISK B08 3340 465 161 VMSEXT R MDISK C03 3340 286 081 VMPK01  
R \* USER TDISK NOLOG MDISK **B02** 3340 367 250 VMPK01 R \* Figure 41 Part 1 of  
13 . Sample Directory for a 3340 Device Appendix...  
lang:en **score:14** filesize: 23.71 M page\_count: 714 document date: 2010-03-20

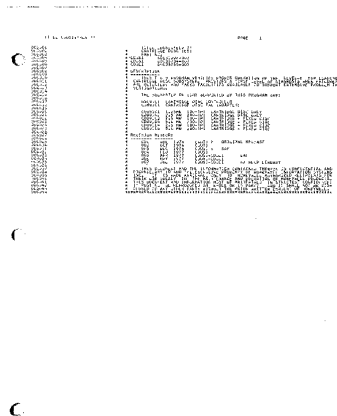


### [pdf] Guide

04 CDUS1 bitsavers.org honeywell series60level6 diag Series 60 Level 6 Test and Verification Operators

Guide AW94 Supplement informatik uni stuttgart de

. . . j 000u01 00000 OOOuOj OOOUO .. OOOUO, UUOUOb uOuU07 OOOUOIS  
 UOUU09 0000lu 000011 UuOu1 ... 13 8700 0214 1 3bO 0411 91Sb78503 0000  
 1I81lv 0000 U148 69110 0000 0 10 ; OIA 1i380 OIIIC Ctl-b **b020** 097b 0b900503 0117  
 6041 E:Bbu 0619 2464 088 bD4 090U 01t9 bD4b bE.DbC4O7 1564 0910 ...  
 lang:i-klngon **score:14** filesize: 6.55 M page\_count: 52 document date: 2019-10-18

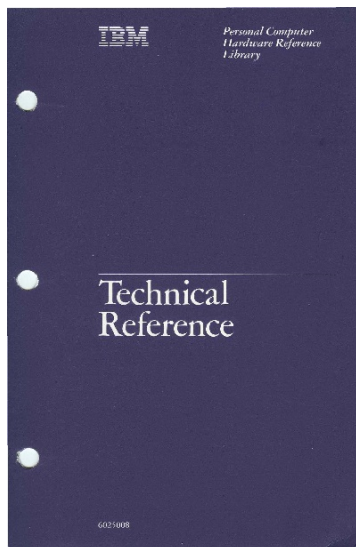

### [pdf] Instructions Declaration of Conformity Warranty

IBM PC Technical Reference bitsavers.org Appendix B Assembly Instruction Set 1 The Printer Adapter  
 responds to 5 I O instructions 2 output and 3 This option utilizes the RS232C asynchronous start stop  
 interface 6025008 Aug81 textfiles ibm pc Index of doc lagout science 0 Computer Science History old  
 hardware Bitsavers Untitled ASCII Wikipedia trailing edge informatik uni stuttgart de ftp oldskool pub  
 drivers 5150 |||

LIMITED WARRANTY The International Business Machines Corporation warrants this  
 IBM Personal Compute ... 68l 682 FB E6B3 51 E664 50 E6B5 f461 E687 24Bf 669  
 E661 E6BB 28 :9 E6BD E2FE E6BF OC40 6tl E661 6C3 **B020** 6e5 E620 6t7 58 6C8  
 S9 6e9 CF E6e.. EbeA 684000 E6eD 808 E6CF 803120001 E604 7505 E606 6601  
 608...


lang:en **score:13** filesize: 16.49 M page\_count: 396 document date: 2013-05-25



### [pdf] User Manual

IBM 5100 Maintenance Information Manual bitsavers.org This publication could contain technical  
 inaccuracies or typographical errors Use the Reader s Comment Form at back of this to make SY31 0405  
 3 Oct1979 ibm 232793e8cf07042143a58d833b39325a data2 manualslib 7 160 15956 1595577  
 ----- \_----- IBM 5100 Maintenance Information Manual o o,... It - - - - -  
 ... wer on reset DOS Ground 009 Typamatic 010 Not used 011 - Keyboard lockout  
 012 Not used 013 -Bit 5 **B02** Not used B03 Not used B04 -Odd parity B05 -Bit 7 B06  
 Not used B07 -Strobe out BOS -Bit 4 B09 -Bi...

lang:en **score:11** filesize: 34.91 M page\_count: 389 document date: 2019-01-25

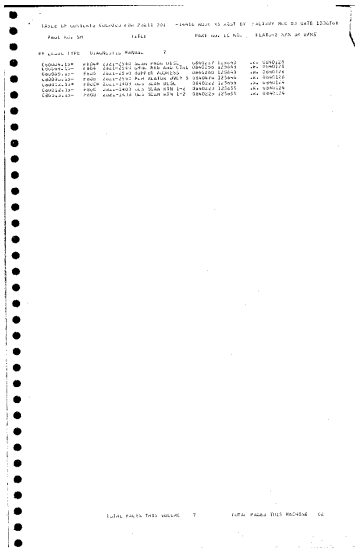

### [pdf] User Manual Instructions

t bitsavers org faoe\* 2021 1403 oC~ 5t AN uEst 0840222 i 25655 w 084012 4 2 INSTRUCTIONS TO THE OPERATOR COMMON ALL ROUTINES 8 2821 MDP textfiles ibm 28xx FE  
--- It ----- e ----- lte e --- lte -- e - , ile -t -l i i -e - e l ... 47 10 F AE6 91 04 F 844  
47 BO F BOE 96 02 F 840 47 FO F BOA OOIAEE 00IAF2 001AF6 001AFA OOIAFE  
001B02 001B06 001BOA 001BOE 001B14 001B18 OOIBIC 001B1E 001B22 91 02 F  
844 47 10 F AFE 91 02 F 849 4...  
lang:i-klinton **score:11** filesize: 33.09 M page\_count: 131 document date: 2014-07-06




### [pdf] Confidentiality Request Letter

1974 Field Service Technical Manual Dec74 bitsavers org dec fieldService informatik uni stuttgart de  
1974 FIELD SERVICE TECHNICAL MANUAL CONFIDENTIAL 1st Edition December  
1974 Copyright 1974 by Di ... 1C in BX14. BX14DA Optional See -00007 k136 Slows  
ckt Input box containa K136 response in slotB02 K578 K578- AC Input 00002 Module  
Optional uAle.. input At: signals Etch Rev. Decreases ...  
lang:en **score:10** filesize: 37.03 M page\_count: 900 document date: 2009-09-25



### [pdf] User Manual

Lcd teler Lugege juhend enne seadme kasutamist tähelepanelikult läbi lg müüakse eraldi  
Seinapaigalduskonsoo LSW100B või LSW100BG LSW200B LSW200BG est pub agrarix net HW LG TV  
Manual |||  
EESTI KASUTUSJUHEND LCD-TELER / LED LCD-teler Lugege juhend enne  
seadme kasutamist thelepanelikult ... ub 2 2 Muusika, List 001. - B01.mp3 00:00 005.  
- B05.mp3 00:00 Valige Fotoloend. 2 Draiv1 002. - B02.mp3 00:00 3 Leheklg 1/1 003.  
- B03.mp3 00:00 Leheklg 1/1 6 004. - B04.mp3 00:00 5 Muusikal...  
lang:et **score:10** filesize: 12.57 M page\_count: 206 document date: 2010-10-07

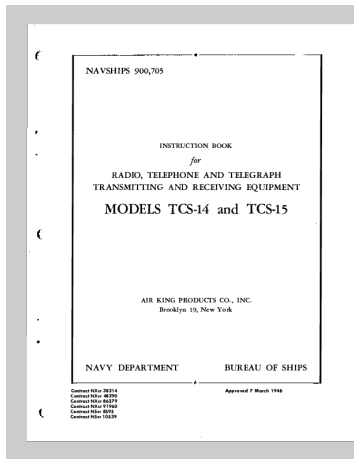


[\[pdf\]](#) User Manual

US Navy Technical Manual for TCS 14 and 15 Radio Transmitter Receiver Sets NAVSHIPS 900 705  
March 1946 2021 06 30 — heaters or tubes of low emission will cause screen volt age readings to be  
higher than normal bias voltages The Magnavox Company 2131 Pueter Road tcs14 900705 4603 navy  
radio manuals Index |||

----- r-- \* --. NAVSHIPS 900,705 INSTRUCTION BOOK for RADIO, TELEPHONE  
AND TELEGRAPH TRANSM ... EW8Lr Section III flf LENGTH AS SPECIFIED  
BELOW CONNECTOR P801, P-803, OR PSO CONNECTOR P-**B02**, P-804, OR P-  
806 CONTACTS AS SPECI FIED BELOW CONTACTS AS SPECIFIED BELOW  
.....

lang:it **score:10** filesize: 12.86 M page\_count: 153 document date: 2018-02-14

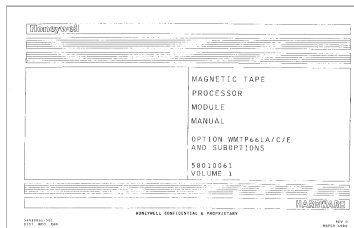

[\[pdf\]](#) User Manual

MAGNETIC TAPE PROCESSOR MODULE MANUAL 58010061 501D Magnetic Tape Processor  
WMTP66LA 198603 bitsavers.org honeywell large systems periph |||

MAGNETIC TAPE PROCESSOR MODULE MANUAL OPTION WMTP66LA/C/E AND  
SUBOPTIONS 58010061 VOLUME 1 - - - ... 2 ---IIL-O-B-0-P1-IN-----0-----P1A-9G-  
.0E-----FSI--GC-N-LA-IL-P--Nr-nA-M0-Er----- **LB02** 0 19.0 F-CLIP140T L803 0  
19.0 FIRST-BIT 100T L804 0 19.0 BLNK-REL00000T L805 0 21. 0 ...

lang:en **score:9** filesize: 20.44 M page\_count: 301 document date: 2022-12-03