



Manuals.plus /

- › Rosieres /
- › Rosieres RF9Z170IN Sublime Multifunction Oven User Manual

Rosieres RF9Z170IN

Rosieres RF9Z170IN Sublime Multifunction Oven User Manual

Model: RF9Z170IN

INTRODUCTION

Thank you for choosing the Rosieres RF9Z170IN Sublime Multifunction Oven. This appliance is designed to provide a superior cooking experience with its advanced features and spacious 105-liter capacity. To ensure safe operation, optimal performance, and longevity of your oven, please read this manual thoroughly before installation, first use, and maintenance. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, burns, or injury. This section contains critical information for your safety.

- **Electrical Safety:** Ensure the oven is properly grounded. Do not operate with a damaged power cord or plug. Disconnect power before servicing.
- **Child Safety:** Keep children away from the oven during operation and when it is cooling down. The oven surfaces can become very hot.
- **Burn Hazard:** Use oven mitts when handling hot dishes or oven racks. Do not touch hot surfaces directly.
- **Fire Hazard:** Never store flammable materials in or near the oven. Do not use water on grease fires; smother the fire or use a dry chemical or foam-type extinguisher.
- **Ventilation:** Ensure adequate ventilation around the oven as specified in the installation instructions.
- **Cleaning:** Always allow the oven to cool before cleaning. Use only recommended cleaning agents and methods.
- **Service:** Do not attempt to repair or replace any part of the oven unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.

PRODUCT OVERVIEW

The Rosieres RF9Z170IN oven features a modern design with Inox/Black finish and a spacious interior for diverse cooking needs.



Figure 1: Front view of the Rosieres RF9Z170IN Sublime Multifunction Oven, showcasing its Inox/Black finish and digital display.

Key Features:

- **105 Liter Capacity:** Large interior suitable for cooking multiple dishes or larger items.
- **Digital Touch Controls:** Intuitive interface for precise temperature and time adjustments.
- **Multifunctional Capabilities:** Offers various cooking modes including baking, roasting, and grilling.
- **Easy to Clean Enamel Interior:** Designed for hassle-free maintenance.
- **Quality Materials:** Constructed with durable stainless steel for longevity.

SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your oven. It is recommended that installation be performed by a qualified technician.

1. **Unpacking:** Carefully remove all packaging materials and accessories. Inspect the oven for any damage. Report any damage to your retailer immediately.
2. **Placement:** Install the oven in a suitable cabinet opening according to the provided installation template (not included in this manual, refer to separate installation guide). Ensure adequate clearance for ventilation.
3. **Electrical Connection:** Connect the oven to a properly grounded electrical outlet as per local electrical codes. The power supply must match the specifications listed on the oven's rating plate.
4. **First Use Preparation:** Before first use, clean the oven interior with a damp cloth. Heat the empty oven at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure the room

is well-ventilated during this process.

OPERATING INSTRUCTIONS

Your Rosieres RF9Z170IN oven features intuitive digital touch controls for selecting cooking functions, temperature, and time.

1. Setting the Clock:

- Upon first connection, the display will flash.
- Use the **+** and **-** buttons to set the current time.
- Press the **OK** button to confirm.

2. Selecting a Cooking Function:

- Press the **Function** button to cycle through available cooking modes (e.g., Bake, Roast, Grill, Convection).
- The selected function icon will illuminate on the display.

3. Setting Temperature:

- After selecting a function, press the **Temperature** button.
- Use the **+** and **-** buttons to adjust the desired temperature.
- Press **OK** to confirm.

4. Setting Cooking Time:

- Press the **Timer** button.
- Use the **+** and **-** buttons to set the cooking duration.
- Press **OK** to start cooking. The oven will automatically turn off when the time expires.

Note: Refer to specific recipe guidelines for optimal temperature and cooking times for various dishes. Always preheat the oven when recommended.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure your oven remains in excellent condition and performs efficiently.

Exterior Cleaning:

- Wipe the exterior surfaces with a soft cloth dampened with warm, soapy water.
- For stainless steel parts, use a non-abrasive stainless steel cleaner and polish in the direction of the grain.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals that can damage the finish.

Interior Cleaning (Easy to Clean Enamel):

- Allow the oven to cool completely before cleaning.
- Remove oven racks and accessories.
- Wipe spills and food residue with a damp cloth and mild detergent.
- For stubborn stains, use a non-abrasive oven cleaner specifically designed for enamel interiors. Follow the product instructions carefully.
- Rinse thoroughly with a clean, damp cloth to remove all cleaner residue.

Oven Light Replacement:

- Ensure the oven is disconnected from the power supply.
- Remove the protective glass cover.
- Unscrew the old bulb and replace it with a new, heat-resistant oven bulb of the same specifications.
- Replace the glass cover.

TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Oven does not heat.	No power supply; incorrect settings; tripped circuit breaker.	Check power connection; ensure oven is plugged in; verify settings; reset circuit breaker.
Uneven cooking.	Improper rack position; overloaded oven; door not sealed properly.	Adjust rack position; avoid overcrowding; check door seal for damage.
Oven light not working.	Bulb is loose or burnt out.	Tighten or replace the oven bulb (refer to Maintenance section).
Excessive smoke during cooking.	Food spills or grease buildup; high-fat food.	Clean oven interior thoroughly; use a drip tray for fatty foods.

If the problem persists after attempting these solutions, please contact qualified service personnel.

SPECIFICATIONS

Technical details for the Rosieres RF9Z170IN Sublime Multifunction Oven:

Feature	Detail
Brand	Rosieres
Model Number	RF9Z170IN (Internal: 33702951)
Capacity	105 Liters
Color	Inox/Black
Material	Stainless Steel
Item Weight	50 kg
Package Dimensions	97 x 67 x 57 cm
Controls	Digital Touch Controls
Interior	Easy to Clean Enamel

WARRANTY AND SUPPORT

Rosieres products are manufactured to high-quality standards. For information regarding warranty coverage, terms,

and conditions, please refer to the warranty card included with your product or visit the official Rosieres website. For technical support, spare parts, or service inquiries, please contact your local authorized Rosieres service center.

Spare part information not available or provided in the product data.