

HANLIM HL-108

HANLIM Portable CD Player HL-108 User Manual

Model: HL-108 | Brand: HANLIM

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your HANLIM Portable CD Player, Model HL-108. Please read this manual thoroughly before using the product and retain it for future reference.



Figure 1: Front view of the HANLIM Portable CD Player HL-108. This image displays the main unit with its control panel, LCD screen, and integrated handle.

2. SAFETY INSTRUCTIONS

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources or in direct sunlight.
- Do not open the casing; refer all servicing to qualified personnel.
- Keep the unit away from strong magnetic fields.
- Use only the provided power cable.
- Ensure proper ventilation to prevent overheating.

3. PACKAGE CONTENTS

Please check that all items are present:

- HANLIM Portable CD Player HL-108
- Power cable (1.2m)
- Remote control (batteries not included)
- User Manual



Figure 2: The HANLIM Portable CD Player HL-108 shown with its included accessories: the power cable, remote control, and user manual.

4. PRODUCT OVERVIEW

The HANLIM Portable CD Player HL-108 features a compact design with multiple playback options and connectivity ports.

4.1 Front Panel Controls

- **LCD Display:** Shows current mode, track information, and FM frequency.
- **MODE Button:** Switches between CD, FM, Bluetooth, USB, and AUX modes.
- **STANDBY Button:** Powers the unit on or off.
- **Play/Pause/Scan Button:** Plays/pauses media or scans FM radio stations.
- **Previous/CH- Button:** Skips to previous track/station.

- **Next/CH+ Button:** Skips to next track/station.
- **Volume Knob:** Adjusts audio volume.
- **USB Port:** For USB drive playback.
- **Headphone Jack (3.5mm):** For private listening.

4.2 Rear Panel Connections

- **AUX IN (3.5mm):** Connect external audio devices.
- **MIC Port:** Connect a microphone for singing.
- **AC Power Input:** Connect the power cable for charging or continuous power.



Figure 3: Rear view of the HANLIM Portable CD Player HL-108, highlighting the microphone input and AUX input ports.

5. SETUP

5.1 Powering On and Charging

1. Connect the provided power cable to the AC power input on the rear of the unit and plug it into a wall outlet.

2. The built-in 2000mAh battery will begin charging automatically. A full charge provides approximately 4.5 to 5 hours of playback at maximum volume.
3. Press the **STANDBY** button to power on the unit.



Figure 4: The HANLIM Portable CD Player HL-108 displaying battery charge status and indicating 4.5-5 hours of continuous playback.

6. OPERATING INSTRUCTIONS

6.1 CD Playback

1. Open the CD compartment lid.
2. Place a CD (CD/CD-R/CD-RW/MP3 format) onto the spindle, label side up.
3. Close the CD compartment lid.
4. Press the **MODE** button until "CD" is displayed.
5. Press the **Play/Pause** button to start playback.
6. Use the **Previous/Next** buttons to skip tracks.
7. **Repeat Function:** Press the repeat button on the remote control to cycle through repeat one, repeat all, or random play.

8. **Continue Playback:** The unit will resume playback from where it was last stopped, useful for language learning.

6.2 FM Radio

1. Press the **MODE** button until "FM" is displayed.
2. Press and hold the **Scan** button to automatically scan and store available FM stations (87.5-108MHz). Up to 20 stations can be stored.
3. Use the **CH-** and **CH+** buttons to navigate through stored stations.



Figure 5: The HANLIM Portable CD Player HL-108 showing the FM radio frequency on its display.

6.3 Bluetooth Connection

1. Press the **MODE** button until "Bluetooth" is displayed. The unit will enter pairing mode.
2. On your device (phone, tablet, computer), enable Bluetooth and search for "HANLIM HL-108".
3. Select the device to pair. Once connected, you will hear a confirmation sound.
4. *Note: Bluetooth headphones are not supported for connection to this CD player.*



Figure 6: The HANLIM Portable CD Player HL-108 illustrating its Bluetooth connectivity, USB port, and headphone jack.

6.4 USB Playback

1. Insert a USB flash drive (up to 32GB, supporting MP3/WMA formats) into the USB port.
2. Press the **MODE** button until "USB" is displayed.
3. Playback will start automatically. Use the **Previous/Next** buttons to navigate tracks.

6.5 AUX Input

1. Connect an external audio device (e.g., phone, computer) to the AUX IN port using a 3.5mm audio cable (not included).
2. Press the **MODE** button until "AUX" is displayed.
3. Control playback from your connected device.

6.6 Headphone Jack

For private listening, connect 3.5mm headphones to the headphone jack on the front panel.

6.7 Microphone Port

Connect a microphone (not included) to the MIC port on the rear panel for singing along to music.

6.8 Sound Settings (Equalizer)

The unit offers 5 sound qualities: Pop, Jazz, Rock, Classical, and Flat. Use the EQ button on the remote control to cycle through these modes and adjust the audio output to your preference.

7. MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Clean dirty CDs with a soft, lint-free cloth, wiping from the center outwards.
- **Battery Care:** For optimal battery life, avoid fully discharging the battery frequently. If storing for extended periods, charge the battery to about 50% every few months.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Battery is depleted or power cable is not connected.	Connect the power cable and allow the battery to charge, or operate directly from AC power.
No sound.	Volume is too low, headphones connected, or incorrect mode selected.	Increase volume, disconnect headphones, or ensure the correct input mode (CD, FM, BT, USB, AUX) is selected.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly.	Clean the CD, try a different CD, or reinsert the CD correctly. Ensure the CD compartment is fully closed.
Bluetooth pairing fails.	Device is too far, Bluetooth is off on the device, or unit is not in pairing mode.	Ensure the unit is in Bluetooth mode, your device's Bluetooth is on, and they are within range. Try restarting both devices.
FM radio reception is poor.	Weak signal or antenna position.	Adjust the unit's position or extend the antenna for better reception.

9. SPECIFICATIONS

Feature	Specification
Brand	HANLIM
Model	HL-108
Product Dimensions	15.5 x 20.5 x 16 cm (6.1 x 8.1 x 6.3 inches)
Item Weight	1.7 kg (3.75 lbs)



Feature	Specification
Power Output	20W
Battery	Built-in 2000mAh rechargeable Lithium Ion
Battery Life	Up to 5 hours (at maximum volume)
Supported CD Formats	CD, CD-R, CD-RW, MP3
FM Radio Frequency	87.5-108 MHz
USB Support	Up to 32GB, MP3/WMA formats
Connectivity	Bluetooth, USB, AUX (3.5mm), Headphone Jack (3.5mm), Microphone Port
Display Type	LCD
Special Features	Bluetooth, CD-R/RW Compatible, Equalizer, Portable, Rechargeable




10. WARRANTY AND SUPPORT

This HANLIM product comes with a **one-year warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

For technical support, warranty claims, or service inquiries, please contact your retailer or the HANLIM customer service department through the contact information provided at the point of purchase.

Related Documents - HL-108

	<p>HANLIM HL-616 CD Micro System User Manual</p> <p>User manual for the HANLIM HL-616 CD Micro System, detailing its features, setup, operation for radio, CD, USB, and Bluetooth, troubleshooting, maintenance, and warranty information.</p>
	<p>Car FM Transmitter MP3 Player: Specifications and Operation Guide</p> <p>Comprehensive guide to using your Car FM Transmitter MP3 Player. Covers FCC compliance, device specifications including voltage, USB output, music formats, FM frequencies, and step-by-step basic operation instructions for optimal audio performance.</p>

 <p>stealthRO150™ Customized Reverse Osmosis Filter</p> <p>User Manual HydroLogic™ Precision Water Systems</p>	<p>HydroLogic StealthRO150 User Manual: Customized Reverse Osmosis Filter</p> <p>This user manual provides comprehensive instructions for the HydroLogic StealthRO150 Customized Reverse Osmosis Filter, covering setup, filter replacement, maintenance, troubleshooting, and technical specifications. Designed for hydroponic and horticultural applications, it details how to achieve optimal water purification.</p>
 <p>Lenco</p> <p>Xemio-668 / MP-108</p> <p>User Manual: MP-108 player with 8GB memory (1GB card) Detailed troubleshooting: MP-108 player with 8GB memory (1GB card) Detailed troubleshooting: MP-108 player with 8GB memory (1GB card) Detailed troubleshooting: MP-108 player with 8GB memory (1GB card) Manual de usuario: reproducción de MP-108 con memoria interna 8GB y 1GB</p>	<p>Lenco Xemio-668 / MP-108 User Manual</p> <p>Comprehensive user manual for the Lenco Xemio-668 and MP-108 portable media players, detailing setup, operation, features, safety, and troubleshooting.</p>
 <p>TONER BANK</p> <p>Instructions For Toner Cartridge</p> <p>Kind reminder: Reading before installation can better use the product</p> <p>Storage</p> <ul style="list-style-type: none">Store in a dry and cool placeKeep in a dry and cool placeKeep in a dry and cool place	<p>Toner Bank Instructions for Toner Cartridge</p> <p>Comprehensive instructions for Toner Bank toner cartridges, including storage guidelines, compatible printer models, and essential security steps for installation.</p>