



[Manuals.plus](#) /

> [AIDITIYMI](#) /

> AIDITIYMI BN59-01388A/BN59-01388H/BN59-01393C Replacement IR Remote Control User Manual for Samsung CU7000/CU7000D Series 4K Smart TVs

AIDITIYMI BN59-01388A, BN59-01388H, BN59-01393C

AIDITIYMI Replacement IR Remote Control User Manual

Models: BN59-01388A, BN59-01388H, BN59-01393C

INTRODUCTION

This manual provides instructions for the AIDITIYMI replacement IR remote control, designed for use with various Samsung Crystal UHD 4K Smart NEO QLED LED TVs from the CU7000 and CU7000D Series (2023 Models). This remote functions as a direct replacement and does not require any programming or pairing.

Compatible Samsung TV Models include:

- UN43CU7000FXZA, UN50CU7000FXZA, UN50CU7000DXZA
- UN55CU7000FXZA, UN55CU7000DXZA, UN58CU7000FXZA, UN58CU7000DXZA
- UN65CU7000FXZA, UN65CU7000DXZA, UN70CU7000FXZA, UN70CU7000DXZA
- UN75CU7000FXZA, UN75CU7000DXZA, UN85CU7000FXZA, UN85CU7000DXZA




A person's hand is shown holding the black remote control, aiming it towards a modern flat-screen television. The TV displays a vibrant image, illustrating the remote in active use.

SETUP

Installing Batteries

This remote control operates using two AAA alkaline batteries (not included). No programming or pairing is required; simply insert the batteries correctly, and the remote will be ready for use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

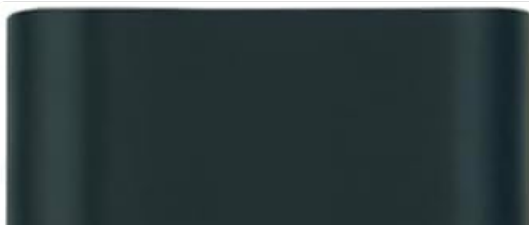





The back of the remote control, with the battery cover slid off, showing the two compartments for AAA batteries. Polarity markings (+/-) are visible inside each slot.

OPERATING INSTRUCTIONS

Basic Functions

Once batteries are installed, point the remote control directly at your Samsung TV. The remote uses infrared (IR) technology, so ensure there are no obstructions between the remote and the TV's IR receiver.





A direct front view of the remote control, displaying its full button layout. Key buttons include Power, Source, Number Pad, Navigation Pad, Volume, Channel, Home, Back, Play/Pause, and dedicated app buttons for Netflix, Samsung TV Plus, Prime Video, and Disney+.

The remote features standard buttons for TV control:

- **Power Button:** Turns the TV on or off.
- **Source Button:** Changes the input source (HDMI, AV, etc.).
- **Number Pad (123):** Accesses the on-screen numeric keypad for channel entry or other functions.
- **Navigation Pad:** Use the directional arrows (Up, Down, Left, Right) and the central OK/Enter button to navigate menus and select items.
- **Volume Buttons (+/-):** Adjusts the TV's volume.
- **Channel Buttons (Up/Down):** Changes TV channels.
- **Home Button:** Returns to the TV's Smart Hub or main menu.
- **Back Button:** Returns to the previous screen or menu.
- **Play/Pause, Fast Forward, Rewind:** Control media playback.
- **Dedicated App Buttons:** Quick access to streaming services like Netflix, Samsung TV Plus, Prime Video, and Disney+.

The maximum effective range for this remote control is approximately 32 feet (10 meters).

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control periodically with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common problems and solutions:

- **Remote is not responding:**
 - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with new AAA alkaline batteries if necessary.
 - Ensure there is a clear line of sight between the remote control and the TV's IR receiver. Remove any obstructions.
 - Verify that the TV is powered on and not in standby mode.
- **Buttons are not working or are sticky:**
 - Clean the remote control as described in the Maintenance section. Dirt or debris might be interfering with button contacts.
 - If only specific buttons are not working, the remote may be damaged.
- **Remote range is reduced:**
 - Replace the batteries with fresh ones. Low battery power can reduce the remote's effective range.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

If these steps do not resolve the issue, the remote control may require replacement.

SPECIFICATIONS





A visual representation of the remote control's physical dimensions, indicating a length of 16.2 cm (6.38 inches) and a width of 3.5 cm (1.38 inches).

Feature	Detail
Brand	AIDITIYMI
Model Numbers	BN59-01388A, BN59-01388H, BN59-01393C
Compatible Devices	Samsung CU7000/CU7000D Series Crystal UHD 4K Smart TVs
Connectivity Technology	Infrared (IR)
Battery Type	2 x AAA Alkaline Batteries (not included)
Maximum Range	32 Feet (approx. 10 meters)
Controller Type	Button Control
Button Quantity	18

Color	Black
Item Weight	0.18 Pounds
Item Dimensions (L x W x H)	8"L x 2"W x 0.6"H (approx. 20.3cm L x 5.1cm W x 1.5cm H)

WARRANTY

This AIDITIYMI remote control comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance or if you have questions not covered in this manual, please refer to the product listing page where you purchased the remote or contact the seller directly. Ensure you have your product model number and purchase details available when seeking support.