

Schneider SCVCO24DEC

SCHNEIDER SCVCO24DEC Dual Spot Steam+ Water and Steam Pressure Cleaner User Manual

INTRODUCTION

Welcome to the user manual for your new SCHNEIDER SCVCO24DEC Dual Spot Steam+ cleaner. This powerful and versatile appliance is designed for deep cleaning various surfaces using a combination of water and steam. Please read this manual thoroughly before first use to ensure safe and efficient operation, and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before filling, emptying, or cleaning.
- Do not immerse the appliance in water or other liquids.
- Keep children and pets away from the appliance during operation.
- Use only clean water in the clean water tank. Do not add detergents or chemicals unless specifically designed for this appliance and approved by Schneider.
- Steam is hot. Avoid direct contact with skin or eyes. Use caution when operating the steam function.
- Do not operate the appliance if the power cord or plug is damaged.
- Ensure proper ventilation when using the appliance in enclosed spaces.
- Do not block any ventilation openings.
- Store the appliance in a dry, safe place when not in use.
- This appliance is for household use only.

PRODUCT OVERVIEW

Components

Familiarize yourself with the main components of your SCHNEIDER SCVCO24DEC cleaner.



Figure 1: Main unit of the SCHNEIDER SCVCO24DEC Dual Spot Steam+ cleaner. This image shows the compact design with the control panel and integrated hose storage.



Figure 2: The cleaner with its clean water tank (1.6L) and dirty water recovery tank (1.4L) clearly visible, ready for filling or

The appliance consists of:

- Main Unit with Control Panel
- Clean Water Tank (1.6L capacity)
- Dirty Water Recovery Tank (1.4L capacity)
- Flexible Hose (1.5m length)
- Cleaning Nozzle/Head
- Power Cord

SETUP AND PREPARATION

1. **Unpack the Appliance:** Carefully remove all packaging materials and ensure all components are present.
2. **Position the Appliance:** Place the cleaner on a stable, flat surface near a power outlet.
3. **Fill the Clean Water Tank:**
 - Remove the clean water tank from the main unit.
 - Fill the tank with clean tap water. For optimal steam performance, distilled or demineralized water is recommended to prevent mineral buildup. Do not exceed the maximum fill line.
 - Securely reattach the clean water tank to the main unit.
4. **Ensure Dirty Water Tank is Empty:** Verify that the dirty water recovery tank is empty and properly installed before starting.
5. **Connect the Hose and Nozzle:** Attach the flexible hose to the main unit and the desired cleaning nozzle to the end of the hose, ensuring a secure connection.
6. **Plug In:** Insert the power plug into a suitable electrical outlet (230V).

OPERATING INSTRUCTIONS

Your SCHNEIDER SCVCO24DEC cleaner offers multiple cleaning modes for various surfaces.

Powering On

Press the power button on the control panel to turn on the appliance. The indicator light will illuminate.

Selecting Cleaning Mode

The appliance features modes for cold water, hot water, and steam. Select the desired mode using the control panel buttons:

- **Cold Water:** For general cleaning and rinsing.
- **Hot Water:** For enhanced cleaning power on stubborn stains.
- **Steam:** For deep sanitization and loosening tough dirt. Allow a few moments for the appliance to heat up and produce steam.



Figure 3: Demonstrating the steam function with the cleaning nozzle. Steam is released for deep cleaning and sanitization.

Cleaning Surfaces

Hold the cleaning nozzle firmly and move it slowly over the surface to be cleaned. For best results:

- **For Stains:** Apply steam or water directly to the stain, then use the suction function to extract the liquid and dirt.
- **For Carpets and Upholstery:** Work in small sections, overlapping passes. Do not oversaturate the fabric.
- **For Car Interiors:** Use the appropriate nozzle for tight spaces and upholstery.



Figure 4: The cleaner being used to clean the interior of a car, highlighting its versatility for automotive upholstery and carpets.



Figure 5: A user cleaning a carpet with the appliance, demonstrating its effectiveness on floor coverings.

Finishing Cleaning

When finished, turn off the appliance by pressing the power button and unplug it from the power outlet.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your cleaner.

1. Empty and Clean Dirty Water Tank:

- After each use, remove the dirty water recovery tank.
- Carefully empty the dirty water into a drain.
- Rinse the tank thoroughly with clean water and allow it to air dry before reattaching.

2. **Rinse Clean Water Tank:** If any cleaning solution was used, rinse the clean water tank. Otherwise, simply empty any remaining water.

3. **Clean Nozzles and Attachments:** Remove any debris or residue from the cleaning nozzle and other attachments. Rinse them under running water and allow them to dry.

4. **Wipe Down Main Unit:** Use a soft, damp cloth to wipe the exterior of the main unit. Do not use abrasive cleaners or solvents.

5. **Storage:** Store the appliance and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the hose is neatly coiled and attachments are stored securely.

TROUBLESHOOTING

If you encounter issues with your SCHNEIDER SCVCO24DEC cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; damaged power cord.	Check power plug connection. Test outlet with another device. Inspect power cord for damage. If damaged, contact customer support.
No steam or insufficient steam.	Clean water tank empty; appliance not heated up; mineral buildup.	Refill clean water tank. Allow sufficient time for heating (approx. 30-60 seconds). Descal the appliance if mineral buildup is suspected (refer to maintenance section for descaling instructions, if applicable, or contact support).
No suction or weak suction.	Dirty water tank full; hose/nozzle clogged; dirty water tank not properly sealed.	Empty dirty water tank. Check hose and nozzle for blockages and clear them. Ensure dirty water tank is securely latched.
Appliance stops during operation.	Overheating protection activated; clean water tank empty; dirty water tank full.	Unplug and let cool for 30 minutes. Refill clean water tank. Empty dirty water tank.
Excessive noise during operation.	Normal operating noise (78 dB); loose component.	The appliance operates at 78 dB, which is within its normal range. Ensure all tanks and attachments are securely fitted.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	SCVCO24DEC (Dual Spot Steam+)
Power	2000 Watts
Suction Force	13 KPa
Clean Water Tank Capacity	1.6 Liters
Dirty Water Tank Capacity	1.4 Liters
Hose Length	1.5 Meters
Dimensions (L x W x H)	32.5 x 22.5 x 35 cm
Weight	6.2 Kilograms
Voltage	230 Volts
Noise Level	78 dB
Special Features	Hot Water, Cold Water, Steam, Edge Precision

WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Schneider website. If you require technical assistance, spare parts, or have any questions not covered in this manual, please contact Schneider customer support.

Contact information can typically be found on the manufacturer's website or on your purchase receipt.