



[Manuals.plus](#) /

› [hofstein](#) /

› Hofstein Tabernas LED Ceiling Light Instruction Manual

**hofstein 4058383710449**

# Hofstein Tabernas LED Ceiling Light Instruction Manual

Model: 4058383710449

## INTRODUCTION

Thank you for choosing the Hofstein Tabernas LED Ceiling Light. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions carefully before installation and retain them for future reference.

The Tabernas LED Ceiling Light features a modern design with natural wood and white accents. It offers dimmable illumination with adjustable color temperature from warm white (2700 Kelvin) to cool white (6500 Kelvin), controlled conveniently via the included remote control. With an IP44 rating, this fixture is suitable for various indoor environments, including bathrooms.



Image: The Hofstein Tabernas LED Ceiling Light, showcasing its natural wood finish, white diffuser, included remote control, and IP44 splash protection rating.

## SAFETY INSTRUCTIONS

- **Electrical Installation:** Installation must be performed by a qualified electrician in accordance with local electrical codes and regulations.
- **Power Disconnection:** Always disconnect the main power supply before installation, maintenance, or cleaning to prevent electric shock.
- **Voltage:** Ensure the power supply voltage matches the fixture's requirements (230V).
- **IP44 Rating:** This fixture is splash-proof (IP44) and suitable for use in bathrooms (Zone 2 and outside zones). Do not expose it to direct water jets or immerse it in water.
- **Integrated LED:** The LED light source in this fixture is not replaceable. Do not attempt to replace the LEDs.
- **Damage:** Do not operate the fixture if any part is damaged. Contact customer support for assistance.
- **Children:** Keep packaging materials and small parts away from children.

## PACKAGE CONTENTS

Please check that all components are present and undamaged before proceeding with installation:

- 1 x Hofstein Tabernas LED Ceiling Light
- 1 x Remote Control
- Mounting Hardware (screws, wall anchors)
- 1 x Instruction Manual

## SETUP AND INSTALLATION

**Tools Required:** Screwdriver, drill, pencil, measuring tape, wire strippers.

1. **Prepare for Installation:** Ensure the main power supply to the installation area is switched off at the circuit breaker.
2. **Mark Mounting Position:** Hold the mounting bracket (usually located on the back of the fixture) against the ceiling at the desired installation point. Use a pencil to mark the drilling holes.
3. **Drill Holes:** Drill holes at the marked positions. Insert appropriate wall anchors if necessary.
4. **Secure Mounting Bracket:** Attach the mounting bracket to the ceiling using the provided screws.
5. **Electrical Connection:** Connect the household electrical wires to the terminal block on the fixture. Ensure correct polarity (Live, Neutral, Earth).
6. **Attach Fixture:** Carefully align the ceiling light with the mounting bracket and secure it in place. Follow the specific fastening mechanism (e.g., twist-lock, screws) of your fixture.
7. **Restore Power:** Once the fixture is securely installed and wired, restore power at the circuit breaker.



Image: Dimensional diagram of the ceiling light, indicating an outer diameter of 50 cm and a height of 7 cm, crucial for planning installation space.

## OPERATING INSTRUCTIONS

The Hofstein Tabernas LED Ceiling Light is operated using the included remote control.

### Remote Control Functions:

- **On/Off Button:** Press to turn the light on or off.
- **Brightness Adjustment:** Use the '+' and '-' buttons to increase or decrease the light intensity (dimming function).
- **Color Temperature Adjustment:** Use the 'K+' and 'K-' buttons (or similar symbols) to change the color temperature from warm white (2700K) to cool white (6500K).
- **Preset Modes:** Some remote controls may include preset buttons for specific color temperatures (e.g., Warm, Neutral, Cool) or brightness levels.

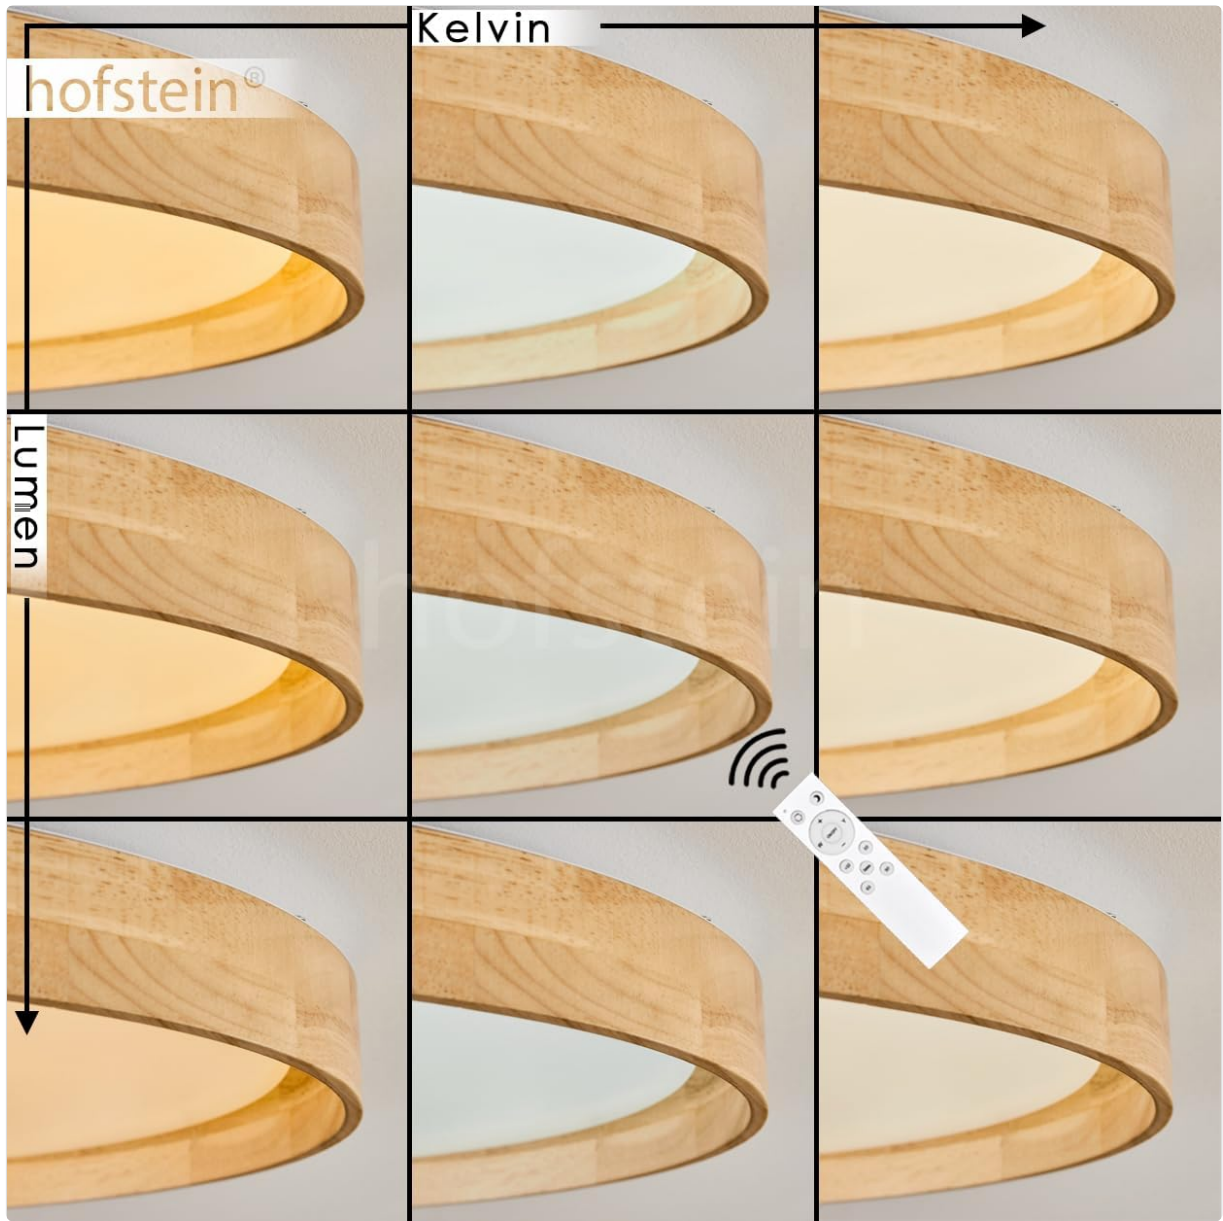


Image: Visual representation of the light's adjustable Kelvin (color temperature) and Lumen (brightness) settings, demonstrating its versatility.

### Light Appearance Examples:

hofstein®



Warm White Light (approx. 2700K)

hofstein®



Neutral White Light (approx. 4000K)

hofstein®



Cool White Light (approx. 6500K)

## MAINTENANCE

To ensure the longevity and optimal performance of your ceiling light, follow these simple maintenance guidelines:

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical components.
- **Inspection:** Periodically check the fixture for any signs of damage or loose connections. If any issues are found, disconnect power and consult a qualified electrician.
- **LED Care:** The integrated LED module requires no maintenance. Do not attempt to open the sealed LED compartment.



Image: A detailed close-up of the natural wood frame, illustrating the material quality and finish that should be maintained with gentle cleaning.

## TROUBLESHOOTING

If you encounter any issues with your Hofstein Tabernas LED Ceiling Light, please refer to the following common problems and solutions:

| Problem                              | Possible Cause   | Solution  |
|--------------------------------------|--|---|
| Light does not turn on.              | No power supply.<br>Remote control battery is dead.<br>Incorrect wiring.           | Check the circuit breaker.<br>Replace remote control batteries.<br>Verify wiring connections (consult an electrician if unsure).  |
| Light flickers or dims unexpectedly. | Unstable power supply.<br>Loose wiring connection.<br>Remote control interference. | Consult an electrician to check household wiring.<br>Ensure all connections are secure (disconnect power first).<br>Ensure clear line of sight to the fixture for the remote. |

| Problem                     | Possible Cause   | Solution  |
|-----------------------------|--|---|
| Remote control not working. | Dead batteries.<br>Obstruction between remote and fixture.<br>Remote not paired (if applicable). | Replace batteries.<br>Ensure clear line of sight.<br>Refer to remote control pairing instructions (if provided separately). |

If the problem persists after attempting these solutions, please contact Hofstein customer support.

## TECHNICAL SPECIFICATIONS

| Feature                        | Specification   |
|--------------------------------|---|
| Model Number                   | 4058383710449   |
| Dimensions (Diameter x Height) | Ø 50 cm x 7 cm  |
| Material                       | Wood, Metal, Plastic (diffuser)                                     |
| Color                          | Natural Wood, White   |
| Light Source                   | Integrated LED  |
| Power Consumption              | 36 Watts  |
| Luminous Flux                  | 3800 Lumens   |
| Color Temperature              | 2700 - 6500 Kelvin (Dimmable)                                       |
| Control Method                 | Remote Control (Infrared)   |
| Voltage                        | 230 Volt  |
| IP Rating                      | IP44 (Splash-proof)   |
| Energy Efficiency Class        | F   |
| Usage Environment              | Indoor (e.g., Bathroom, Dining Room, Hallway, Bedroom, Living Room) |



Image: The energy efficiency label for the product, indicating its classification as F.

## CUSTOMER SUPPORT

Hofstein is committed to customer satisfaction. If you have any questions, require assistance with installation, or experience issues with your product, please do not hesitate to contact our customer service team. We are ready to assist you with inquiries, returns, and exchanges.

For further support, please visit the Hofstein brand store or contact your retailer.

**Online Resources:** [Hofstein Brand Store](#)