

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SENCOR](#) /

› [Sencor SRV 1550WH Robot Vacuum Cleaner and Mop User Manual](#)

SENCOR SRV 1550WH

Sencor SRV 1550WH Robot Vacuum Cleaner and Mop User Manual

Model: SRV 1550WH

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Sencor SRV 1550WH Robot Vacuum Cleaner and Mop. Please read this manual thoroughly before operating the device and keep it for future reference.

Product Overview

The Sencor SRV 1550WH is a robot vacuum cleaner and mop designed for autonomous cleaning. It vacuums dirt and simultaneously mops dust from hard floors. Equipped with two side brushes, it effectively cleans along walls and in corners. Its ultra-slim design allows it to navigate under furniture and around obstacles. The SENCOR Smart Room technology ensures efficient movement, and the device features intelligent impact and fall sensors for safe operation.



Image 1: Sencor SRV 1550WH Robot Vacuum Cleaner and Mop with its included accessories, including the charging station, remote control, side brushes, mop pads, and cleaning tools.

Package Contents

- Robot vacuum cleaner (including two side brushes and filters)
- Battery charging station
- Cleaning accessory
- 3x textile mop sleeves
- Remote control
- 2x AAA batteries (for remote control)
- 2x spare rotating side brushes
- Power adapter
- 1x spare HEPA filter
- Cleaning brush

SAFETY INSTRUCTIONS

Before using the appliance, please read all safety warnings and instructions. Failure to follow these instructions may result in electric shock, fire, or serious injury. Keep this manual in a safe place for future reference.

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Only use the original power adapter and charging station provided by the manufacturer.
- Do not use the appliance in wet environments or near water.
- Ensure the charging station is placed on a flat, stable surface against a wall, with clear space around it.
- Remove any loose cables, small objects, or fragile items from the cleaning area before operation.
- Do not operate the robot over open flames or hot ashes.
- Do not allow the robot to pick up large objects, liquids, or burning/smoking materials.
- Regularly clean the brushes and filters to maintain optimal performance.

SETUP

1. Unpacking and Initial Inspection

Carefully remove all components from the packaging. Check for any signs of damage. Retain the packaging for future transport or storage.

2. Charging Station Placement

Place the charging station against a wall in an open area. Ensure there is at least 1 meter (3 feet) of clear space on both sides and 2 meters (6 feet) in front of the charging station for the robot to easily dock. Connect the power adapter to the charging station and plug it into a power outlet.

3. Installing Side Brushes

Turn the robot upside down. Align the side brushes with the corresponding posts on the bottom of the robot and press them down until they click into place. Ensure they are securely attached.

4. Initial Charge

Place the robot onto the charging station. Ensure the charging contacts on the robot align with those on the station. The indicator light on the robot will show its charging status. For first-time use, charge the robot for at least 5-6 hours to ensure the battery is fully conditioned.

OPERATING THE ROBOT VACUUM

1. Powering On/Off

Press and hold the power button on the robot for a few seconds to turn it on or off. Alternatively, use the power button on the remote control.



Image 2: A hand holding the remote control for the Sencor robot vacuum, with the robot and charging station visible in the background, illustrating remote operation.

2. Starting a Cleaning Cycle

Press the **"Clean"** button on the robot or the remote control to start a cleaning cycle. The robot will automatically select a cleaning path using SENCOR Smart Room technology.

3. Cleaning Modes

- **Automatic Cleaning:** The robot navigates and cleans the entire accessible area.
- **30-Minute Program:** Ideal for smaller areas or a single room, the robot cleans for approximately 30 minutes before returning to the charging station. Activate this mode via the remote control.

4. Mop Function

To use the mop function, attach a clean textile mop sleeve to the bottom of the robot. The robot will vacuum and mop simultaneously. Ensure the water tank (if applicable, though not explicitly mentioned for this model, it's implied by "laveur") is filled if a wet mop is desired. For this model, it uses an antistatic mop for dust wiping.



Image 3: The Sencor robot vacuum cleaner actively mopping a hard floor, leaving a clean path behind it.

5. Automatic Docking and Charging

When the battery is low or a cleaning cycle is complete, the robot will automatically return to its charging station. Ensure the charging station is accessible and powered on.



Image 4: The Sencor robot vacuum cleaner moving from a carpeted area to a hard floor, demonstrating its ability to clean different surfaces and pick up debris.



Image 5: The Sencor robot vacuum cleaner operating under a sofa, highlighting its ultra-slim 7 cm design for accessing hard-to-reach areas.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your robot vacuum.

1. Emptying the Dust Bin

Press the release button to remove the dust bin. Open the dust bin cover and empty its contents into a trash can. It is recommended to empty the dust bin after each cleaning cycle.

2. Cleaning/Replacing Filters

Remove the HEPA filter and primary filter from the dust bin. Tap the filters gently to remove dust. The HEPA filter is not washable; replace it every 3-6 months depending on usage. The primary filter can be rinsed with water and air-dried completely before reinstallation.

3. Cleaning Side Brushes

Periodically remove the side brushes by pulling them upwards. Use the provided cleaning brush or a pair of scissors to remove any tangled hair or debris. Reinstall them securely.

4. Cleaning Mop Pads

Remove the textile mop sleeve after each use. Rinse it thoroughly with water and allow it to air dry. Replace mop sleeves when they show signs of wear or reduced effectiveness.

5. Cleaning Sensors and Charging Contacts

Wipe the anti-drop sensors, bumper sensors, and charging contacts on both the robot and the charging station with a clean, dry cloth to ensure proper function.

TROUBLESHOOTING

If your robot vacuum encounters an issue, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not turn on.	Low battery; not charged.	Place the robot on the charging station and ensure it is fully charged.
Robot does not charge.	Charging contacts are dirty; charging station not powered.	Clean charging contacts on both robot and station. Ensure charging station is plugged in and powered.
Robot gets stuck frequently.	Obstacles in cleaning path; tangled brushes.	Clear the cleaning area of loose cables, small objects. Clean side brushes for tangled hair.
Poor cleaning performance.	Full dust bin; dirty filters; worn brushes.	Empty dust bin. Clean or replace filters. Clean or replace side brushes.
Robot does not return to charging station.	Charging station is blocked or not powered; robot too far from station.	Ensure charging station is accessible and powered. Manually place robot near station to assist docking.

SPECIFICATIONS

Brand	SENCOR
Model Number	SRV 1550WH

Color	White
Dimensions (L x W x H)	29 x 29 x 7 cm (11.4 x 11.4 x 2.7 inches)
Weight	1.9 Kilograms (4.19 lbs)
Dust Bin Capacity	200 Milliliters
Voltage	220 Volts
Material	Plastic
Noise Level	60 Decibels
Battery Life (Runtime)	Up to 60 minutes (1 hour)
Special Features	Automatic docking, Anti-fall, Anti-collision, Automatic stop, Continuous suction, Simultaneous suction and cleaning, Dirt detection sensor, Logical navigation, Programmable, Pet hair pickup, Easy-to-empty dirt container, Cordless, Bagless, Low noise level, Washable primary filter, HEPA filter.
Filter Type	HEPA
Controller Type	Remote Control

WARRANTY AND SUPPORT

Sencor offers a satisfaction guarantee for this product. Please refer to your purchase documentation for specific warranty terms and conditions.

- **Satisfaction Guarantee:** A 30-day satisfaction guarantee is offered.
- **Spare Parts:** Information regarding the availability of spare parts is currently unavailable.
- For further assistance or technical support, please contact Sencor customer service through their official website or the contact information provided with your purchase.