

[Manuals.plus](#) /

> [Nestl](#) /

> Nestl Wicker Outdoor Furniture Set - 7 Piece Patio Dining Set (Model VDS-NB-PFW-DG-7-BR/GR) Instruction Manual

## Nestl VDS-NB-PFW-DG-7-BR/GR

# Nestl Wicker Outdoor Furniture Set - 7 Piece Patio Dining Set Instruction Manual

Model: VDS-NB-PFW-DG-7-BR/GR | Brand: Nestl

## 1. INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, maintenance, and care of your Nestl Wicker Outdoor Furniture Set. Please read all instructions carefully before assembly and use to ensure safe and proper functioning of the product.



Image 1: The Nestl 7-Piece Wicker Outdoor Dining Set, featuring a brown frame and grey cushions, arranged on a patio.

## 2. SAFETY INFORMATION

---

- Ensure all parts are securely fastened before use. Periodically check and tighten all connections.
- Do not stand on the furniture.
- Keep children and pets away from the assembly area.
- Use on a flat, stable surface to prevent tipping.
- Avoid placing hot items directly on the table surface without protection.
- Do not use harsh chemicals or abrasive cleaners, as this may damage the material.

## 3. PACKAGE CONTENTS

---

Your Nestl Wicker Outdoor Furniture Set includes the following components:

- 1 x Outdoor Sectional Sofa (Corner Bench: 70.1" W x 90.8" D x 28" H)

- 2 x Benches (46.5" W x 23.6" D x 28" H)
- 1 x Dining Table with Polywood Tabletop (52" L x 30" W x 26.5" H)
- 3 x Ottomans (15" W x 15" D x 12" H)
- Plush Seat and Back Cushions (for all seating pieces)
- Assembly Hardware and Tools (Adult Assembly Required)



Image 2: An aerial view showcasing the complete 7-piece Nestl Wicker Outdoor Dining Set, including the sectional sofa, benches, dining table, and ottomans.

## 4. SETUP AND ASSEMBLY

---

Adult assembly is required for this furniture set. All necessary tools are provided. Follow the steps below and refer to the assembly video for visual guidance.

### Dining Table Assembly Video

Your browser does not support the video tag.

Video 1: This video demonstrates the assembly process for a NALONE dining table, which shares similar construction principles with your Nestl dining table. It covers connecting table parts, attaching legs, and securing all components.

### General Assembly Tips

- Unpack all components and verify against the parts list.

- Lay out all parts on a soft, clean surface to prevent scratches.
- Do not fully tighten screws until all parts are loosely assembled. This allows for adjustment and proper alignment.
- Once all parts are in place, gradually tighten all screws evenly.



Image 3: An assembled Nestl outdoor bench with grey cushions, positioned next to a body of water, demonstrating the final look of a seating component.

## 5. OPERATING INSTRUCTIONS

---

Your Nestl Wicker Outdoor Furniture Set is designed for comfortable outdoor dining and relaxation. The set includes a dining table, sectional sofa, benches, and ottomans, providing versatile seating arrangements for up to 10 people.

- **Arrangement:** The modular design allows for various configurations to suit your patio, deck, or porch space.
- **Cushions:** Place the plush seat and back cushions on the seating units for optimal comfort.
- **Umbrella Hole:** The dining table features a center hole for an umbrella (umbrella not included). Ensure the umbrella is securely fastened and closed during windy conditions.

### Product Overview Video

Your browser does not support the video tag.

Video 2: This video provides an overview of the NALONE 7 Piece Patio Dining Set, highlighting its features and showing it in an outdoor setting. This can help visualize the Nestl set's functionality and appearance.

## 6. MAINTENANCE AND CARE

---

Proper maintenance will extend the life and appearance of your outdoor furniture set.

- **Cleaning Frame:** Wipe the wicker and galvanized steel frame with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly with water.
- **Cushion Care:** The cushion covers are removable and machine washable. Use cold water and a gentle cycle. Air dry only; do not tumble dry. Ensure cushions are completely dry before storing or replacing to prevent mildew.
- **Weather Protection:** The set is 100% waterproof and weather resistant. However, during extreme weather conditions or prolonged periods of non-use, it is recommended to cover the furniture or store cushions indoors to preserve their quality.
- **Fasteners:** Periodically check all screws and bolts to ensure they remain tight. Tighten as necessary.



Image 4: A close-up view of a hand unzipping a grey cushion cover, illustrating the removable and washable feature of the cushions.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your Nestl Wicker Outdoor Furniture Set, refer to the following common solutions:

- **Wobbly Furniture:** Check all assembly screws and bolts. Ensure they are fully tightened. Verify the furniture is placed on a level surface. Adjustable foot pads may be used to stabilize.
- **Cushion Slippage:** While not explicitly designed with anti-slip features, repositioning cushions regularly or using non-slip mats underneath can help.
- **Fading/Discoloration:** Although weather-resistant, prolonged exposure to direct sunlight can cause slight fading over time. Using furniture covers when not in use can minimize this.
- **Missing Parts:** If any parts are missing upon arrival, please contact customer support immediately for assistance.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Number	VDS-NB-PFW-DG-7-BR/GR
Material	Wicker (Polyrattan Braid), Galvanized Steel Frame, Polywood Tabletop
Color	Brown Frame/Grey Cushions
Corner Bench Dimensions	70.1" W x 90.8" D x 28" H
Bench Dimensions (each)	46.5" W x 23.6" D x 28" H
Dining Table Dimensions	52" L x 30" W x 26.5" H
Ottoman Dimensions (each)	15" W x 15" D x 12" H
Item Weight	8.9 pounds (individual component weight may vary)
Assembly	Adult Assembly Required, Tools Provided
Care Instructions	Wipe with Damp Cloth; Removable, Machine Washable Cushion Covers

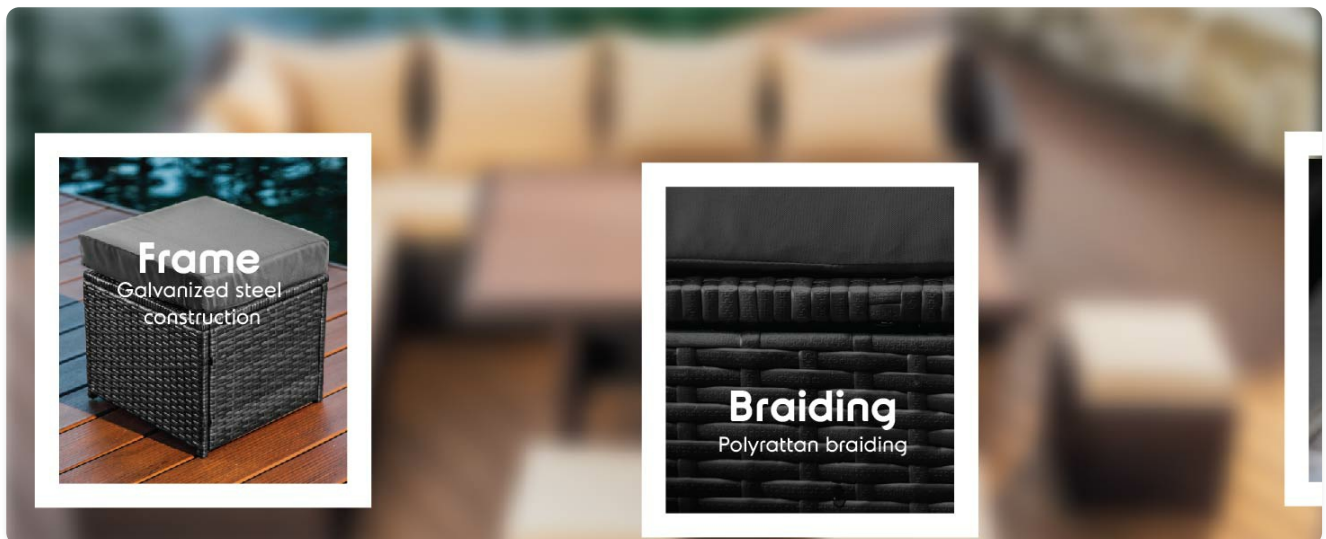


Image 5: A visual representation of the sizing chart for the Nestl Wicker Outdoor Furniture Set, detailing the dimensions of the corner bench, benches, dining table, and ottomans.

## 9. WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your Nestl Wicker Outdoor Furniture Set, please contact Nestl customer service. Please have your model number (VDS-NB-PFW-DG-7-BR/GR) and purchase information ready when contacting support.

While specific warranty details are not provided in this manual, standard manufacturer warranties typically cover defects in materials and workmanship under normal use. Please refer to your purchase documentation or contact Nestl customer service for detailed warranty information.