

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Diofox](#) /
- › [Diofox M508 MP3 Player User Manual](#)

## Diofox M508

# Diofox M508 MP3 Player User Manual

Model: M508

## 1. INTRODUCTION

---

Welcome to the user manual for your new Diofox M508 MP3 Player. This device is a versatile portable media player featuring a 5.5-inch high-definition touchscreen, Bluetooth, Wi-Fi connectivity, and an Android operating system. This manual provides essential information for setting up, operating, and maintaining your device to ensure optimal performance.

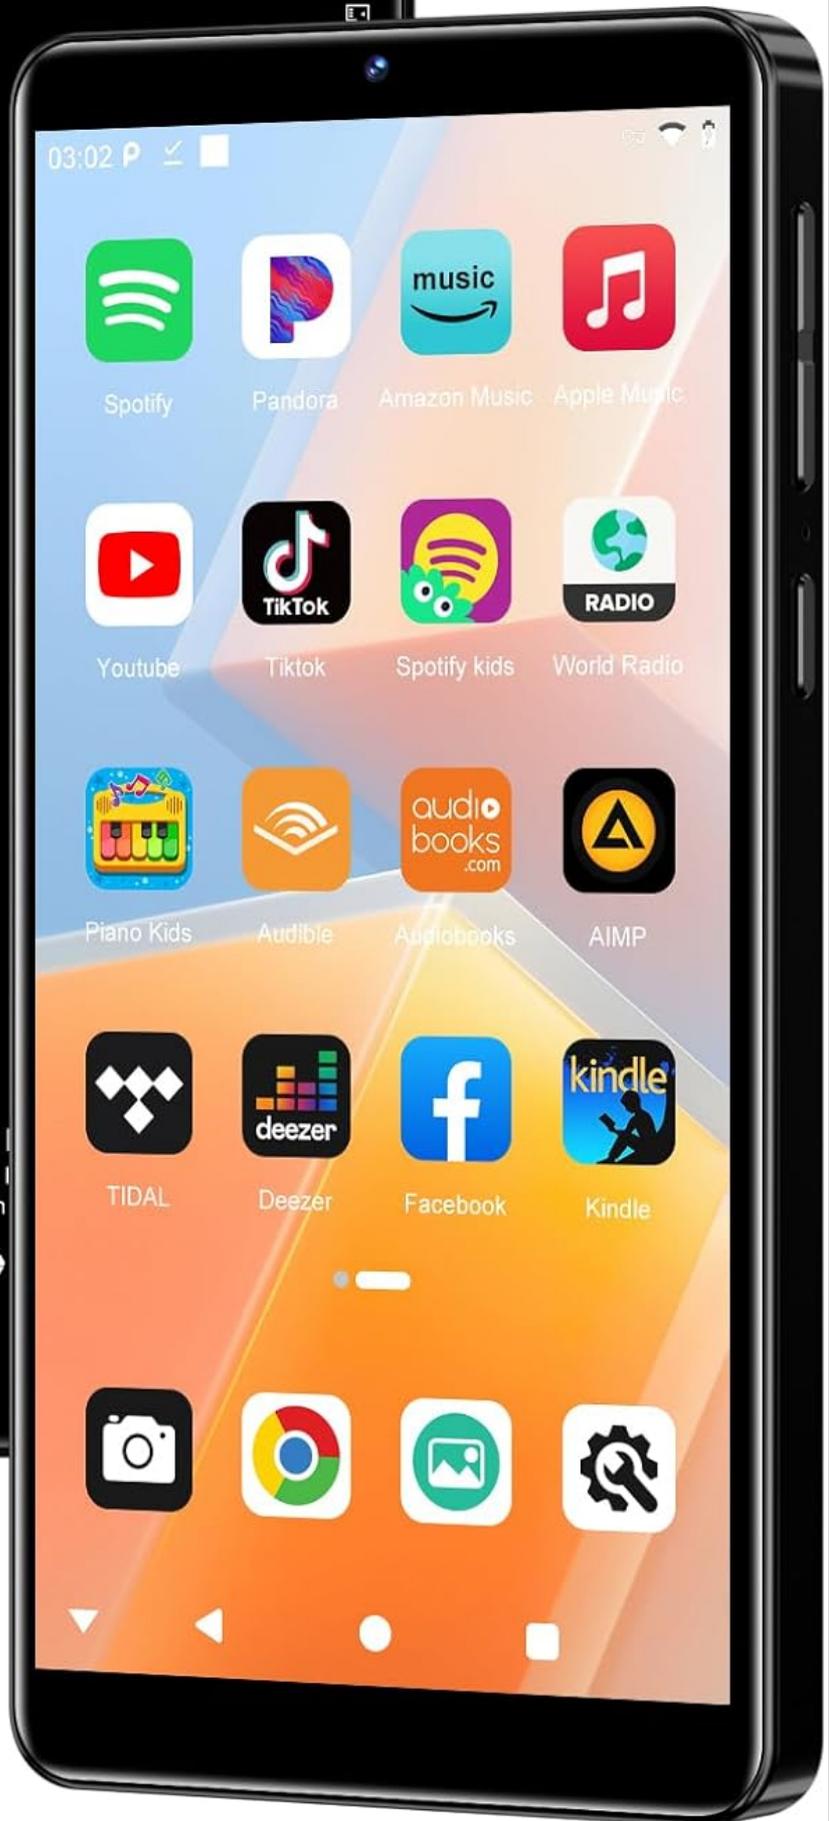


Image 1.1: Front and rear view of the Diofox M508 MP3 Player, showcasing its sleek design and camera placement.

## 2. PRODUCT OVERVIEW

### 2.1 Key Features

- **High-Resolution Cameras:** Equipped with a 5MP front camera and a 13MP rear camera for capturing photos and videos.
- **Powerful Performance:** Runs on Android 9.0 with 3GB RAM and 16GB internal storage, expandable with an included 64GB memory card.
- **Pre-installed Applications:** Compatible with popular apps like Amazon Music, Spotify, YouTube, TikTok, Pandora, Deezer, Facebook, Kindle, and Audible for online and offline use.
- **Vivid Display:** 5.5-inch HD IPS display with 720x1440 resolution, supporting various video formats (AVI, MKV, RMVB, MP4, MPG, MOV).
- **Advanced Connectivity:** Integrated Bluetooth and Wi-Fi for wireless audio streaming and internet access. Supports MP3, WAV, APE, FLAC, AAC audio formats.
- **Long Battery Life:** Features a 2500mAh battery for extended usage.
- **Parental Control:** Easy-to-use child protection features to manage usage time and installed software.

### 2.2 What's in the Box

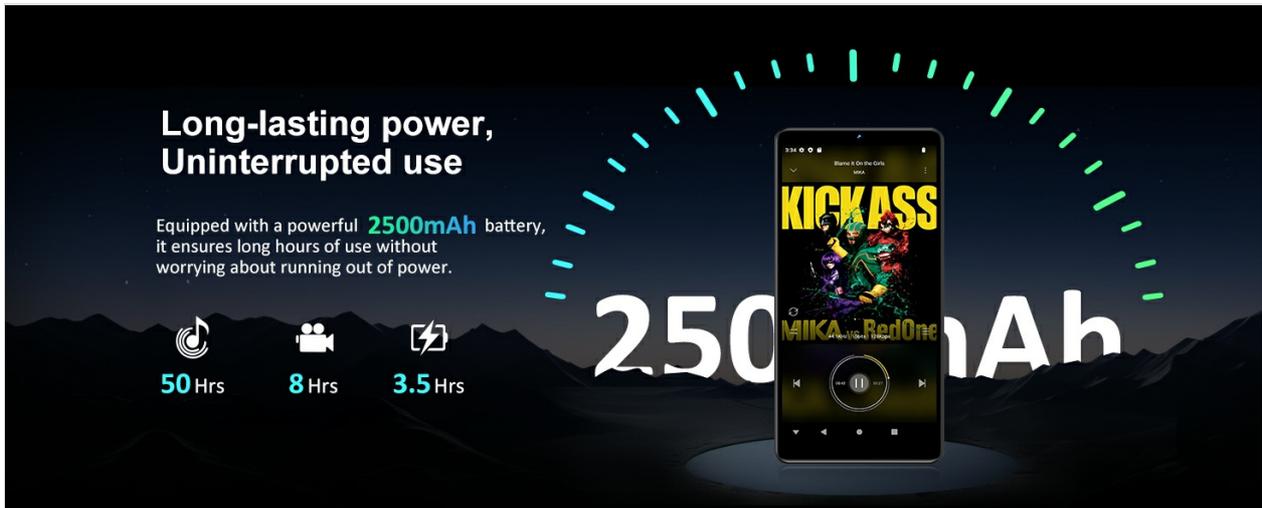


Image 2.1: Illustration of the items included in the product packaging.

- 1 x Diofox M508 16 GB Player
- 1 x 64GB SD Card
- 1 x Type-C Cable
- 1 x Wired Headphones
- 1 x Protective Case
- 1 x Protective Film
- 1 x User Manual (this document)

## 3. SETUP

## 3.1 Initial Charging

Before first use, fully charge your Diofox M508 MP3 Player. Connect the provided Type-C cable to the device's charging port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

## 3.2 Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side) until the screen illuminates.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options that appear on the screen.

## 3.3 Inserting the SD Card

The device comes with a 64GB SD card pre-installed or included separately. If it's separate, locate the SD card slot (typically on the side of the device). Carefully insert the SD card with the gold contacts facing down until it clicks into place. To remove, gently press the card until it springs out.

## 3.4 Connecting to Wi-Fi

1. From the home screen, swipe down from the top to access the Quick Settings panel.
2. Tap and hold the Wi-Fi icon to open Wi-Fi settings.
3. Toggle Wi-Fi ON if it's off.
4. Select your desired Wi-Fi network from the list.
5. Enter the network password if prompted, then tap 'Connect'.

# 4. OPERATING INSTRUCTIONS

---

## 4.1 Basic Navigation


The Diofox M508 features a responsive touchscreen. Use the following gestures:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through lists or switch between home screens.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.
- **Long Press:** To access contextual menus or move app icons.

## 4.2 Music Playback

# HiFi Lossless Sound Quality

HIFI level sound, clear restoration of a human voice, so it seem to be immersed in the concert scene.

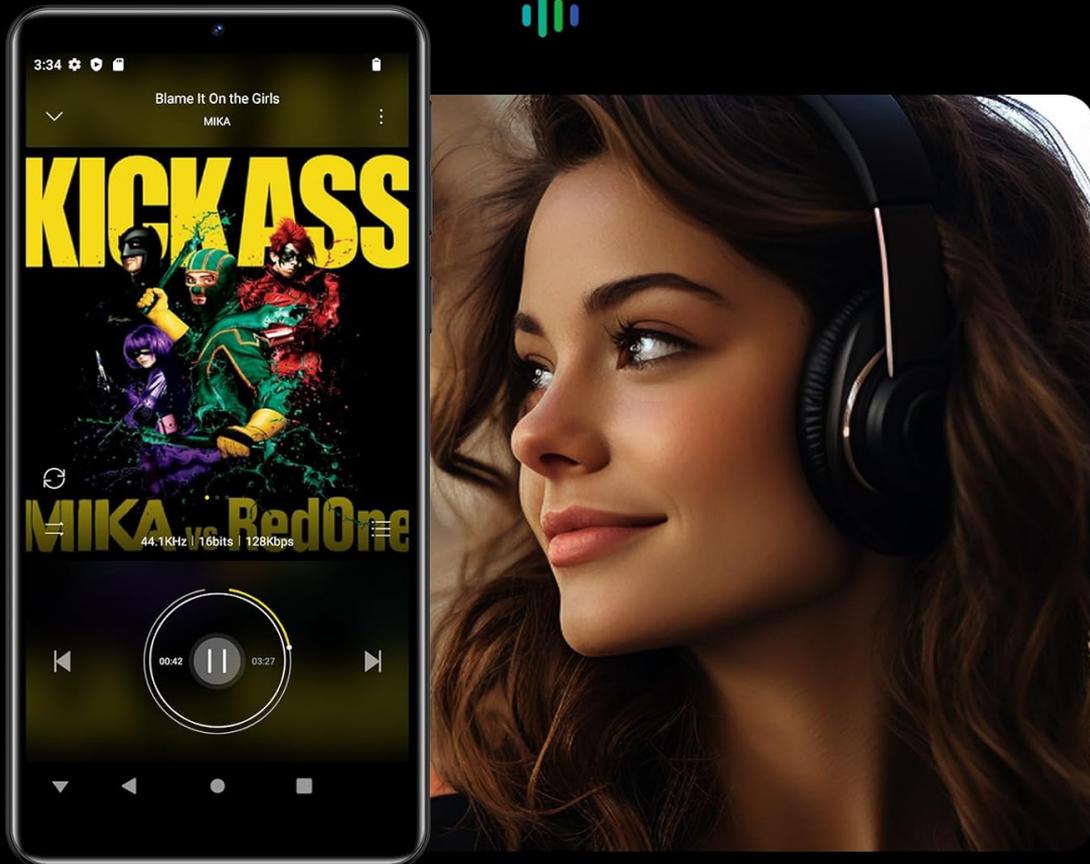

Support **MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, MP2**

*Image 4.1: The device screen showing a music player interface, emphasizing HiFi lossless sound quality. The M508 supports various audio formats including MP3, WAV, APE, FLAC, and AAC. You can play music stored on the device or stream from pre-installed apps like Spotify or Amazon Music.*

1. Open your preferred music application (e.g., 'Music' app or Spotify).
2. Browse or search for the desired audio track.
3. Tap on the track to begin playback.
4. Use the on-screen controls for play/pause, skip, and volume adjustment.

## 4.3 Video Playback

The device supports video formats such as AVI, MKV, RMVB, MP4, MPG, and MOV.

1. Open a video player application or a streaming app like YouTube.
2. Select the video you wish to watch.
3. Use the on-screen controls for playback management.

## 4.4 Camera Usage

# Create your shot with multi-cameras

The Diofox M508 boast a rear **13MP** main camera and a **5MP** front camera, making it a great expert at recording beautiful moments in life.



*Image 4.2: The device highlighting its 13MP rear camera and 5MP front camera capabilities with a sample image.*

The M508 includes a 13MP rear camera and a 5MP front camera.

1. Open the 'Camera' application from the home screen or app drawer.
2. Tap the shutter button to take a photo.
3. To record a video, switch to video mode within the camera app and tap the record button.
4. Tap the camera switch icon to toggle between the front and rear cameras.

## 4.5 Connectivity

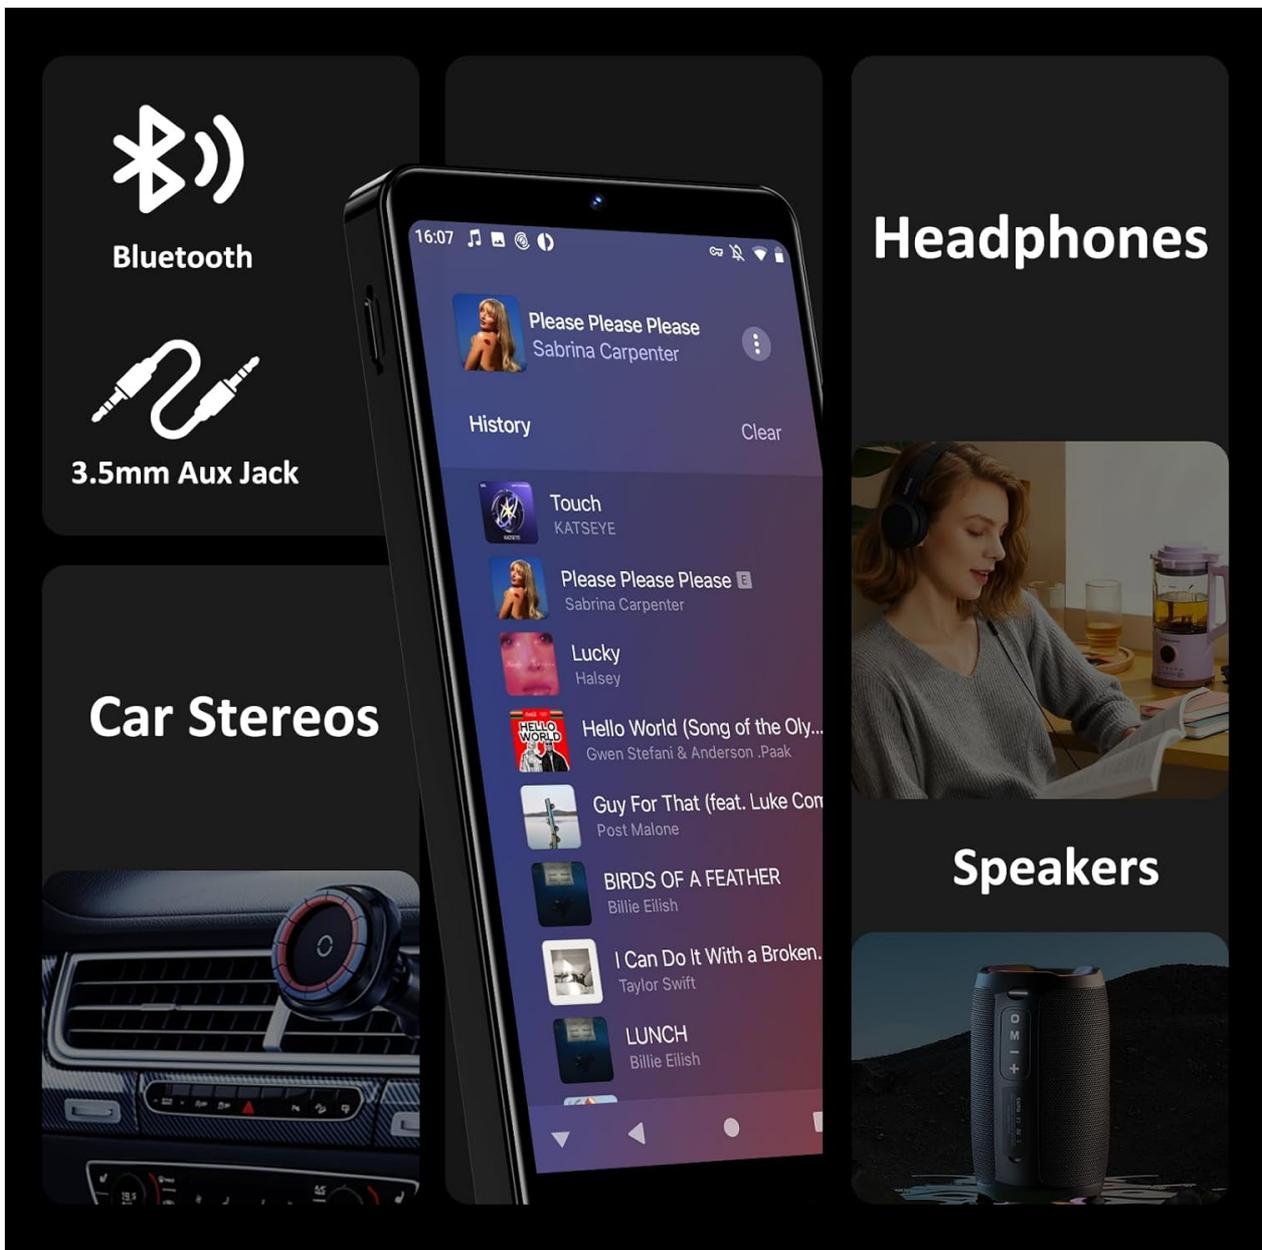


Image 4.3: The device illustrating its versatile connectivity options for audio output.

#### 4.5.1 Bluetooth Pairing

Connect your M508 to Bluetooth headphones, speakers, or car audio systems.

1. Go to 'Settings' > 'Connected devices' > 'Bluetooth'.
2. Toggle Bluetooth ON.
3. Ensure your Bluetooth accessory is in pairing mode.
4. Select your accessory from the list of available devices to pair.

#### 4.5.2 Wi-Fi Connection

Refer to section 3.4 for connecting to Wi-Fi networks.

#### 4.6 Parental Controls

# Easy parent controls

Easy-to use Parent Dashboard,  
use online parental controls to limit APP,  
screen time.

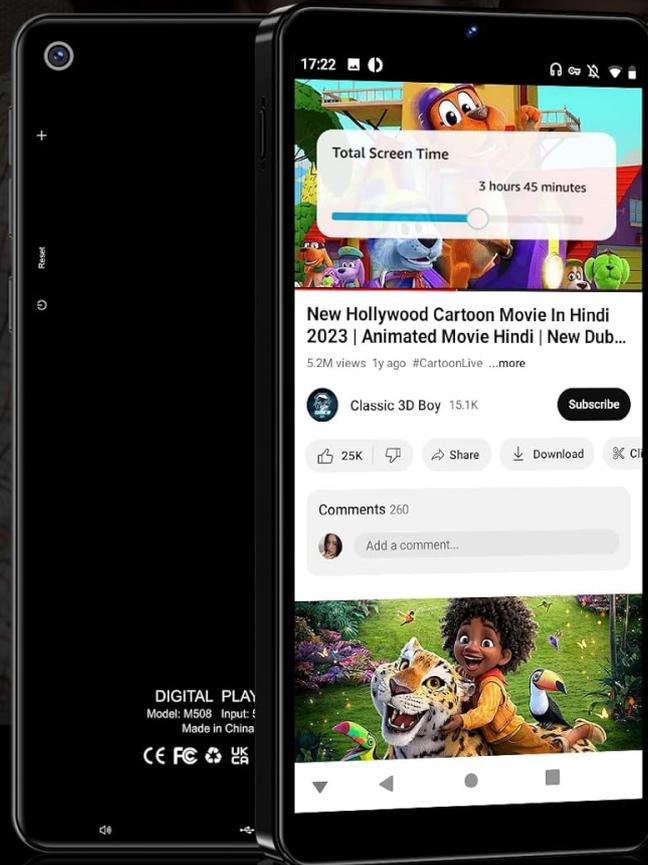


Image 4.4: The device displaying its parental control dashboard, allowing monitoring of screen time and app usage.

The parental control feature allows you to manage your child's usage.

1. Navigate to 'Settings' > 'Digital Wellbeing & parental controls'.
2. Set up a profile for your child and configure screen time limits, app restrictions, and content filters as needed.

## 5. MAINTENANCE

### 5.1 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the device. Avoid using abrasive cleaners or solvents, as they may damage the surface.

### 5.2 Battery Care

# Long lasting battery

Always energetic And on Call



Image 5.1: The device highlighting its 2500mAh battery capacity for long-lasting use.

- Avoid exposing the device to extreme temperatures.
- Do not allow the battery to fully discharge frequently.
- Use only the provided Type-C cable for charging.

## 5.3 Software Updates

Periodically check for software updates in 'Settings' > 'System' > 'System update' to ensure your device has the latest features and security patches.

## 6. TROUBLESHOOTING

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to a charger for at least 30 minutes. If still unresponsive, perform a force restart by holding the power button for 10-15 seconds.

Problem	Possible Solution
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled in settings. Verify the Wi-Fi password. Restart your Wi-Fi router. Try connecting to a different network.
Bluetooth device not pairing.	Ensure Bluetooth is enabled on both devices. Put the Bluetooth accessory into pairing mode. Make sure both devices are within range.
Poor audio quality.	Check headphone connection or Bluetooth connection. Ensure audio files are not corrupted. Try different headphones or speakers.
Device is slow or unresponsive.	Close unnecessary background applications. Clear cache of frequently used apps. Restart the device. Consider a factory reset if the issue persists (backup data first).

## 7. SPECIFICATIONS

Feature	Detail
Model Name	M508
Product Dimensions	0.3 x 2 x 2.5 inches
Item Weight	10.6 ounces
Operating System	Android 9.0
RAM	3GB
Internal Storage	16GB
Expandable Storage	64GB Micro SD card included (supports up to 1TB)
Screen Size	5.5 Inches
Display Technology	LCD, HD IPS (720x1440 resolution)
Rear Camera	13MP
Front Camera	5MP
Battery Capacity	2500mAh (Nonstandard Battery)
Connectivity Technology	Aux, Bluetooth, USB (Type-C), Wi-Fi

Feature	Detail
Supported Audio Formats	MP3, WAV, APE, FLAC, AAC
Supported Video Formats	AVI, MKV, RMVB, MP4, MPG, MOV, RM, FLV, DAT, TS
Special Features	Built-In Camera, Built-In Speaker, Equalizer, FM Radio, Hi-Res Audio, Touch Screen, Video Playback, Voice Recorder

## 8. WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Diofox customer service through their official website or the retailer where the product was purchased. Keep your proof of purchase for warranty claims.