

ASUS RT-BE82U

ASUS RT-BE82U BE6500 Dual-Band WiFi 7 Router User Manual

Model: RT-BE82U | BE6500

1. INTRODUCTION

This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your ASUS RT-BE82U BE6500 Dual-Band WiFi 7 Router. Please read this manual thoroughly before using the device to ensure optimal performance and safety.

Key Features:

- Ultrafast WiFi 7 (802.11be) dual-band speeds up to 6500 Mbps.
- Five 2.5GbE Ports for optimized wired connectivity.
- Smart AiMesh Extendable Network for whole-home seamless roaming.
- Multi-link Operation for stable internet connections and efficient data transfers.
- Commercial-Grade AiProtection Pro powered by Trend Micro for advanced network security.
- Advanced Parental Controls for managing internet activity.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- ASUS RT-BE82U Router
- RJ-45 cable
- Power adapter
- Quick Start Guide
- Warranty card

3. SETUP AND INSTALLATION

Follow these steps to set up your ASUS RT-BE82U router:

1. **Unpack the Router:** Carefully remove the router and all accessories from the packaging.
2. **Connect the Antennas:** Ensure all four external antennas are securely attached and positioned for optimal signal.
3. **Connect to the Internet:**
 - Connect one end of the provided RJ-45 cable to the WAN port (blue) on the back of the RT-BE82U router.
 - Connect the other end of the RJ-45 cable to your modem's LAN port.
4. **Power On:** Connect the power adapter to the router's DC-IN port and then plug it into a power outlet. Press the power button to turn on the router.
5. **Initial Configuration (via ASUS Router App):**
 - Download the ASUS Router app from your mobile device's app store (available on iOS and Android).
 - Open the app and follow the on-screen instructions to detect and configure your new router. This includes setting up your Wi-Fi network name (SSID) and password.
6. **Verify Connection:** Once setup is complete, check the LED indicators on the front of the router. The WAN, 2.4GHz, and 5GHz LEDs should be solid white, indicating a successful connection.



Figure 3.1: Front view of the ASUS RT-BE82U BE6500 Dual-Band WiFi 7 Router with antennas extended.



Figure 3.2: Rear view showing the 2.5GbE WAN, 2.5GbE LAN ports, USB WAN, DC-IN, Power button, and Reset button.

4. OPERATING YOUR ROUTER

4.1. Network Management via ASUS Router App

The ASUS Router app provides comprehensive control over your network. You can:

- Monitor network traffic and connected devices.
- Manage Wi-Fi settings for 2.4GHz and 5GHz bands.
- Set up guest networks for visitors.
- Configure advanced security features like AiProtection Pro.
- Implement parental controls to manage internet access for family members.

Advanced Parental Controls

Internet Activity Dashboard, Kid-Safe Preset, Content Filter, Flexible Time Scheduling



Figure 4.1: ASUS Router App interface for managing parental controls and network settings.

4.2. AiMesh System

The RT-BE82U supports ASUS AiMesh technology, allowing you to create a whole-home mesh Wi-Fi system by adding compatible ASUS routers. This extends coverage and eliminates Wi-Fi dead zones, providing seamless roaming throughout your home.

AI-boosted Smart AiMesh

Maximum Connectivity and Easy Extendable Network



Coverage up to
2,500 sq. ft.

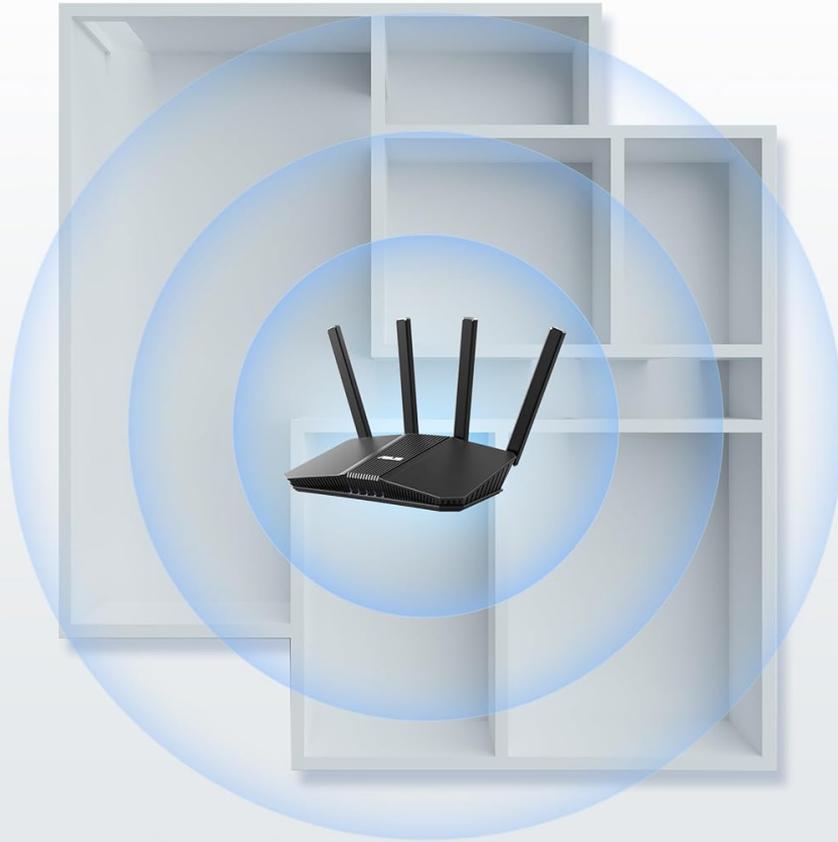


Figure 4.2: AiMesh system extending Wi-Fi coverage up to 2,500 sq. ft.

4.3. Advanced Network Security

The router includes AiProtection Pro, a commercial-grade network security suite. This feature provides real-time network protection against internet threats, malicious websites, and intrusion prevention. It also offers a one-tap security scan and Safe Browsing features.

Sustaining Incredible Future

Up to 30% PCR Plastic, Certified FSC™ Mix Packaging & Award-winning Reliability



Figure 4.3: AiProtection Pro interface within the ASUS Router App.

5. MAINTENANCE

To ensure the longevity and optimal performance of your router, consider the following maintenance tips:

- **Firmware Updates:** Regularly check for and install firmware updates via the ASUS Router app or the web interface. Updates often include security patches and performance improvements.
- **Placement:** Place the router in a central location, away from obstructions and other electronic devices that may cause interference. Ensure good airflow around the device to prevent overheating.
- **Cleaning:** Keep the router clean and free of dust. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners.
- **Restart Periodically:** A periodic restart (e.g., once a month) can help clear temporary issues and refresh network performance.

6. TROUBLESHOOTING

If you encounter issues with your router, try the following troubleshooting steps:

- **No Internet Connection:**
 - Check all cable connections (WAN, LAN, power) to ensure they are secure.

- Restart your modem and then your router.
 - Verify your internet service provider (ISP) connection is active.
- **Slow Wi-Fi Speed:**
 - Ensure your devices are connected to the 5GHz band for faster speeds, if supported.
 - Reduce interference by moving the router away from other electronics.
 - Check for bandwidth-intensive applications running in the background.
 - Consider adding an AiMesh node to extend coverage if you have dead zones.
- **Cannot Access Router Settings:**
 - Ensure your device is connected to the router's Wi-Fi network or via an Ethernet cable.
 - Try accessing the router's web interface using the default IP address (e.g., 192.168.1.1) or via the ASUS Router app.
- **Factory Reset:** If all else fails, perform a factory reset. Locate the Reset button on the back of the router (refer to Figure 3.2), press and hold it for 5-10 seconds until the power LED blinks, then release. This will restore the router to its default settings.

7. SPECIFICATIONS

Feature	Detail
Brand	ASUS
Model Name	RT-BE82U
Frequency Band Class	Dual-Band
Wireless Communication Standard	802.11be (WiFi 7), 802.11ac, 802.11ax, 802.11n
Data Transfer Rate	Up to 6500 Mbps (5764 Mbps on 5 GHz, 688 Mbps on 2.4 GHz)
Number of Ports	5 (Five 2.5GbE Ports)
Antenna Type	Fixed (4 Antennas)
Security Protocol	AiProtection, VPN, Let's Encrypt, DNS-over-TLS, SSH, Security Scan, Firewall, WPS support, WPA/WPA2/WPA3-Personal, WPA/WPA2-Enterprise, WPS
AiMesh Support	Yes (Extendable Router)
Dimensions (L x W x H)	5.8"L x 3.8"W x 9.3"H
Item Weight	1.1 Pounds

8. WARRANTY INFORMATION

The ASUS RT-BE82U BE6500 Dual-Band WiFi 7 Router comes with a **3-year warranty**. Please refer to the included Warranty Card in your package for detailed terms and conditions, including information on service and support.

9. SUPPORT

For further assistance, technical support, or to download the latest drivers and firmware, please visit the official ASUS support website or use the ASUS Router app. You can also find additional resources and FAQs on the ASUS website.

ASUS Support Website: www.asus.com/support/

ASUS Router App: Available on the Apple App Store and Google Play Store.