

SINWE 318

SINWE Karaoke Machine Model 318 User Manual

Portable Bluetooth Singing PA Speaker System with LED Lights and Wireless Microphones

				Overview	Package			
Contents	Features	Setup	Operation	Maintenance	Troubleshooting	Specifications	Support	

1. PRODUCT OVERVIEW

The SINWE Model 318 Karaoke Machine is a portable audio system designed for entertainment, offering a comprehensive solution for singing and music playback. It integrates a powerful speaker, dual wireless microphones, and dynamic LED lighting, suitable for various indoor and outdoor settings.



Figure 1.1: The SINWE Model 318 Karaoke Machine. This image displays the main unit with its integrated handle and two wireless microphones securely placed in their charging docks on top. The front panel features two speaker grilles with active LED lighting, indicating the device's readiness for use.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 1 x SINWE Model 318 Karaoke Speaker Unit
- 2 x UHF Wireless Microphones
- 1 x USB Charging Cable (for speaker unit)
- 1 x AUX Cable
- 1 x User Manual (this document)

3. KEY FEATURES

- **Superior Audio Output:** Equipped with 2*15W premium full-range speakers for crisp highs, accurate mids, and deep bass, delivering a total of 30 Watts output.
- **Dual Wireless Microphones:** Two UHF wireless microphones with advanced active noise reduction and DSP audio processor for clear vocal reproduction. Supports duet mode.
- **Versatile Connectivity:** Bluetooth 5.0 for seamless wireless connection, and support for TF Card, USB, and AUX IN for various external devices (iPhone, Android phone, iPad, TV, PC).
- **Dynamic LED Lights:** Features shining and color-shifting LED lights on the front with 3 light modes (pulsating to music, color gradient, flashing) and 9 playback modes in 10 colors.
- **Portable Design:** Lightweight unit with an integrated handle for easy transport. Includes a phone/tablet stand.
- **Long Battery Life:** Built-in 3000mAh rechargeable battery provides up to 2-3 hours of playtime. USB port also functions as a power bank.



Figure 3.1: Audio Features of the SINWE Model 318. This image illustrates the internal technology contributing to the superior sound quality, including a DSP chip for processing, HIFI sound quality, 3D surround sound capabilities, and a 2x10W power output for a total of 20W stereo sound.



Figure 3.2: LED Lighting Effects. This image showcases the diverse LED lighting options available on the SINWE Karaoke Machine, including three types of circular lights (monochrome, breathe, gradient) and nine distinct color disco light modes, designed to enhance the party atmosphere.

4. SETUP GUIDE

4.1 Initial Charging

Before first use, fully charge the karaoke machine. Connect the provided USB charging cable to the charging port on the speaker unit and a compatible USB power adapter (not included). The charging indicator will show the charging status.

4.2 Microphone Pairing

The wireless microphones are designed to connect automatically to the speaker unit when both are powered on. Ensure the microphones are charged. If pairing issues occur, turn both the speaker and microphones off, then turn them back on. For duet mode, ensure microphones are on different frequency bands (CHA and CHB) by long-pressing the "A=B" key on the microphone for 2 seconds.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the power button on the speaker unit to turn it on or off. Similarly, use the power button on each microphone to activate or deactivate them.

5.2 Bluetooth Connection

1. Turn on the SINWE Model 318 Karaoke Machine. It will automatically enter Bluetooth pairing mode.
2. On your smartphone, tablet, or other Bluetooth-enabled device, navigate to the Bluetooth settings.
3. Select "SINWE 318" (or similar name) from the list of available devices to connect.

4. Once connected, you can play music from your device through the karaoke machine.

5.3 Using Wired Connections (AUX/USB/TF Card)

- **AUX Input:** Connect an external audio source (e.g., TV, PC) using the provided AUX cable to the AUX IN port on the speaker. The machine will automatically switch to AUX mode.
- **USB Playback:** Insert a USB flash drive containing MP3 audio files into the USB port. The machine will automatically detect and play the music.
- **TF Card Playback:** Insert a TF (MicroSD) card containing MP3 audio files into the TF card slot. The machine will automatically detect and play the music.



Figure 5.1: Connectivity Options. This image details the various ways to connect audio sources to the SINWE Karaoke Machine, including AUX, microphone input, Line IN, Bluetooth, USB Flash drive, and TF Card, enabling diverse music playback and karaoke experiences.

5.4 Microphone Controls

- **Volume Control:** Use the volume buttons on the microphone to adjust your vocal volume.
- **Echo Adjustment:** Use the echo buttons on the microphone to add or reduce echo effect to your vocals.
- **Duet Mode:** To enable duet mode, ensure each microphone is set to a different frequency band (CHA and CHB). Long press the "A=B" key on the microphone for 2 seconds to switch bands. If both microphones are on the same band, only one will function.

Figure 5.2: Wireless Microphone Features. This image details the functionality of the two high-quality wireless microphones, including their automatic connection to the speaker, flexible charging options (via the speaker dock or individual Type-C port), and performance attributes such as premium sound quality, stable UHF signal, 100 feet transmission range, and 360-degree sound pickup.

5.5 LED Light Control

Press the 'LED' button on the speaker unit to cycle through the different light modes or to turn the lights on/off. The lights can pulsate to music, display a color gradient, or flash.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the karaoke machine and microphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the unit frequently. Charge the unit regularly, even if not in use for extended periods (e.g., once every 3 months).

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speaker.	Volume too low; incorrect input mode; device not connected.	Increase volume; select correct input mode (Bluetooth, AUX, USB, TF); ensure device is properly connected.
Microphones not working.	Microphones off; low battery; not paired; both on same frequency band.	Turn on microphones; charge microphones; re-pair microphones; ensure microphones are on different frequency bands (CHA/CHB) for duet.
Bluetooth connection unstable.	Device too far; interference; low battery.	Move device closer to speaker; avoid obstacles; charge speaker and device.
LED lights not working.	Lights turned off.	Press the 'LED' button to turn lights on or cycle modes.

8. PRODUCT SPECIFICATIONS

- **Model:** 318
- **Brand:** SINWE
- **Output Wattage:** 30 Watts (2 x 15W speakers)
- **Connectivity Technology:** Bluetooth 5.0, AUX, USB, TF Card
- **Microphones:** 2 x UHF Wireless Microphones
- **Battery Capacity:** 3000mAh (Speaker Unit)
- **Playtime:** Up to 2-3 hours (varies with volume and light usage)
- **Dimensions (L x W x H):** Approximately 5 x 8 x 3 inches
- **Item Weight:** Approximately 4.6 pounds
- **Recommended Use:** Indoor/Outdoor

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official SINWE website or contact the retailer from whom you purchased the product. Specific warranty terms and conditions may vary by region and retailer. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0D48KWRH6>

More documents and user manuals: <https://manuals.plus/>