

## Beyution RC40A18S-SM

# Beyution RC40A18S-SM Replacement Remote Control User Manual

Model: RC40A18S-SM

## INTRODUCTION

---

This user manual provides detailed instructions for the Beyution RC40A18S-SM Replacement Remote Control, compatible with RCA Smart TVs. This remote is designed to be a direct replacement, requiring no programming or setup for immediate use. It offers stable performance and a comfortable ergonomic design.

## PACKAGE CONTENTS

---

- 1 x Beyution RC40A18S-SM Replacement Remote Control

## SETUP

---

### Battery Installation

The Beyution RC40A18S-SM remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.







Image: Back of the remote control with the battery compartment open, showing two AAA batteries inserted. This view illustrates the correct orientation for battery placement.

**Note:** This is a replacement infrared remote control and does not require any programming or pairing. It is ready to use once batteries are installed.

## OPERATING INSTRUCTIONS

---

The Beyution RC40A18S-SM remote control is designed for intuitive operation of your RCA Smart TV. Below is a guide to its primary functions:





Image: Front view of the Beyution RC40A18S-SM remote control, displaying all buttons and their respective labels. This image provides a visual reference for button identification.

## Button Functions

| Button  | Function  |
|---|---|
| <b>POWER</b>                                      | Turns the TV on or off.                                   |
| <b>MUTE</b>                                       | Mutes or unmutes the TV sound.                            |
| <b>0-9 (Number Buttons)</b>                       | Directly select channels or input numbers.                |
| <b>CH +/-</b>                                     | Change channels up or down.                               |
| <b>VOL +/-</b>                                    | Adjust volume up or down.                                 |
| <b>MENU</b>                                       | Access the TV's main menu.                                |
| <b>SOURCE</b>                                     | Select input source (HDMI, AV, etc.).                     |
| <b>Navigation Arrows (Up, Down, Left, Right)</b>  | Navigate through menus and options.                       |
| <b>ENTER</b>                                      | Confirm selections.                                       |
| <b>EXIT</b>                                       | Exit current menu or screen.                              |
| <b>INFO</b>                                       | Display program information.                              |
| <b>HOME</b>                                       | Go to the Smart TV home screen.                           |
| <b>NETFLIX</b>                                    | Direct access to Netflix.                                 |
| <b>Colored Buttons (Red, Green, Yellow, Blue)</b> | Context-sensitive functions within menus or applications. |

| Button   | Function                                     |
|--|--|
| <b>Playback Controls (Play, Pause, Stop, Rewind, Fast Forward)</b> | Control media playback.                      |
| <b>P.MODE</b>  | Picture Mode selection.                      |
| <b>S.MODE</b>  | Sound Mode selection.                        |
| <b>AUDIO</b>   | Audio track selection.                       |
| <b>MEDIA</b>   | Access media player.                         |
| <b>AUTO</b>  | Auto-adjust picture settings.                |
| <b>SCALE</b>   | Adjust screen aspect ratio.                  |
| <b>CH.LIST</b>   | Display channel list.                        |
| <b>FAV.</b>  | Access favorite channels.                    |
| <b>SLEEP</b>   | Set sleep timer.                             |
| <b>SUBTITLE</b>  | Toggle subtitles on/off.                     |
| <b>CC</b>  | Closed Captioning.                           |
| <b>FREEZE</b>  | Freeze the current image.                    |
| <b>EPG</b>   | Electronic Program Guide.                    |
| <b>REPEAT</b>  | Repeat media playback.                       |
| <b>DTV/RADIO</b>   | Switch between Digital TV and Radio modes.   |
| <b>REC</b>   | Record current program (if supported by TV). |

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Damage:** Do not drop the remote control or expose it to extreme temperatures, humidity, or direct sunlight.

## TROUBLESHOOTING

---

| Problem | Possible Cause / Solution |
|---------|---------------------------|
|---------|---------------------------|

| Problem                              | Possible Cause / Solution  |
|--------------------------------------|--|
| Remote control is not working.       | <p>Check if the batteries are inserted correctly with the correct polarity (+/-).</p> <p>Replace old or dead batteries with new ones.</p> <p>Ensure there are no obstructions between the remote control and the TV's infrared sensor.</p> <p>Make sure you are within the effective operating distance (up to 10 meters).</p> |
| Remote control works intermittently. | <p>Batteries may be low; replace them.</p> <p>Ensure a clear line of sight to the TV's IR receiver.</p>  |
| Some buttons do not respond.         | <p>Ensure the remote is pointed directly at the TV.</p> <p>Clean the remote's surface and buttons to remove any dirt or debris that might be obstructing button presses.</p> <p>If only specific buttons are unresponsive, the remote might be damaged.</p>  |

If the issue persists after trying these solutions, please refer to the "Warranty and Support" section for further assistance.

## SPECIFICATIONS

| Feature                 | Detail                                   |
|-------------------------|--|
| Model                   | RC40A18S-SM                              |
| Compatible Models       | RC40A18S-SM, RC40A16S-SM                 |
| Connectivity Technology | Infrared                                 |
| Maximum Distance        | 10 Meters                                |
| Material                | ABS Plastic, Soft Rubber                 |
| Color                   | Black                                    |
| Product Dimensions      | 6.3 x 1.57 x 0.39 inches (16 x 4 x 1 cm) |
| Item Weight             | 2.12 ounces (60 grams)                   |
| Special Feature         | Ergonomic, No Programming Required       |



21 cm / 8.27 in



Image: Side-by-side view of the remote control, illustrating its dimensions. The image shows the front and side profiles, with measurements of 5 cm (1.97 inches) in width and 21 cm (8.27 inches) in length.

## WARRANTY AND SUPPORT

---

This product comes with a **3-month warranty period** from the date of purchase.

If you encounter any issues with your remote control, such as damage upon receipt or non-functionality, or if your TV model is not listed as compatible, please contact the seller directly for assistance. They are committed to providing a satisfactory solution.

For support, please reach out via the contact information provided by your retailer or the seller on the platform where you purchased the product.