

[Manuals.plus](#) /

> [TELEFUNKEN](#) /

> TELEFUNKEN Smart TV 43" Full HD TE43750B45I2KZ User Manual

TELEFUNKEN TE43750B45I2KZ

TELEFUNKEN Smart TV 43" Full HD TE43750B45I2KZ

USER MANUAL

Model: TE43750B45I2KZ

Product Overview

The TELEFUNKEN TE43750B45I2KZ is a 43-inch Full HD Smart TV designed to provide an immersive viewing experience. It integrates modern features such as Smart TV capabilities, voice control compatibility, and advanced audio-visual technologies.



Figure 1: Front view of the TELEFUNKEN 43-inch Smart TV, showcasing its slim bezel design and central stand.

Key Features:

- **Smart TV Functionality:** Access popular streaming applications like Netflix, Amazon Prime Video, and YouTube. Supports screen mirroring for content sharing from compatible devices.
- **43-inch Full HD Display:** Offers a resolution of 1920 x 1080 pixels for sharp and detailed images, enhancing your viewing of movies and videos.
- **Intelligent Voice Control:** Compatible with Google Assistant, allowing you to control TV functions and other smart home devices using voice commands.
- **Dolby Audio:** Provides a high-quality, immersive audio experience for movies, TV shows, and video games.
- **DVB-I and DVB-T2 Tuners:** Supports digital terrestrial and internet-based television broadcasting standards.

Setup Guide

1. Unboxing and Component Check

Carefully remove the TV and all components from the packaging. Ensure the following items are present:

- TELEFUNKEN 43" Smart TV
- Remote Control
- Power Cable
- TV Stand (if applicable)
- User Manual (this document)

2. Assembling the TV Stand

If your TV requires stand assembly, follow these steps:

1. Place the TV screen-down on a soft, flat surface to prevent scratches.
2. Align the stand components with the designated slots on the TV's bottom panel.
3. Secure the stand using the provided screws. Do not overtighten.

3. Physical Connections

Connect your devices to the TV using the appropriate ports. The TV features HDMI, USB, and Wi-Fi connectivity.

- **HDMI:** For connecting external devices such as Blu-ray players, game consoles, or set-top boxes.
- **USB:** For connecting USB storage devices to play media files.
- **Wi-Fi:** For wireless internet connection to access Smart TV features.

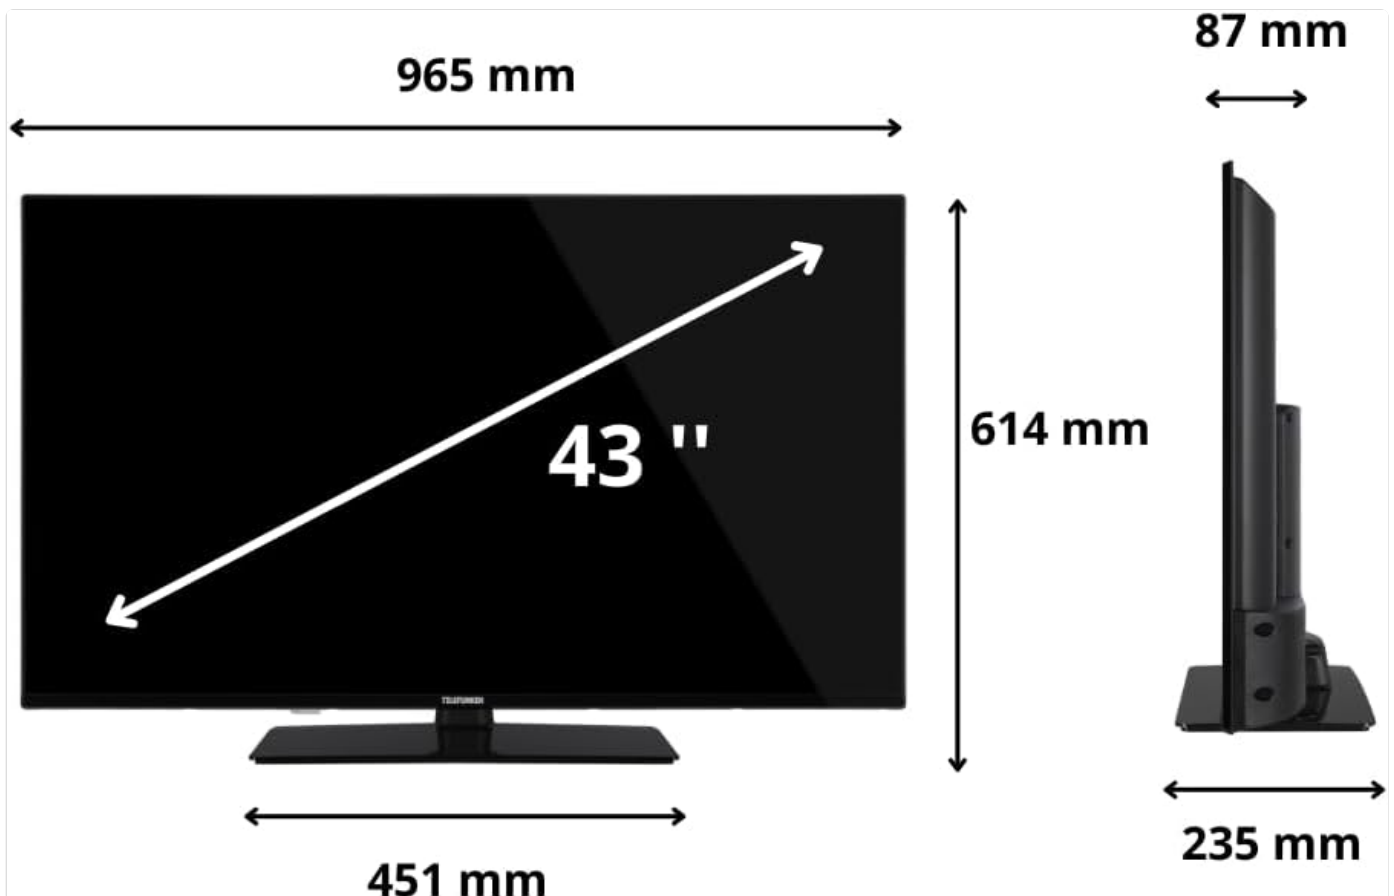


Figure 2: Dimensions of the TELEFUNKEN 43-inch Smart TV (965mm width, 614mm height, 235mm depth with stand, 87mm depth without stand).

4. Initial Power-On and First-Time Setup

After connecting the power cable, press the power button on the TV or remote control. The TV will guide you through the initial setup process, which typically includes:

1. Language selection.
2. Network connection (Wi-Fi setup).
3. Channel scanning (DVB-T2).
4. Accepting terms and conditions for Smart TV features.

Operating Instructions

1. Using the Remote Control

The remote control is your primary interface for the TV. Familiarize yourself with its buttons for power, volume, channel, input selection, and Smart TV navigation.

2. Smart TV Features

Press the "Smart TV" or "Home" button on your remote to access the Smart TV interface. From here, you can:

- Launch pre-installed applications like Netflix, Amazon Prime Video, and YouTube.
- Browse and install new applications from the app store.
- Use the screen mirroring function to display content from your smartphone or tablet.

3. Voice Control (Google Assistant)

To use voice control, ensure your TV is connected to the internet and Google Assistant is enabled. Press the dedicated voice control button on your remote (if available) or activate it through the on-screen menu. You can then issue

commands such as:

- "Change channel to [channel number/name]"
- "Open Netflix"
- "Set volume to 20"
- "What's the weather like?"

4. Picture and Sound Settings

Access the TV's settings menu to customize picture and sound. The TV supports Dolby Vision HDR10 for enhanced picture quality and Dolby Audio for rich sound.

- **Picture Modes:** Choose from standard, vivid, cinema, sport, or custom settings.
- **Sound Modes:** Select from standard, music, movie, speech, or custom equalizer settings.
- Adjust brightness, contrast, color, and sharpness for picture.
- Adjust bass, treble, and balance for sound.

Maintenance

1. Cleaning the TV

To maintain the TV's appearance and performance:

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.
- Avoid using alcohol, benzene, thinners, or other volatile substances, as they may damage the TV.

2. Software Updates

The TV may receive software updates to improve performance and add new features. It is recommended to keep your TV connected to the internet to receive these updates automatically. You can also check for updates manually through the TV's settings menu.

Troubleshooting

If you encounter issues with your TELEFUNKEN Smart TV, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No Power	Ensure the power cable is securely plugged into both the TV and a working electrical outlet. Check the power indicator light on the TV.
No Picture / Black Screen	Verify the correct input source is selected (e.g., HDMI 1, TV). Check cable connections to external devices. Try restarting the TV.
No Sound	Check the volume level and ensure mute is not activated. Verify audio cable connections for external sound systems. Check TV sound settings.
Cannot Connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password carefully. Try restarting both the TV and the router. Move the TV closer to the router if possible.

Problem	Possible Cause / Solution
Remote Control Not Working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.

If the problem persists after trying these solutions, please contact customer support.

Specifications

Feature	Detail
Brand	TELEFUNKEN
Model Number	TE43750B45I2KZ
Screen Size	43 Inches
Display Technology	LED
Resolution	Full HD (1920 x 1080 pixels)
Refresh Rate	60 Hz
Operating System	Android
Connectivity	HDMI, Wi-Fi, USB
Total USB Ports	1
Special Features	Flat Screen, Smart TV, Voice Control (Google Assistant), Dolby Vision HDR10, Dolby Audio, DVB-I, DVB-T2
Dimensions (with stand)	23.5D x 96.5W x 61.4H cm
Manufacturer	Vestel
Country of Origin	Turkey

Energy Efficiency

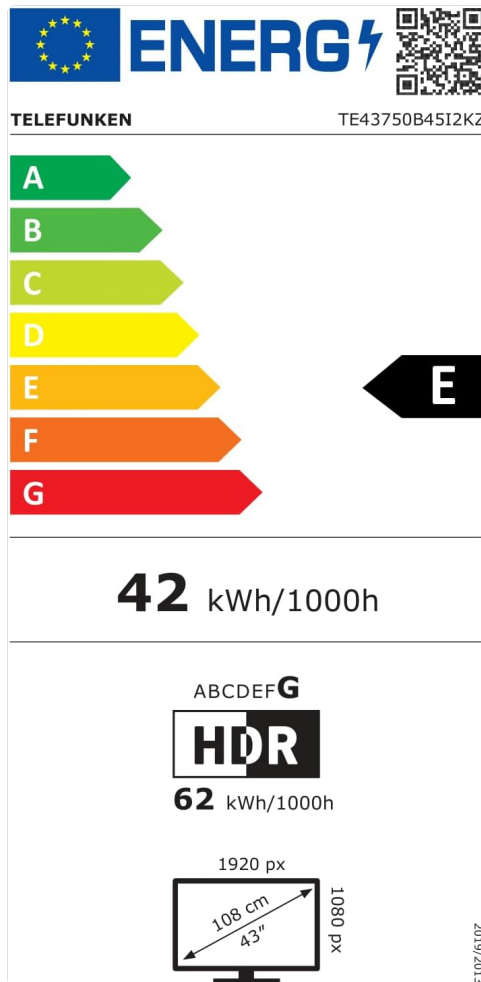


Figure 3: Energy efficiency label for the TELEFUNKEN TE43750B45I2KZ Smart TV, indicating an energy class of E and consumption of 42 kWh per 1000 hours.

For more details, visit the official EPREL database: <https://eprel.ec.europa.eu/qr/1959874>

Warranty and Support

This product is covered by the standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact the retailer.

Information regarding spare parts availability and guaranteed software updates is not explicitly provided in the product data. For any service, technical support, or inquiries about spare parts, please contact TELEFUNKEN customer support or your local authorized service center.

For returns, the product has a 30-day return policy when purchased from Amazon, with fulfillment by Amazon.

© 2024 TELEFUNKEN. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.