



Manuals.plus /

› Cimizi /

› Cimizi Kids Instant Digital Camera P79 User Manual

Cimizi P79

Cimizi Kids Instant Digital Camera P79 User Manual

MODEL: P79

Brand: Cimizi

[Introduction](#) [What's in the Box](#) [Product Overview](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the Cimizi Kids Instant Digital Camera P79. This camera is designed for children aged 3-16 years, offering both digital photography and instant black and white printing capabilities. It features a 1080P HD dual-lens for photos and real-time video recording, along with various creative functions such as puzzle games, filters, and frames. The camera includes a 32GB SD card and uses thermal printing technology, eliminating the need for toner.

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- 1x Cimizi Kids Instant Print Camera (Model P79)
- 3x Thermal Printer Paper Rolls
- 1x USB Charging Cable
- 1x 32GB SD Card (pre-installed in the SD slot)
- 1x Hanging Lanyard
- 1x User Manual (this document)



Figure 1: Included accessories with the Cimizi Kids Instant Digital Camera P79.

3. PRODUCT OVERVIEW

The Cimizi Kids Instant Digital Camera P79 is designed for ease of use and creative exploration. Key features include:

- **Dual-Lens System:** Front and rear lenses for standard photos and selfies.
- **1080P HD Video Recording:** Capture moments in high definition.
- **Instant Thermal Printing:** Print black and white photos directly from the camera without ink or toner. Supports grayscale and dot matrix printing with 3 types of color depth.
- **2.4-inch LCD Screen:** For viewing photos, videos, and navigating menus.
- **Built-in Games:** Includes 3 puzzle games for entertainment.
- **Creative Effects:** 28 cute frames and 6 filters to customize photos.
- **MP3 Music Player:** Enjoy music on the go.
- **Time-Lapse & Burst Shoot:** Advanced photography modes.
- **8x Optical Zoom:** Adjust magnification for distant subjects.

- **Flashlight:** For improved lighting in low-light conditions.



Figure 2: Key features of the Cimizi Kids Instant Digital Camera P79.

4. SETUP

4.1. Charging the Camera

The camera is equipped with a built-in high-capacity USB rechargeable battery. Use the provided USB charging cable to charge the device. A full charge allows for 3-4 hours of continuous photo taking. The camera comes pre-charged and ready for immediate use.

4.2. SD Card Installation

A 32GB SD card is pre-installed in the camera's SD slot, capable of storing over 6,000 pictures. Ensure it is properly seated before use.

4.3. Installing Print Paper


Follow these steps to install the thermal print paper:

1. Locate the latch on the print paper storage bin.
2. Push the latch and open the cover of the paper compartment.
3. Insert a roll of print paper into the storage bin. Ensure the smooth side of the paper is facing upwards.
4. Leave a small section of paper extending out of the paper outlet, then close the cover securely.




Installing Print Paper

1

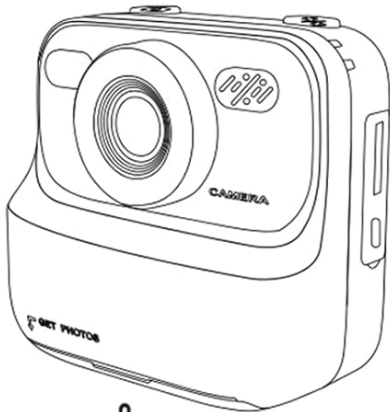


1. Find the latch on the Print paper storage bin.

2

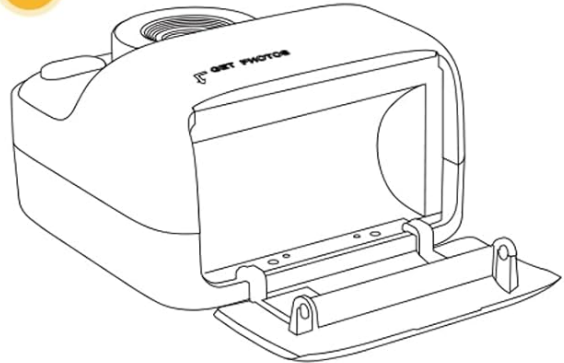

2. Push the latch and open the cover.

3

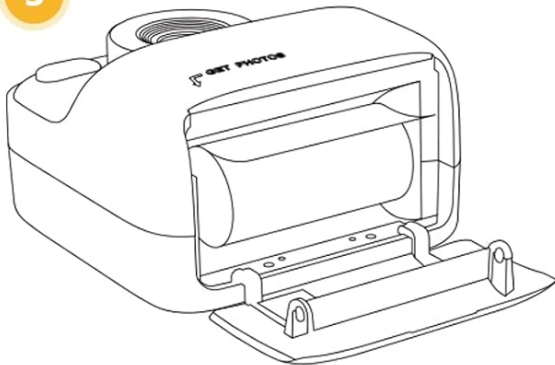

3. Put the print paper into the storage bin as shown in the picture. please make sure the smooth side is facing up!

4



4. Leave a small section of paper out of the paper outlet, and close the cover.

Figure 3: Instructions for installing print paper.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Press and hold the power button (usually located on the top or side) to turn the camera on or off.

5.2. Navigating the Menu

Use the directional buttons (up/down/left/right) and the 'OK' button to navigate through the camera's menu options displayed on the 2.4-inch LCD screen. The menu includes options for photo mode, video mode, gallery, games, music player, and settings.

Your browser does not support the video tag.

Video 1: Demonstration of the camera's menu navigation and instant printing feature.

5.3. Taking Photos

In photo mode, aim the camera at your subject. Use the front lens for standard photos or switch to the rear lens for selfies. Press the shutter button to capture an image. The camera supports 8x optical zoom.



Figure 4: Digital color photo mode vs. instant black and white print mode.

5.4. Recording Videos

Switch to video mode to record 1080P HD videos. Press the shutter button to start and stop recording.

Your browser does not support the video tag.

Video 2: Overview of the instant print camera's features, including video recording.

5.5. Instant Printing

After taking a photo, the camera can instantly print a black and white version using thermal technology. You can select between grayscale and dot matrix printing modes, and adjust color depth (low, middle, high) in the settings. Photos are printed from the front slot of the camera.



Figure 5: Available printing modes and color depth options.

5.6. Using Filters and Frames

Access the settings or photo mode options to apply 6 different filters and 28 cute frames to your photos before or after capturing them.

Funny Filters and Photo Frames

6 Filters



28 Frames



Figure 6: Examples of filters and frames available.

5.7. Games and Music Player

The camera includes 3 puzzle games for entertainment. Navigate to the 'Games' icon in the main menu to select and play. The 'Music Player' icon allows you to play MP3 files stored on the SD card.



Figure 7: Accessing puzzle games and the MP3 music player.

5.8. Flashlight Function

The camera features a built-in flashlight. This can be activated or deactivated via the camera's settings or a dedicated button for improved lighting in dark environments.

Your browser does not support the video tag.

Video 3: Demonstration of the camera's flashlight feature.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Avoid abrasive cleaners or solvents.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Paper Handling:** Keep thermal paper rolls in their original packaging until ready to use to protect them from light and moisture.
- **Battery Care:** Charge the camera regularly, even if not in frequent use, to maintain battery health.

7. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to a power source using the USB cable.
- **Photos not printing:** Check if the thermal paper is installed correctly with the smooth side up. Ensure there is enough paper in the compartment.
- **Poor print quality:** Verify the paper is correctly loaded. Adjust the print density settings (low, middle, high) in the camera menu.
- **SD card error:** Reinsert the SD card. If the issue persists, try formatting the card (this will erase all data) or using a different compatible SD card.
- **Screen frozen:** Try restarting the camera by holding the power button. If unresponsive, allow the battery to fully discharge and then recharge.

8. SPECIFICATIONS

Feature	Detail
Brand	Cimizi
Model Name	P79
Effective Still Resolution	30 MP
Photo Sensor Resolution	5 MP
Video Resolution	1080p
Screen Size	2.4 Inches
Display Type	LCD
Optical Zoom	8 x
Image Stabilization	Digital
Memory Storage Capacity	32 GB (SD Card included)
Battery Type	Lithium-Ion Polymer
Battery Average Life	4 Hours (continuous photo taking)
Connectivity Technology	USB
Item Weight	0.37 Kilograms
Age Range Description	Kid

9. WARRANTY AND SUPPORT

9.1. Warranty Information

This product comes with a 1-year warranty. Please refer to the warranty card included in your package for detailed terms and conditions.

9.2. Customer Support

If you have any questions, concerns, or require assistance with your Cimizi Kids Instant Digital Camera P79, please

contact Cimizi customer support. Contact information can typically be found on the product packaging or the official brand website.

