

[Manuals.plus](#) /

› [MCHOSE](#) /

› MCHOSE A5 ProMax Wireless Gaming Mouse User Manual

MCHOSE A5 ProMax

MCHOSE A5 ProMax Wireless Gaming Mouse User Manual

Model: A5 ProMax

INTRODUCTION

Thank you for choosing the MCHOSE A5 ProMax Wireless Gaming Mouse. This manual provides essential information for setting up, operating, and maintaining your new gaming mouse. Designed for peak performance, the A5 ProMax offers a symmetrical, ultra-lightweight design at just 59 grams, ensuring optimal control and comfort during extended gaming sessions. It features a high-precision PAW3395 optical sensor with up to 26,000 DPI and a 1K polling rate for pixel-perfect tracking. Enjoy up to 130 hours of battery life and versatile tri-mode connectivity, making it a perfect accessory for any computer or PC gamer.





The MCHOSE A5 ProMax Wireless Gaming Mouse.

Key Features:

- **Ultra-Lightweight Design:** Weighing only 59 grams for effortless control and comfort.
- **High Precision Tracking:** Equipped with a PAW3395 optical sensor, offering up to 26,000 DPI for pixel-perfect accuracy.
- **Long-Lasting Battery:** Up to 130 hours of battery life on a single charge.
- **Tri-Mode Connectivity:** Seamlessly switch between 2.4GHz wireless, Bluetooth, and USB-C wired modes.
- **Durable Switches:** Rated for up to 80 million clicks, providing solid tactile and audible feedback.

SETUP GUIDE

The MCHOSE A5 ProMax offers flexible connectivity options to suit your gaming setup.

Connecting Your Mouse:

1. **2.4GHz Wireless Mode:**

- Locate the USB receiver stored in the compartment on the underside of the mouse.
- Plug the USB receiver into an available USB port on your computer.
- Slide the switch on the bottom of the mouse to the '2.4G' position. The mouse will automatically connect.

2. **Bluetooth Mode:**

- Slide the switch on the bottom of the mouse to the 'BT' position.
- On your computer or device, go to Bluetooth settings and search for new devices.
- Select 'MCHOSE A5 ProMax' from the list of available devices to pair.

3. **USB-C Wired Mode:**

- Connect the provided USB-C cable to the front port of the mouse and the other end to a USB port on your computer.
- The mouse will function immediately in wired mode and will also charge its internal battery.

DURABALE SWITCHES



The USB receiver is conveniently stored in the mouse's underside compartment.



The compact USB wireless dongle for 2.4GHz connectivity.

OPERATING YOUR MOUSE

The MCHOSE A5 ProMax is designed for intuitive use and high performance.

DPI Adjustment:

The mouse features a dedicated DPI switch on its underside, allowing you to cycle through various sensitivity levels up to 26,000 DPI. This enables quick adjustments to match your gaming style or task requirements. The default settings typically include common DPI steps like 800, 1600, and higher, providing flexibility for different scenarios.



The PAW3395 optical sensor provides up to 26,000 DPI for precise tracking.

Button Functions:

- **Left/Right Click:** Standard mouse buttons with durable switches rated for 80 million clicks.
- **Scroll Wheel:** For vertical scrolling and a clickable middle button.
- **Side Buttons:** Two programmable side buttons, typically used for forward/backward navigation in browsers or custom in-game actions.

LONG LASTING BATTERY

130⁺
hrs



The mouse features highly durable switches for consistent performance.

Polling Rate:

The A5 ProMax operates at a 1K (1000Hz) polling rate, ensuring rapid and responsive communication between the mouse and your computer. This high polling rate minimizes input lag, providing a smooth and precise cursor movement crucial for competitive gaming.

MAINTENANCE

Proper maintenance will ensure the longevity and optimal performance of your MCHOSE A5 ProMax mouse.

Battery Charging:

The mouse boasts up to 130 hours of battery life. When the battery is low, connect the mouse to your computer using the provided USB-C cable. The charging indicator light will show the charging status and turn off when fully charged.

26000 DPI OPTICAL SENSOR



Charge your mouse via USB-C to enjoy up to 130 hours of gameplay.



The mouse charges quickly via its USB-C port.

Cleaning:

To clean your mouse, use a soft, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive materials, as these can damage the mouse's surface or internal components.

TROUBLESHOOTING

If you encounter any issues with your MCHOSE A5 ProMax mouse, refer to the following common solutions:

- **Mouse not responding:**
 - Ensure the mouse is charged.
 - Check the connectivity mode switch on the bottom of the mouse (2.4G, BT, OFF).
 - For 2.4GHz mode, ensure the USB receiver is securely plugged into a working USB port. Try a different USB port.
 - For Bluetooth mode, ensure Bluetooth is enabled on your device and the mouse is properly paired. Try re-pairing.
 - If using wired mode, ensure the USB-C cable is securely connected to both the mouse and the computer.
- **Inconsistent tracking or cursor lag:**
 - Clean the optical sensor on the bottom of the mouse with a soft cloth.
 - Ensure you are using the mouse on a suitable surface (e.g., a mouse pad).
 - Check for any wireless interference if using 2.4GHz or Bluetooth mode. Move closer to the receiver or device.
 - Ensure the mouse battery is not critically low.
- **Software Issues:**
 - While the mouse functions well out of the box, advanced customization may require specific software. Please refer to the official MCHOSE website for the latest software and drivers. Exercise caution when downloading software from third-party sources.

SPECIFICATIONS

Feature	Detail
Brand	MCHOSE
Model Number	A5 ProMax
Product Dimensions	4.79 x 2.42 x 0.1 inches
Item Weight	2.12 ounces
Connectivity Technology	2.4GHz Wireless, Bluetooth, USB-C Wired
Movement Detection Technology	Optical (PAW3395)
DPI	Up to 26,000 DPI
Polling Rate	1K (1000Hz)
Battery Life	Up to 130 hours
Batteries	1 Lithium Ion battery (included)

Switch Durability	Rated for up to 80 million clicks
Color	White
Compatible Operating Systems	Linux, Windows

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product packaging or visit the official MCHOSE website. Our customer service team is available to assist you with any questions or concerns regarding your A5 ProMax Wireless Gaming Mouse.

© 2025 MCHOSE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D49N6ZBM>

More documents and user manuals: <https://manuals.plus/>