

Maestri House LunaFro Mini Rechargeable Milk Frother Instruction Manual

1. INTRODUCTION

Thank you for choosing the Maestri House LunaFro Mini Rechargeable Milk Frother. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The LunaFro Mini is a versatile handheld electric foam maker designed to create smooth and creamy foam for various beverages. Its compact and detachable design ensures convenience for both home use and travel.

Why Choose US?

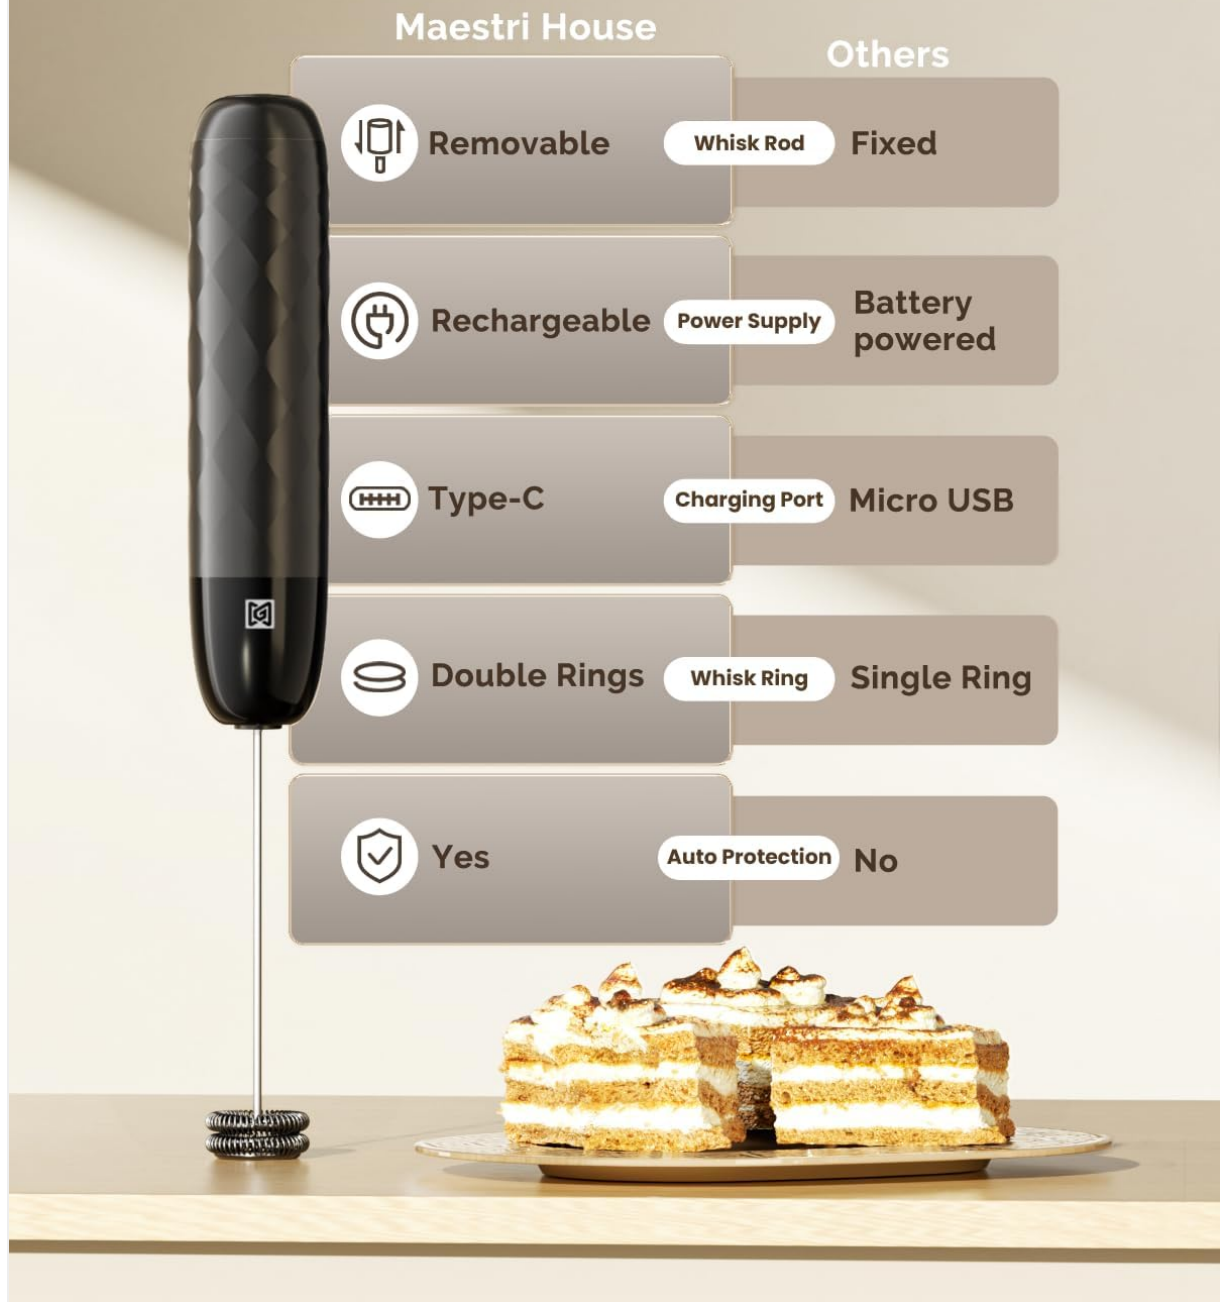


Figure 1: Maestri House LunaFro Mini Rechargeable Milk Frother.

2. PRODUCT FEATURES

- **USB-C Rechargeable:** Equipped with an 800mAh lithium battery, offering up to 1-2 months of use on a single 3-hour charge. A white LED indicator provides charging status.
- **Effortless One-button Operation:** Simple press-to-start and press-to-stop functionality for ease of use.
- **Quick Foam Creation:** Features a high-powered turbo engine (8000±10%RPM) to produce smooth and creamy foam in approximately 15 seconds.
- **Detachable Wand & Compact Design:** The whisking wand is detachable for easy cleaning and

portability, making it ideal for on-the-go use.

- **Easy Cleaning:** The whisking head can be cleaned by placing it in water or soapy water and activating the frother, or by detaching the wand for manual cleaning.
- **Safety Feature:** Automatically stops after 10 minutes of continuous use or when power is off.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present:

- 1 x Maestri House LunaFro Mini Rechargeable Milk Frother (main unit)
- 1 x Whisking Rod
- 1 x USB-C Charging Cable
- 1 x User Manual

4. SETUP

4.1 Assembling the Whisking Rod

1. Hold the milk frother upside down with one hand, firmly gripping the body.
2. Insert the whisking rod into the main unit.
3. Press the plastic part of the mixing rod firmly with your finger to secure it in place. The plastic part of the whisking rod should be flush with the frother body.



Figure 2: Whisking rod assembly.

4.2 Charging the Frother

For optimal performance, fully charge the milk frother before its first use.

1. When the power is low, the indicator light will flash red.
2. Connect the Type-C charging cable to the charging port on the frother. The white indicator light will

slowly flash while charging. (Recommended: use a 5V-1A charger).

3. The charging time is approximately 3-4 hours. The indicator light will turn off when fully charged.



Figure 3: Charging the LunaFro Mini.

5. OPERATING INSTRUCTIONS

The LunaFro Mini is designed for simple, one-button operation.

1. Ensure the whisking rod is securely installed.
2. Immerse the whisking head into the liquid you wish to froth (e.g., milk, matcha, coffee).
3. Press the power button located on the top of the frother once to start whisking.
4. Gently move the frother up and down in the liquid to create desired foam consistency.
5. Press the power button again to stop the frother.

Detachable Conveniences



Figure 4: Frothing with ease.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your milk frother.

1. **Cleaning the Whisking Rod and Head:** Clean the whisking rod and whisking head with water or mild soapy water. You can rinse this part directly under the faucet.
2. **For Stains on the Whisking Head:** If there are stubborn stains, you can soak the whisking head in a container filled with water or soapy water, then turn on the power switch to clean the milk frother before removing it.
3. **Cleaning the Frother Body:** Use a clean and soft cloth to wipe any stains on the surface of the

body. Do not use any chemical or corrosive cleaning agents that could damage the surface.

4. **Drying:** After cleaning, place the milk frother on a metal storage stand (if available) or in a dry area to air dry.



Figure 5: Effortless cleanup.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Whisking head rotates eccentrically or vibrates excessively.	Whisking rod not properly installed or foreign object obstruction.	Ensure the whisking rod is fully inserted and secured. Check for and remove any obstructions.
Frother does not turn on.	Low battery or power button not pressed correctly.	Charge the frother using the provided USB-C cable. Ensure the power button is pressed firmly.

8. SPECIFICATIONS

- **Brand:** Maestri House
- **Model Name:** MHMF06
- **Material:** ABS + Stainless Steel
- **Speed:** 8000±10%R/MIN
- **Charging Voltage:** 5V
- **Item Weight:** 0.01 Kilograms
- **Power Source:** Battery Powered
- **Product Care Instructions:** Hand Wash Only

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Maestri House LunaFro Mini Rechargeable Milk Frother, please do not hesitate to contact our customer support team.

Customer Support Email: support@maestrihouse.com

