



[Manuals.plus](#) /

> [Tangkula](#) /

> Tangkula Outdoor Chaise Lounge User Manual - Model 11667CF-NP

Tangkula 11667CF-NP

Tangkula Outdoor Chaise Lounge User Manual

Model: 11667CF-NP | Brand: Tangkula

INTRODUCTION

This manual provides essential information for the assembly, operation, maintenance, and care of your Tangkula Outdoor Chaise Lounge. Please read these instructions carefully before use to ensure proper function and longevity of your product.



Image: The Tangkula Outdoor Chaise Lounge, featuring a brown wicker base and a gray cushion, positioned on a patio.

SAFETY INFORMATION

- Avoid prolonged exposure to rain to maintain the product's longevity and performance.
- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight capacity of 330 lbs (150 kg).
- Keep children and pets away during assembly.

PACKAGE CONTENTS

Please verify that all parts are present before beginning assembly.

- 1 x Patio Chaise Lounge Frame
- 1 x Long Seat Cushion
- 1 x Instruction Manual (this document)
- Hardware Pack (screws, washers, tools if included)

SETUP AND ASSEMBLY

Assembly is required for this chaise lounge. It is recommended that two adults perform the assembly. Do not fully tighten screws until all components are loosely fitted.

1. Unpack all components and lay them out on a soft, clean surface to prevent scratches.
2. Identify the main frame sections. Attach the side panels to the base frame using the provided hardware.
3. Secure the backrest frame to the main lounge body, ensuring the adjustable mechanism is correctly aligned.
4. Once all parts are loosely assembled, gradually tighten all screws and bolts until secure. Do not overtighten.
5. Place the long seat cushion onto the chaise lounge. The cushion features a snug design to prevent slipping.



Image: An illustration showing the various components of the chaise lounge before assembly, including the frame, backrest, and cushion.

Mixed Brown PE Rattan

Ensures lasting elegance



Well-Woven



Fade-Resistant



Long-Lasting




Image: Detail of the chaise lounge's robust metal frame and adjustable L-shaped legs, highlighting structural stability.

OPERATING INSTRUCTIONS

Adjusting the Backrest

The Tangkula Outdoor Chaise Lounge features a 4-position adjustable backrest, allowing you to customize your comfort level.

1. To adjust, gently lift the backrest to disengage it from its current position.
2. Move the backrest to your desired angle. There are four distinct positions, including a fully flat option.
3. Ensure the backrest mechanism locks securely into place before applying full weight.

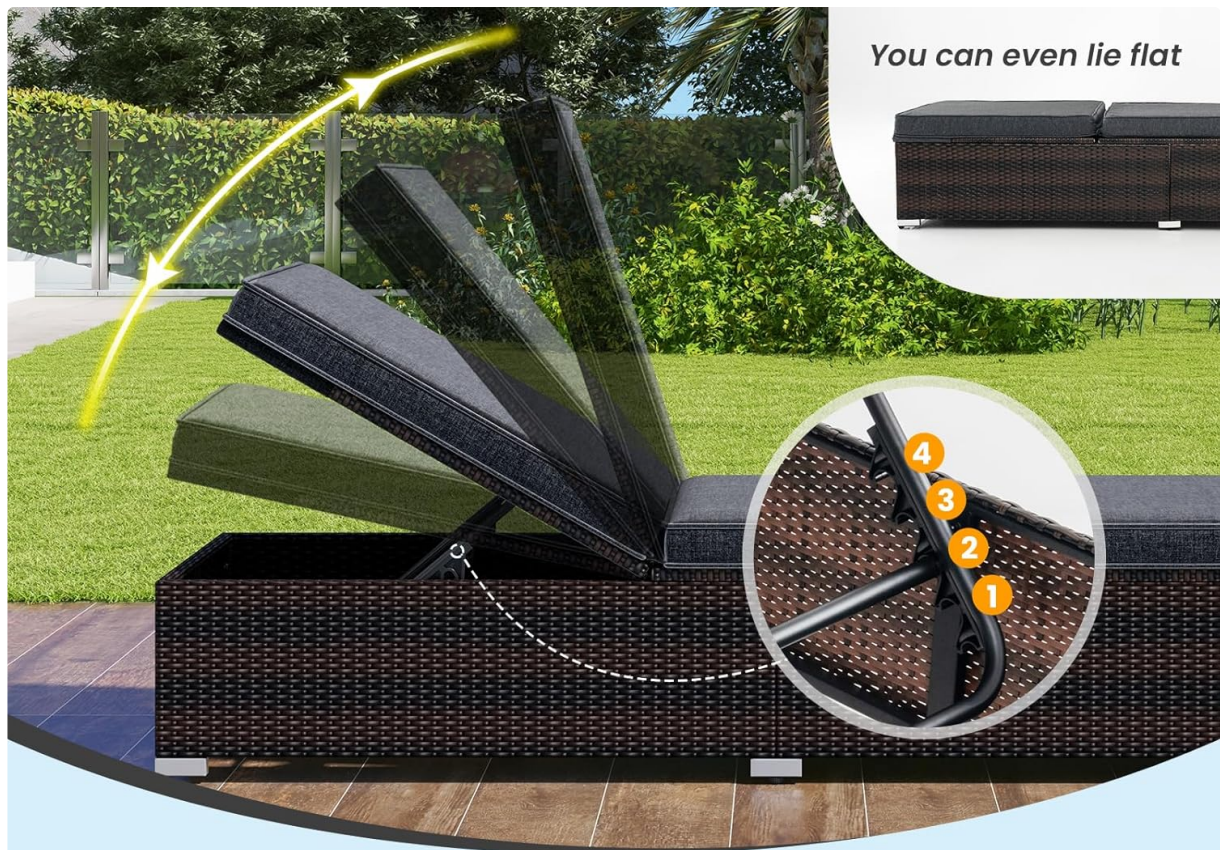

4-Position Adjustable Backrest

Help you achieve your ideal level of comfort



Reading



Sunbathing



Sleeping

Image: A visual guide demonstrating how to adjust the backrest to its four different positions, from upright to fully flat.

Using the Cushion

The included long seat cushion provides enhanced comfort. Its design helps keep it in place during use.


MAINTENANCE

Cleaning

- **Cushion:** The cushion features a zippered cover for easy removal and cleaning. Hand wash with mild soap and water, or machine wash on a gentle cycle with cold water. Air dry only.
- **Rattan and Frame:** Wipe the PE rattan and metal frame with a damp cloth and mild soap. Rinse thoroughly with clean water and dry completely to prevent water spots or corrosion.



Patio Rattan Chaise Lounge

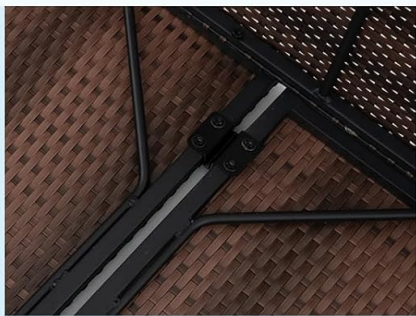

Heavy-Duty
Metal Frame



L-Shaped Legs
with Adjustable
Footpads



Image: Detailed view of the cushion's features, including its soft filling, zippered cover for easy cleaning, and design to prevent slipping.

Storage and Protection

- To prolong the service life of the chaise lounge, avoid prolonged exposure to rain and harsh weather conditions.
- During off-seasons or inclement weather, store the chaise lounge in a dry, covered area or use a protective outdoor furniture cover.

TROUBLESHOOTING

If you encounter any issues with your Tangkula Outdoor Chaise Lounge, please refer to the following common solutions:

- **Wobbly Frame:** Check all bolts and screws to ensure they are tightened securely. If the issue persists, disassemble and reassemble, ensuring all parts are correctly aligned before tightening.
- **Backrest Adjustment Difficulty:** Ensure no obstructions are preventing the mechanism from moving freely. Apply a small amount of silicone lubricant to moving parts if necessary.
- **Cushion Slipping:** Verify the cushion is correctly positioned and its snug design features are

engaged.

SPECIFICATIONS

Feature	Detail
Model Number	11667CF-NP
Overall Dimensions (L x W x H)	75" x 24" x 12.5"/27.5"/31.5"/35"/38" (adjustable height)
Seat Height	12.5"
Cushion Dimensions (L x W x Thickness)	76" x 24.5" x 3"
Weight Capacity	330 lbs (150 kg)
Net Weight	31.5 lbs (14 kg)
Materials	PE Rattan, Metal, Polyester, Sponge
Color (Rattan/Cushion)	Mix Brown / Gray
Backrest Positions	4 (including flat)
Assembly Required	Yes

Comfortable Long Cushion



Image: A detailed diagram showing the length, width, and adjustable height measurements of the chaise lounge.

WARRANTY AND SUPPORT

For specific warranty information or technical support, please refer to the documentation included with your purchase or contact Tangkula customer service.

You can visit the official Tangkula store for more information: [Tangkula Store](#)