

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NETTA](#) /

› [NETTA 2in1 Cordless Grass Shear & Hedge Trimmer User Manual](#)

NETTA 104129

NETTA 2in1 Cordless Grass Shear & Hedge Trimmer User Manual

Model: 104129

1. INTRODUCTION

Thank you for choosing the NETTA 2in1 Cordless Grass Shear & Hedge Trimmer. This versatile tool is designed for efficient and effortless garden maintenance, allowing you to easily switch between grass shearing and hedge trimming tasks. Its lightweight design and cordless operation provide maximum convenience and maneuverability. Please read this manual thoroughly before first use to ensure safe and optimal operation of your new tool.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical tools to reduce the risk of fire, electric shock, and personal injury.

General Safety

- Read all instructions carefully before operating the tool.
- Keep the work area clean and well-lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical Safety

- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges, and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Use only the charger supplied by the manufacturer to recharge the battery.

Personal Safety

- Always wear appropriate personal protective equipment, including safety glasses, gloves, and sturdy footwear.
- Stay alert, watch what you are doing, and use common sense when operating a power tool.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Ensure the safety lock is engaged when the tool is not in use or when changing blades.

3. PRODUCT OVERVIEW

Components

- Main Unit (Motor Housing with Handle)
- 12V Lithium-Ion Battery
- Battery Charger
- Grass Shearing Blade (10cm x 7cm)
- Hedge Trimmer Blade (22cm x 6.5cm)
- Safety Key
- Blade Release Button
- Power Switch
- Safety Trigger
- Charge Level Indicator Lights



Image: The NETTA 2in1 Grass Shear and Hedge Trimmer, showcasing both the grass shearing blade and the hedge trimming blade attached to separate units, highlighting its dual functionality.



Image: Detailed view of the NETTA 2in1 Grass Shear and Hedge Trimmer with key dimensions: Shrub Shear Blade (Length 22cm, Width 6.5cm), Grass Trimmer Blade (Length 7cm, Width 10cm), Body Height (13cm), Body Length (32cm), and overall weight (1.2kg).

4. SETUP

Charging the Battery

Before first use, fully charge the battery. A full charge takes approximately 4 hours.

1. Press the release button on the battery pack and slide the battery out of the tool.
2. Connect the charger to a power outlet.
3. Plug the charger into the battery pack's charging port. The charge active indicator light will illuminate red.
4. Once charging is complete, the indicator light will change or turn off (refer to charger specific instructions). Disconnect the charger.
5. Slide the charged battery back into the tool until it clicks into place.

2 IN 1 CORDLESS VERSATILITY

This cordless grass trimmer and shrub shear is powered by a 12V 1.5Ah lithium-ion battery for effortless garden maintenance.



12V BATTERY

POWERFUL MOTOR

1250rpm

MAX MOTOR SPEED



Image: The NETTA 2in1 Cordless Grass Trimmer and Shrub Shear, highlighting its 12V 1.5Ah lithium-ion battery, 1250rpm motor speed, and the inclusion of both the battery and charger for garden maintenance.

EFFICIENT CORDLESS POWER

Push the button to show how much the battery is charged.
The red charge level indicator lights shows the battery is charging.

30 MINUTES

RUN TIME



4 HOURS

CHARGE TIME



Image: Close-up of the NETTA 2in1 Grass Shear and Hedge Trimmer's battery, showing the charge level indicator lights (green for charge level) and the charge active indicator (red for charging).

Attaching/Changing Blades

The tool features a tools-free quick blade change system.

1. Ensure the tool is switched off and the safety key is removed.
2. To remove a blade, locate the blade release button/lever (usually on the underside or side of the blade housing). Press or slide it to unlock the blade.
3. Carefully slide the current blade out from the tool. Handle blades by their non-sharp edges.
4. To attach a new blade, align the new blade with the grooves in the tool's housing.
5. Slide the blade firmly into place until it clicks and locks. Ensure it is securely seated and cannot be pulled out without pressing the release mechanism.

LIGHTWEIGHT EASY TO USE

Weighing just 1.2KG and with a soft-grip ergonomic handle, this 2 in 1 trimmer can be comfortably operated by anyone.



Image: Step-by-step guide demonstrating the tools-free quick blade change process for the NETTA 2in1 trimmer, showing how to release and attach the interchangeable blades.

5. OPERATING INSTRUCTIONS

Starting the Tool

The tool is equipped with a 2-way safety trigger to prevent accidental operation.

1. Ensure the correct blade is securely attached and the battery is fully charged.
2. Insert the safety key into its slot. The tool will not operate without the safety key.
3. To start the tool, first press the safety trigger (usually a small button or lever near the main trigger).
4. While holding the safety trigger, press the main power switch/trigger. The blades will begin to move.
5. To stop the tool, release the main power switch/trigger.

POWERFUL MOTOR

This powerful 12V motor operates at 1250rpm which makes maintaining your garden a breeze.



Image: An illustrative representation of the powerful 12V motor operating at 1250rpm, emphasizing its efficiency for garden maintenance.

Grass Shearing

Use the grass shearing blade for trimming grass edges, small patches of lawn, or around obstacles.

- Hold the tool firmly with both hands if necessary, ensuring a comfortable grip.
- Position the grass shear blade parallel to the ground or the desired cutting line.
- Move the tool slowly and steadily along the area to be trimmed. Avoid forcing the blades through thick or wet grass.

PRECISION TRIMMING

The dual-action laser cut blades will make light work of shrubs and grass.

200mm

SHRUB SHEAR BLADE CUTTING LENGTH

100mm

GRASS TRIMMER BLADE CUTTING WIDTH



Image: The NETTA 2in1 trimmer demonstrating precision trimming, highlighting the 200mm shrub shear blade cutting length and 100mm grass trimmer blade cutting width.

Hedge Trimming

Use the hedge trimmer blade for shaping shrubs and light hedge trimming.

- Hold the tool securely, maintaining balance.
- Start trimming from the bottom of the hedge and work your way upwards for a clean finish.
- Use a sweeping motion, cutting small amounts at a time. Do not attempt to cut branches thicker than the recommended capacity (typically small, soft growth).

Battery Level Indicator

To check the remaining battery charge, press the button located on the battery pack. The green indicator lights will illuminate, showing the current charge level. If the red charge active indicator is lit, the battery is currently charging.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your tool.

- **Cleaning:** After each use, disconnect the battery and clean the blades and tool body with a damp cloth. Remove any grass clippings, sap, or debris.
- **Blade Care:** Periodically apply a light machine oil or blade lubricant to the blades to prevent rust and ensure smooth operation. Store blades with a protective cover when not in use.
- **Storage:** Store the tool in a dry, secure place, out of reach of children. Ensure the battery is partially charged (not fully depleted or fully charged for long-term storage) and removed from the tool if storing for extended periods.
- **Battery Care:** Do not expose the battery to extreme temperatures. Do not attempt to disassemble the battery pack.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tool does not start	Battery not charged Safety key not inserted Safety trigger not pressed first Blade not properly installed	Charge battery fully Insert safety key Press safety trigger before main switch Re-install blade securely
Blades not cutting effectively	Blades are dull or dirty Attempting to cut material too thick	Clean blades and lubricate Ensure blades are sharp (replace if necessary) Only cut recommended material thickness
Short run time	Battery not fully charged Battery nearing end of life	Ensure battery is fully charged before use Consider replacing the battery
Tool vibrates excessively	Blade not properly installed Damaged blade	Check blade installation and secure Replace damaged blade

8. SPECIFICATIONS

Feature	Detail
Model Number	104129
Power Source	Battery Powered
Battery Type	12V 1500mAh Lithium-Ion
Motor Speed	1250 rpm
Run Time	Approx. 30 minutes
Charge Time	Approx. 4 hours
Grass Shearing Blade Width	10 cm

Feature	Detail
Hedge Trimmer Blade Length	22 cm
Product Dimensions (L x W x H)	55 x 10 x 13 cm
Item Weight	1.2 kg
Material	Stainless Steel, Plastic

9. WARRANTY AND SUPPORT

Warranty Information

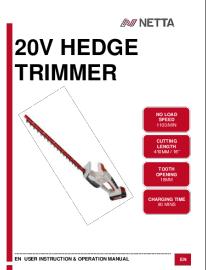
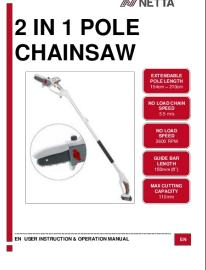
This NETTA product comes with a 365-day warranty from the date of purchase. This warranty covers manufacturing defects and faults under normal use. Please retain your proof of purchase for any warranty claims. The warranty does not cover damage caused by misuse, neglect, unauthorized repairs, or normal wear and tear.

Customer Support

For any questions, technical assistance, or warranty claims, please contact NETTA customer support. Refer to the product packaging or the official NETTA website for the most up-to-date contact information.

© 2025 NETTA. All rights reserved.

Related Documents - 104129

 <p>20V HEDGE TRIMMER NETTA</p> <p>EN USER INSTRUCTION & OPERATION MANUAL</p> <p>NO LOAD SPEED: 4500 RPM CUTTING LENGTH: 45MM / 1.8" IN TOOTH SPACING: 1.5MM / 0.06" IN CHARGING TIME: 80 MIN</p>	<p>NETTA 20V Hedge Trimmer User Manual & Operation Guide</p> <p>This user manual provides detailed instructions for operating and maintaining the NETTA 20V Hedge Trimmer. It covers safety warnings, intended use, product features, charging procedures, troubleshooting, spare parts, disposal, and warranty information for model M0E-KT07-18.</p>
 <p>2 IN 1 POLE CHAINSAW NETTA</p> <p>EN USER INSTRUCTION & OPERATION MANUAL</p> <p>EXTREME POLE LENGTH: 1.8M / 6FT NO LOAD SPEED: 4500 RPM NO LOAD SPEED: 4500 RPM GUIDE BAR LENGTH: 350MM / 14" IN MAX CUTTING CAPACITY: 50MM / 2" IN</p>	<p>NETTA 2-in-1 Pole Chainsaw User Manual</p> <p>Comprehensive user instruction and operation manual for the NETTA 2-in-1 Pole Chainsaw, covering safety, operation, maintenance, and disposal. Includes product specifications and warnings.</p>

 <p>2 IN 1 POLE CHAINSAW</p> <p>NETTA</p> <p>EXTRAMILE CHAIN LENGTH - Chain NO LOAD CHAIN SPEED - 2000 fpm NO LOAD POWER - 2000W GUIDE BAR LENGTH - 180mm (7") MAX CUTTING CAPACITY - 45mm (1.75")</p> <p>EN USER INSTRUCTION & OPERATION MANUAL</p> <p>EN</p>	<p>NETTA 2-in-1 Pole Chainsaw User Manual and Operation Guide</p> <p>Official user manual for the NETTA 2-in-1 Pole Chainsaw (Model M0L-KT03-18). Provides detailed instructions on safe operation, maintenance, assembly, and troubleshooting for this cordless garden tool.</p>
 <p>MINI CHAINSAW</p> <p>NETTA</p> <p>RATED POWER - 200W NO LOAD CHAIN SPEED - 2000 fpm NO LOAD SPEED - 2000 RPM GUIDE BAR LENGTH - 180mm (7") MAX CUTTING CAPACITY - 45mm (1.75")</p> <p>EN USER INSTRUCTION & OPERATION MANUAL</p> <p>EN</p>	<p>NETTA 20V Cordless Mini Chainsaw User Manual & Operation Guide</p> <p>Comprehensive user instruction and operation manual for the NETTA 20V Cordless Mini Chainsaw. Includes safety warnings, operating instructions, maintenance tips, and warranty information.</p>
 <p>700W SPRAY GUN</p> <p>NETTA</p> <p>RATED POWER - 700W VOLTAGE - 220V CABLE LENGTH - 2 METERS PARTS - 100%</p> <p>EN USER INSTRUCTION & OPERATION MANUAL</p> <p>EN</p>	<p>NETTA 700W Spray Gun User Manual: Operation, Safety & Troubleshooting</p> <p>Comprehensive guide for the NETTA 700W Spray Gun (PLD3040A). Includes detailed instructions on operation, safety precautions, cleaning, maintenance, and troubleshooting for optimal performance.</p>
 <p>MINI CHAINSAW</p> <p>NETTA</p> <p>RATED POWER - 200W NO LOAD CHAIN SPEED - 2000 fpm NO LOAD SPEED - 2000 RPM GUIDE BAR LENGTH - 180mm (7") MAX CUTTING CAPACITY - 45mm (1.75")</p> <p>EN USER INSTRUCTION & OPERATION MANUAL</p> <p>EN</p>	<p>NETTA 20V Cordless Mini Chainsaw User Manual and Operation Guide</p> <p>Comprehensive user manual for the NETTA 20V Cordless Mini Chainsaw, covering safety instructions, operation, maintenance, troubleshooting, and warranty information. Ensure safe and effective use of your NETTA product.</p>