

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HEYNEMO](#) /

› [HEYNEMO 24QT Electric Roaster Oven User Manual](#)

HEYNEMO 24QT

HEYNEMO 24QT Electric Roaster Oven User Manual

Model: 24QT

INTRODUCTION

Thank you for choosing the HEYNEMO 24QT Electric Roaster Oven. This appliance is designed to provide efficient and versatile cooking for various dishes, including roasting, baking, and slow cooking. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.



Figure 1: HEYNEMO 24QT Electric Roaster Oven with a roasted turkey.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using this appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Your HEYNEMO Electric Roaster Oven includes the following main components:

- Roaster Oven Base: The main heating unit with control knob and cool-touch handles.
- Removable Pan: An enamel-on-steel pan for cooking, designed for even heat distribution.
- Removable Roasting Rack: A metal rack that fits inside the removable pan, designed to lift food for better air circulation.
- Self-Basting Lid: A lid designed to capture and recirculate moisture, ensuring food remains juicy.



Figure 2: Exploded view of the roaster oven components: base, removable pan, and roasting rack.

BEFORE FIRST USE

1. Unpack the roaster oven and all its components. Remove any packaging materials, stickers, or labels.
2. Wash the removable pan, roasting rack, and lid in warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the roaster oven base with a damp cloth. Do not immerse the base in water.
4. Place the removable pan inside the roaster oven base, then insert the roasting rack into the pan.

5. It is recommended to operate the empty roaster oven for 30 minutes at 350°F (175°C) before first use to burn off any manufacturing oils. Ensure adequate ventilation during this process.

OPERATING INSTRUCTIONS

Temperature Control and Functions

The HEYNEMO Electric Roaster Oven features a control knob for selecting various temperature settings and functions:

- **Temperature Range:** 150°F to 450°F (65°C to 232°C).
- **Functions:** Roast, Bake, Slow Cook, Defrost, and Keep Warm.

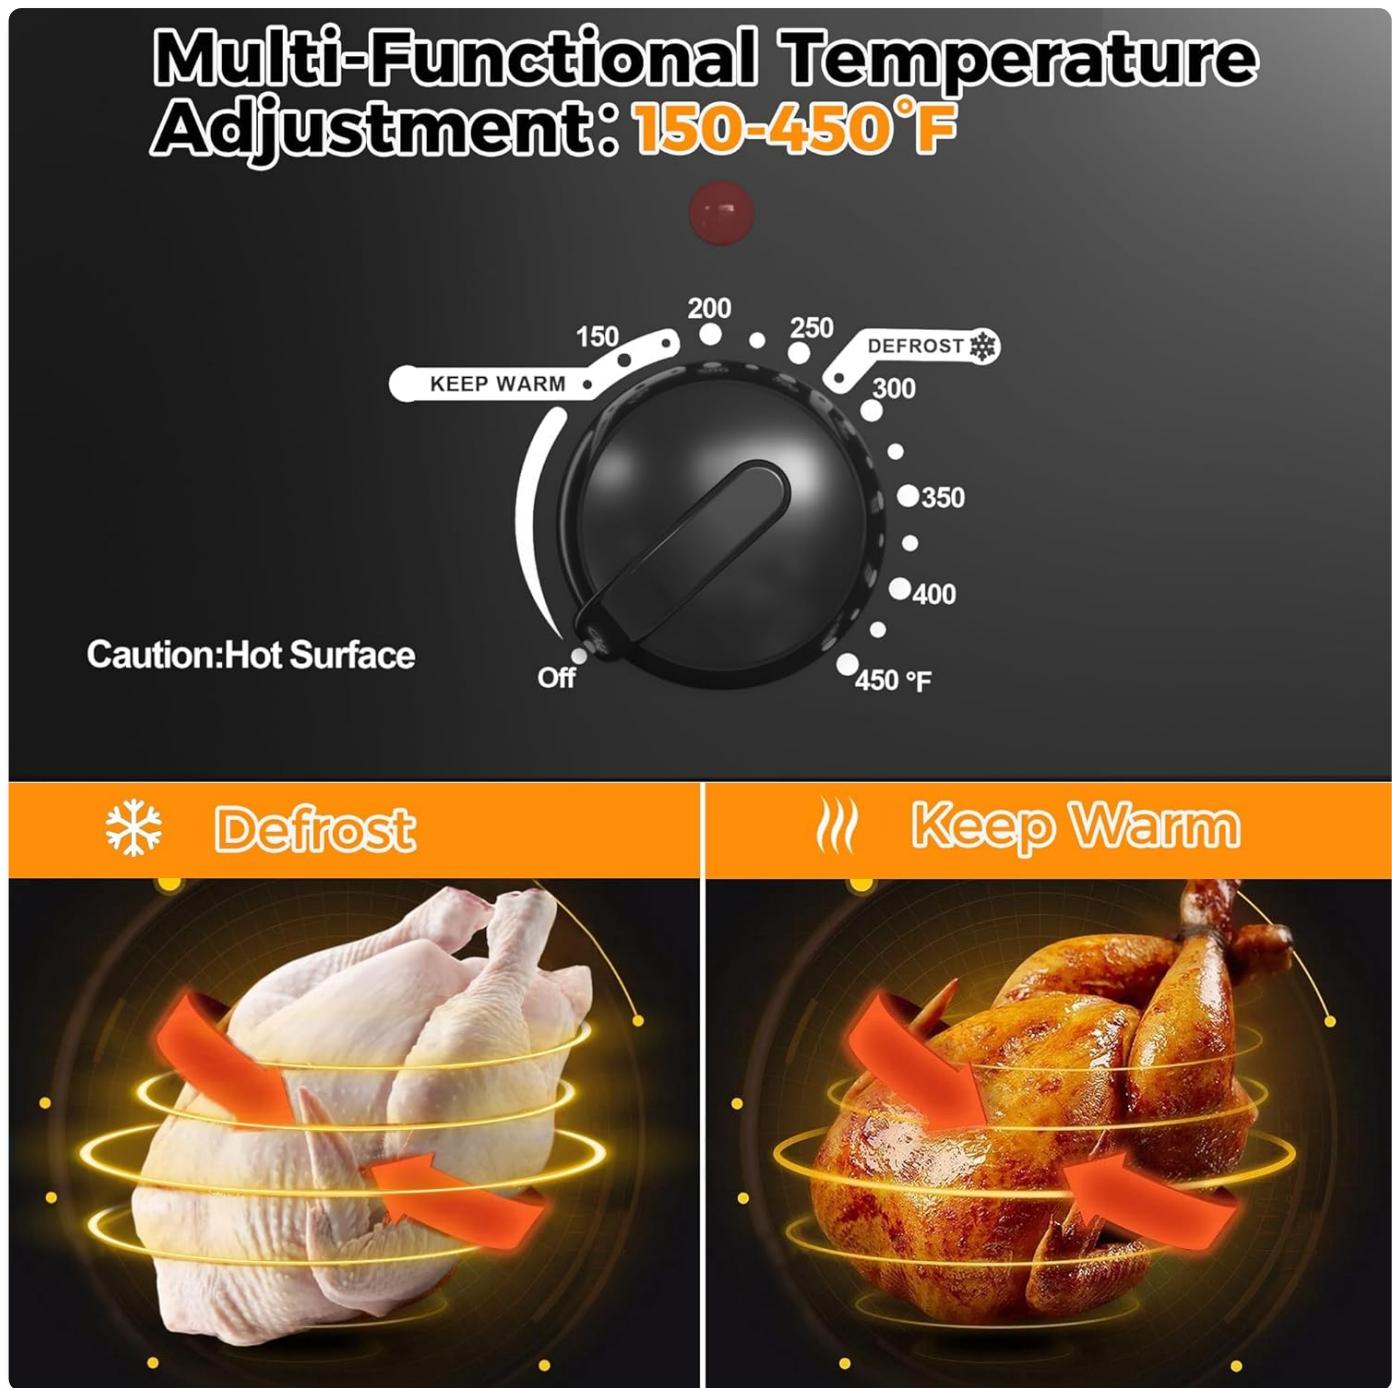


Figure 3: Temperature control dial with various settings.

Using the Defrost Setting

The defrost setting allows for quick thawing of frozen foods before cooking. Place frozen food on the roasting rack within the removable pan, set the dial to 'DEFROST', and allow the appliance to thaw the food.



Figure 4: Illustration of using the defrost function for a turkey.

Roasting and Cooking

1. Prepare your food (e.g., turkey, roast) and place it on the roasting rack inside the removable pan.
2. Cover the roaster oven with the self-basting lid.
3. Plug the appliance into a standard electrical outlet.
4. Turn the control knob to your desired cooking temperature (150°F to 450°F). The indicator light will illuminate, signaling that the oven is heating.
5. The self-basting lid will circulate moisture, keeping your food juicy and flavorful without frequent manual basting.
6. Once cooking is complete, turn the control knob to 'OFF' and unplug the appliance.

Say NO to Dry Turkey

Get a Crispy Skin and Juicy Meat



AIR CYCLE
HEATING



VISUALIZAT ION
TOP



150-450°F
ADJUSTABLE TEMP



Figure 5: The self-basting lid helps retain moisture during cooking.

Using the Keep Warm Function

After cooking, you can use the 'KEEP WARM' setting to maintain the food at a serving temperature without overcooking. This is ideal for preparing meals in advance.

Removable Pan & Liftable Rack



Figure 6: Overview of Defrost, Roast, and Keep Warm settings.

Video Demonstration: Roasting a Turkey

Your browser does not support the video tag.

Video 1: A demonstration of preparing and roasting a turkey using the HEYNEMO electric roaster oven, highlighting the ease of use and the final carved product.

Always use oven mitts when handling hot components of the roaster oven.



Easy & Safe to Take out

Better user experience with thoughtful details

Figure 7: Safely removing food using oven mitts and the roasting rack.

CARE AND CLEANING

Proper cleaning and maintenance will extend the life of your roaster oven.

1. Always unplug the roaster oven from the electrical outlet and allow it to cool completely before cleaning.
2. The lid, removable pan, and roasting rack are dishwasher safe. Alternatively, wash them in warm, soapy water, rinse, and dry thoroughly.
3. Wipe the exterior of the roaster oven base with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
4. Ensure all parts are completely dry before storing or reassembling the appliance.



Figure 8: Easy cleaning of the removable pan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Roaster does not heat	Not plugged in; Power outlet malfunction; Temperature knob set to 'OFF'.	Ensure the power cord is securely plugged into a working outlet. Turn the temperature knob to a desired setting.
Food is cooking too slowly/quickly	Incorrect temperature setting; Lid not properly sealed.	Adjust the temperature knob as needed. Ensure the lid is seated correctly to retain heat and moisture.
Food is dry	Lid frequently opened; Insufficient liquid.	Avoid lifting the lid unnecessarily. The self-basting lid is designed to keep food moist. Ensure sufficient cooking liquid is used if required by recipe.

SPECIFICATIONS

Brand: HEYNEMO

Model Name: Electric Roaster Oven

Size: 24QT

Power: 1450W

Product Dimensions: 23.5"D x 15.5"W x 14.7"H

Item Weight: 14 pounds

Control Type: Knob

Finish Type: Painted

Included Components: Roaster Oven Base, Removable Pan, Removable Roasting Rack, Self-basting lid

UPC: 789889883477

ASIN: B0D4CCVQVR



Figure 9: Product dimensions for the 24QT model.

WARRANTY AND CUSTOMER SUPPORT

Your HEYNEMO Electric Roaster Oven comes with a ONE YEAR WARRANTY. For warranty claims, technical assistance, or any product-related inquiries, please contact our customer support.

Please refer to your purchase documentation or the HEYNEMO official website for the most current contact information and detailed warranty terms.

© 2024 HEYNEMO. All rights reserved.

Related Documents - 24QT

	<p><u>HEYNEMO ZIM005 Slush Machine User Manual</u></p> <p>User manual for the HEYNEMO ZIM005 dual-tank slush machine (Model HJ-7802). This guide provides detailed instructions on operation, safety precautions, ingredient guidelines, cleaning, and troubleshooting for optimal performance.</p>
---	---