

[Manuals.plus](#) /

› [TRIUMPHKEY](#) /

› TRIUMPHKEY 140 x 60 cm Glass Standing Desk User Manual

TRIUMPHKEY 140 x 60 cm Glass Standing Desk

TRIUMPHKEY 140 x 60 cm Glass Standing Desk User Manual

Model: 140 x 60 cm Glass Standing Desk

1. INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your TRIUMPHKEY 140 x 60 cm Electric Height-Adjustable Glass Standing Desk. Please read this manual carefully before use to ensure proper function and safety.

The TRIUMPHKEY standing desk features a durable tempered glass tabletop, electric height adjustment with memory presets, an integrated storage drawer, and convenient USB-A and Type-C charging ports.



Image 1.1: The TRIUMPHKEY 140 x 60 cm Glass Standing Desk in a modern office setup, showcasing its sleek design, dual monitor compatibility, and integrated drawer.

2. SETUP AND ASSEMBLY

The TRIUMPHKEY standing desk is designed for straightforward assembly. The tabletop comes as a single piece, simplifying the process. Follow these general steps for assembly:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the included parts list (not provided in this manual).
2. **Assemble Desk Frame:** Attach the lifting columns to the foot supports. Ensure all screws are securely tightened.
3. **Mount Tabletop:** Place the glass tabletop onto the assembled desk frame. Secure the tabletop to the frame using the provided fasteners.
4. **Connect Power:** Plug the power cable into the desk's control box and then into a standard electrical outlet.

For detailed, step-by-step instructions, refer to the assembly guide included in your product packaging.

Convenient Operation and Various Functions

Bring you more comfortable working condition

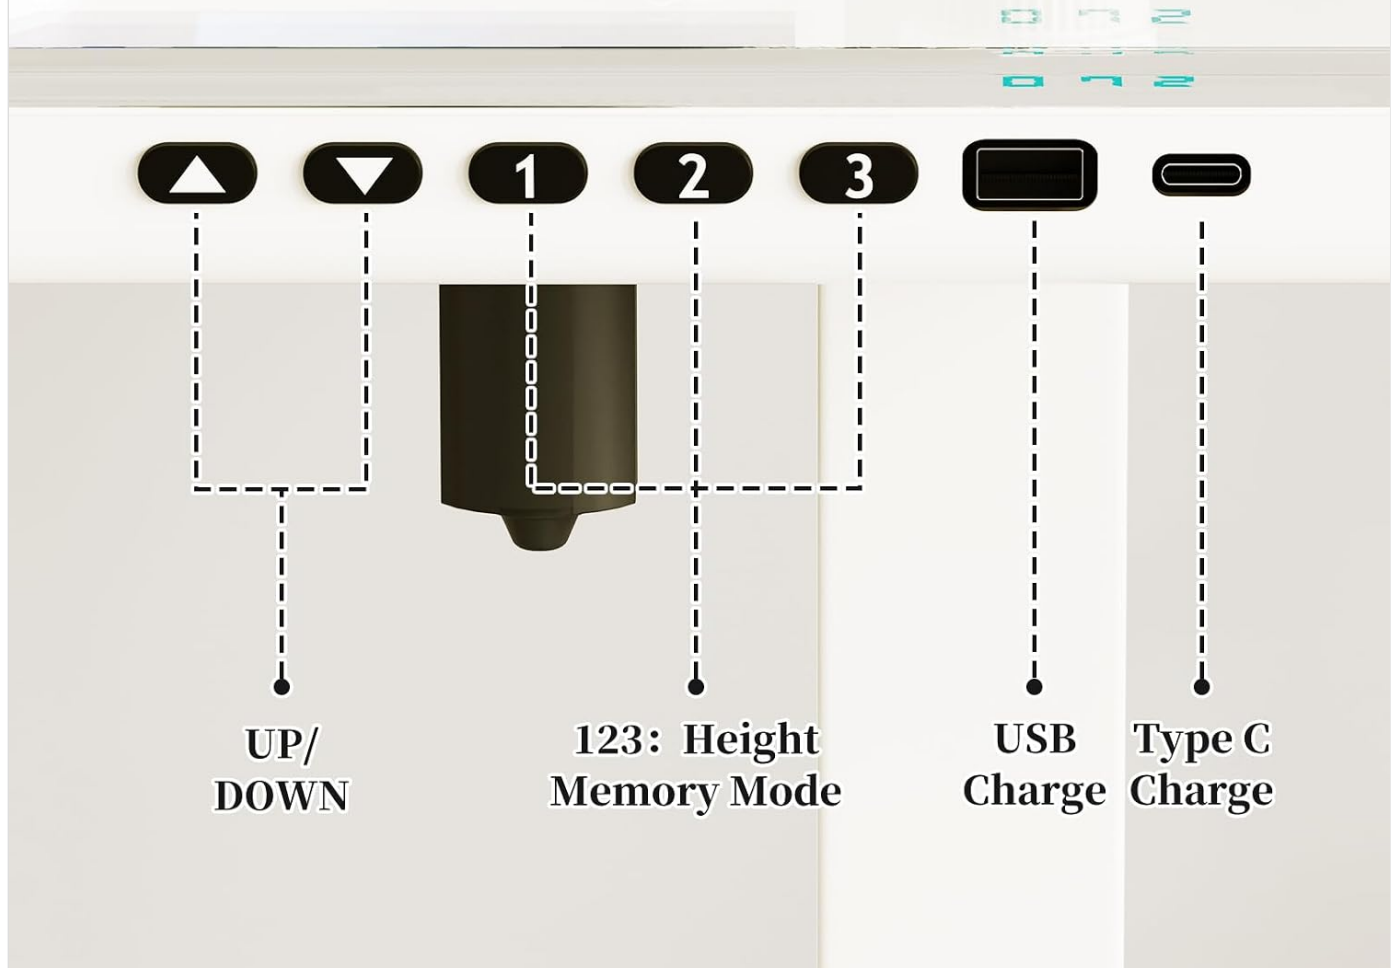


Image 2.1: Illustration of the desk assembly process, showing the tabletop being positioned onto the pre-assembled frame.

3. OPERATING INSTRUCTIONS

3.1 Height Adjustment

The desk's height can be adjusted electrically between 72 cm (minimum) and 118 cm (maximum).

- Press the **UP** (▲) button to raise the desk.
- Press the **DOWN** (▼) button to lower the desk.

3.2 Memory Presets

The desk features three programmable memory presets to store your preferred heights.

1. Adjust the desk to your desired height using the UP/DOWN buttons.
2. Press and hold one of the memory buttons (**1**, **2**, or **3**) until you hear a beep or see the display flash, indicating the height has been saved.
3. To recall a saved height, simply press the corresponding memory button (**1**, **2**, or **3**). The desk will automatically move

to the stored position.

3.3 Integrated Charging Ports

The desk is equipped with USB-A and Type-C charging ports for convenient device charging.

- Connect your electronic devices (e.g., smartphones, tablets) directly to the USB-A or Type-C ports located on the control panel.
- Ensure the desk is powered on for the charging ports to function.

3.4 Storage Drawer

The integrated drawer provides organized storage for office supplies.

- Gently pull the drawer handle to open.
- Push the drawer firmly to close.

Image 3.1: Detailed view of the control panel, illustrating the functions of the UP/DOWN buttons, three height memory presets, and the USB-A and Type-C charging ports.



Image 3.2: A tablet and smartphone are shown connected to the desk's integrated USB-A and Type-C charging ports, demonstrating their functionality.



Image 3.3: The integrated drawer is shown open and organized with various office items, contrasting with a cluttered desk surface to highlight its organizational benefits.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your TRIUMPHKEY standing desk.

- **Glass Tabletop Cleaning:** The tempered glass surface is resistant to wear and easy to clean. Use a soft, damp cloth with a mild glass cleaner to wipe away dust, fingerprints, and spills. Avoid abrasive cleaners or harsh chemicals that could damage the glass or finish.
- **Frame Cleaning:** Wipe the metal frame with a soft, dry or slightly damp cloth.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Cable Management:** Ensure power cables and device charging cables are neatly managed to prevent entanglement or damage.

Partitcal Doul-Zone Drawer

More space less clutter



Image 4.1: The glass tabletop is shown with temporary notes written on its surface, highlighting its dual function as a workspace and a writable board, which is easy to clean.

5. TROUBLESHOOTING

If you encounter issues with your TRIUMPHKEY standing desk, refer to the following common troubleshooting steps:

- **Desk Not Moving:**
 - Check if the power cable is securely plugged into both the desk and the wall outlet.
 - Ensure the wall outlet is functional by testing it with another device.
 - If an error code is displayed, consult the full product manual for specific code meanings and solutions.
- **Uneven Movement:**
 - Ensure the desk is placed on a flat, level surface.
 - Check that no objects are obstructing the lifting columns.
- **Charging Ports Not Working:**
 - Verify the desk is powered on.
 - Try a different charging cable or device to rule out cable/device issues.

If these steps do not resolve the issue, please contact TRIUMPHKEY customer support for further assistance.

6. SPECIFICATIONS

Feature	Specification
---------	---------------

Brand	TRIUMPHKEY
Model	140 x 60 cm Glass Standing Desk
Dimensions (L x W x H)	140 x 60 x 72-118 cm
Height Adjustment Range	72 cm to 118 cm
Weight	26.7 Kilograms
Material	Metal frame, Tempered Glass tabletop
Number of Drawers	2
Charging Ports	1x USB-A, 1x Type-C
Assembly Required	Yes



Image 6.1: A detailed diagram illustrating the key dimensions of the desk, including its length (140cm), width (60cm), and adjustable height range (72cm to 118cm).

7. WARRANTY AND SUPPORT

Warranty Information: Specific warranty details for your TRIUMPHKEY 140 x 60 cm Glass Standing Desk are typically provided with the product packaging or can be found on the official TRIUMPHKEY website. Please retain your proof of purchase for warranty claims.

Customer Support: For any questions, technical assistance, or warranty inquiries, please contact TRIUMPHKEY customer support. Contact information can usually be found on the product packaging, the official brand website, or through your retailer.

When contacting support, please have your product model and purchase date available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D4CXT3S9>

More documents and user manuals: <https://manuals.plus/>