

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AMZBABYCHEF](#) /

› [AMZBABYCHEF 10-in-1 Fast Baby Bottle Warmer Instruction Manual \(Model B0D4D2KTNW\)](#)

AMZBABYCHEF B0D4D2KTNW

AMZBABYCHEF 10-in-1 Fast Baby Bottle Warmer Instruction Manual

Model: B0D4D2KTNW

Brand: AMZBABYCHEF

1. INTRODUCTION

Thank you for choosing the AMZBABYCHEF 10-in-1 Fast Baby Bottle Warmer. This versatile appliance is designed to simplify feeding routines by offering multiple functions including fast warming, thawing, steaming, and food heating. Please read this manual thoroughly before use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

3. PACKAGE CONTENTS

Upon opening your package, please ensure all the following items are present and in good condition:

- AMZBABYCHEF 10-in-1 Baby Bottle Warmer Unit
- Protective Lid
- Bottle Lifting Basket/Tray
- Instruction Manual

4. PRODUCT OVERVIEW

The AMZBABYCHEF 10-in-1 Baby Bottle Warmer features a user-friendly control panel and a spacious design to accommodate various bottle types and baby food containers.



Image 4.1: Front view of the AMZBABYCHEF 10-in-1 Baby Bottle Warmer, showing its control panel and capacity for two bottles.

Control Panel Functions:

- **Power Button:** Turns the unit on/off.
- **Mode Selection:** Cycles through various functions (Milk, Fast, Food, Sterilize).
- **Temperature Adjustment (+/-):** Increases or decreases the target temperature.
- **Timer Adjustment (+/-):** Adjusts the warming/steaming duration.
- **Bottle Size/Volume:** Selects the volume of milk for optimized warming.
- **Night Light Button:** Activates/deactivates the gentle night light.

5. INITIAL SETUP

1. **Unpack:** Carefully remove all components from the packaging.

2. **Clean:** Before first use, wash the lid and bottle lifting basket with warm soapy water. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the warmer on a stable, flat, heat-resistant surface away from direct sunlight or heat sources.
4. **Connect Power:** Plug the power cord into a suitable electrical outlet.

6. OPERATING INSTRUCTIONS (10-IN-1 FUNCTIONS)

This bottle warmer offers 10 distinct functions to cater to various needs. Below are detailed instructions for each primary mode.

10 IN 1 Multi-function



Fast Warming



Thawing



Food Heating



Steaming



24H Keep Warm



Timer



Adjustable Temp



Auto Shut-off



Night Light



Memory Function



Image 6.1: Visual representation of the 10-in-1 multi-functions available on the AMZBABYCHEF bottle warmer.

6.1. Fast Warming (Milk/Formula)

This mode uses steam to quickly warm milk or formula to the desired temperature, typically within 5-8 minutes.

1. Place the bottle(s) into the warming chamber.
2. Add water to the chamber, ensuring it does not exceed 600ml and is below the bottle rim.
3. Cover the unit with the protective lid.
4. Press the Power button, then select the "Fast" mode.

5. Adjust the desired temperature and time using the +/- buttons, or select the appropriate bottle volume.
6. The unit will beep when warming is complete. Carefully remove the bottle(s) using the lifting basket.



Image 6.2: The bottle warmer in action, illustrating its fast warming capability for two bottles.

6.2. Water Bath Warming (Gentle Milk Warming)

This mode gently warms breastmilk or formula using a water bath, preserving nutrients by avoiding overheating.

1. Place the bottle(s) into the warming chamber.
2. Add water to the chamber, ensuring it covers the milk level in the bottle but does not overflow.

3. Cover the unit with the protective lid.
4. Press the Power button, then select the "Milk" mode.
5. Adjust the desired temperature (e.g., body temperature) and time using the +/- buttons.
6. The unit will maintain the set temperature until manually turned off or the 24H Keep Warm function is activated.

6.3. 24H Keep Warm

After warming, the unit can automatically keep milk or water at a preset temperature for up to 24 hours, ideal for nighttime feedings.

- This function is typically activated automatically after a warming cycle or can be set directly.
- Ensure sufficient water is in the chamber for prolonged warming.

6.4. Thaw (Breastmilk)

Safely thaws frozen breastmilk using a gentle water bath, preserving its nutritional value.

1. Place frozen breastmilk bags or bottles into the warming chamber.
2. Add water to the chamber, ensuring it covers the frozen milk.
3. Cover the unit with the protective lid.
4. Press the Power button, then select the "Thaw" mode (often integrated with Milk or Fast modes, refer to specific button icons).
5. Adjust the time as needed for thawing.
6. Once thawed, milk can be gently warmed to feeding temperature using the Water Bath Warming mode.

Breast Milk Thawing

Use water bath heating, preserving its nutrients



Image 6.3: Illustration of breast milk bags being thawed in the warmer's water bath.

6.5. Steaming (Sterilization)

This function uses high-temperature steam to sterilize bottles, pacifiers, and other small baby items.

1. Place clean bottles (upside down) or other items onto the lifting basket within the chamber.
2. Add a small amount of water (e.g., 100-150ml) to the bottom of the chamber.
3. Cover the unit with the protective lid.
4. Press the Power button, then select the "Sterilize" mode.

5. The unit will generate steam to sterilize the items. The cycle duration is usually preset.
6. Allow items to cool before handling.



Image 6.4: Steam rising from the warmer, indicating the sterilization process for baby bottles.

6.6. Food Heating

Warm baby food jars or containers to a comfortable temperature.

1. Place the baby food jar/container into the warming chamber.
2. Add water to the chamber, ensuring it is below the rim of the food container.

3. Cover the unit with the protective lid.
4. Press the Power button, then select the "Food" mode.
5. Adjust the desired temperature and time using the +/- buttons.
6. Stir the food and test temperature before feeding.



Image 6.5: The warmer heating a jar of baby food, preserving its flavor and nutrition.

6.7. Adjustable Timer & Temperature Control

The unit allows for precise adjustment of both warming time (to 1 minute increments) and temperature (to 1°F

increments) for customized heating.

- Use the dedicated +/- buttons for time and temperature adjustments after selecting a mode.



Image 6.6: The digital interface highlighting the precise temperature control feature, adjustable by 1°F increments.

6.8. Memory Function

The memory function stores your last used settings, eliminating the need to reconfigure them for subsequent uses.

- The unit automatically saves the last temperature and time settings for convenience.

6.9. Night Light Function

A gentle built-in night light illuminates the control panel, making nighttime feedings easier without disturbing others.

- Press the dedicated light bulb icon button on the control panel to turn the night light on or off.



Image 6.7: The night light feature in use, providing soft illumination for convenient nighttime feeding.

6.10. Double Bottle Design

The spacious design allows for warming two bottles simultaneously, or accommodating various bottle sizes, breastmilk bags, and food jars.

- The oblong shape is designed for versatility, fitting wide, narrow, angled bottles, and breastmilk storage bags.



Image 6.8: The warmer's design accommodating two bottles, highlighting its compatibility with different bottle and food jar types.

6.11. Product Demonstration Video

Watch this video for a visual guide on how to use the AMZBABYCHEF 10-in-1 Fast Baby Bottle Warmer.

Your browser does not support the video tag.

Video 6.1: A demonstration of the AMZBABYCHEF 10-in-1 Fast Baby Bottle Warmer, showcasing its features and ease of use.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and hygiene for your bottle warmer.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Wipe Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

- 3. Wash Accessories:** The lid and bottle lifting basket can be washed with warm soapy water and rinsed thoroughly.
- 4. Descaling:** Over time, mineral deposits (limescale) may build up in the heating chamber. To descale, mix 50ml of white vinegar with 100ml of cold water and pour into the heating chamber. Let it stand for 30 minutes, then pour out the solution. Rinse the chamber thoroughly with clean water. Repeat if necessary.
- 5. Storage:** Store the clean and dry appliance in a cool, dry place.

8. TROUBLESHOOTING

If you encounter any issues with your bottle warmer, please refer to the following common problems and solutions:

- **Unit does not turn on:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the power button has been pressed.

- **Milk/Food not warming:**

- Verify that the correct mode and temperature settings have been selected.
- Ensure there is sufficient water in the heating chamber.
- Check if the lid is properly closed.

- **Warming takes too long:**

- Ensure the "Fast" mode is selected for quicker warming.
- Check the initial temperature of the milk/food (e.g., refrigerated items take longer).
- Ensure the water level is appropriate for the selected mode.

- **Excessive limescale buildup:**

- Perform the descaling procedure as described in the Maintenance section.

If the problem persists after trying these solutions, please contact customer support.

9. PRODUCT SPECIFICATIONS

Model Number	B0D4D2KTNW
Brand	AMZBABYCHEF
Package Dimensions	9.02 x 7.91 x 5.94 inches
Material Composition	Plastic
Item Weight	1.85 pounds
Batteries Required	No

10. WARRANTY AND CUSTOMER SUPPORT

For warranty information or if you require further assistance, please contact AMZBABYCHEF customer support through your purchase platform or the contact details provided with your product packaging.

© 2025 AMZBABYCHEF. All rights reserved.

Documents - AMZBABYCHEF – B0D4D2KTNW

no relevant documents