

[Manuals.plus](#) /

› [Starfavor](#) /

› Starfavor Marching Band Music Flip Folder Instruction Manual (Model ST0073)

## Starfavor ST0073

# Starfavor Marching Band Music Flip Folder Instruction Manual

Model: ST0073

## INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Starfavor Marching Band Music Flip Folder. Designed for musicians in marching bands, this flip folder offers a convenient and secure way to hold sheet music during performances, rehearsals, and lessons. Please read this manual thoroughly to ensure optimal performance and longevity of your product.

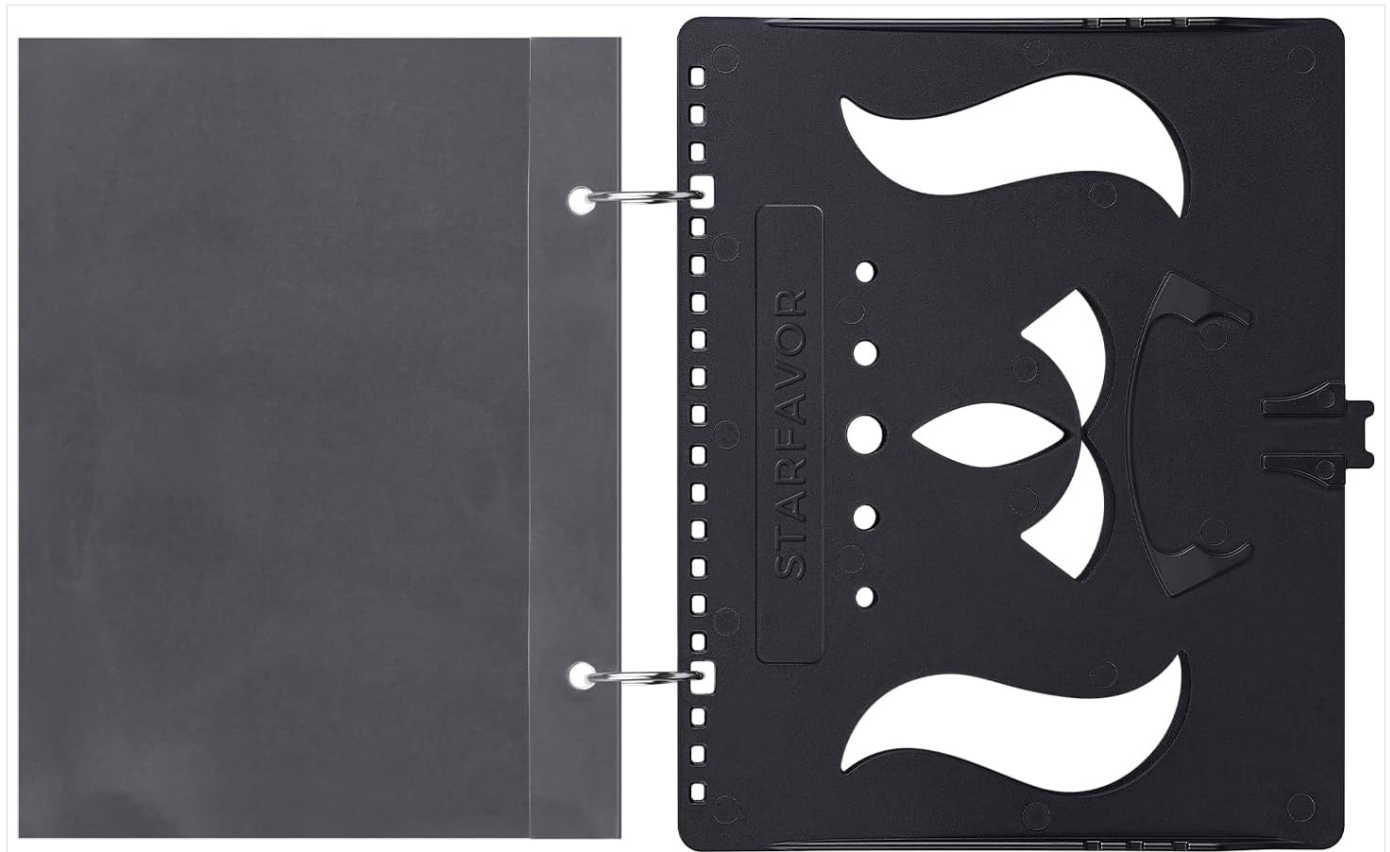 


Image: Front view of the Starfavor Marching Band Music Flip Folder, showing its black, compact design with two rings for pages.

## PRODUCT FEATURES

- **Compact and Lightweight Design:** Measuring 7.2 x 6.4 inches and weighing approximately 0.31 lbs, it is designed to hold most sheet music without adding significant burden.
- **Clear Display Pages:** Includes 10 PVC inner pages (5 double-sided) that are waterproof and oil-resistant, protecting your sheet music and ensuring clear visibility.
- **Secure Attachment:** Features a grooved bottom panel compatible with various instrument lyre stands for stable attachment.
- **Detachable Rings:** Two movable clasps allow for easy addition or removal of pages as needed.
- **Durable Construction:** Made from plastic with a sturdy backboard for reliable use.

## LET THE BAND'S MARCHING BURDEN BE JUST RIGHT!



Image: Visual representation of the flip folder's dimensions (7.2 x 6.4 inches) and weight (0.44 lbs), highlighting its compact and lightweight nature, along with the 5 included pages.

## SETUP

1. **Unpack the Folder:** Carefully remove the flip folder and its components from the packaging.

2. **Insert Sheet Music:**

- Open the two detachable rings by gently pulling them apart at the clasp points.
- Slide your sheet music into the clear PVC inner pages. Each page can hold one sheet of music.
- Once all desired music sheets are inserted, close the rings securely. Ensure the rings are fully closed to prevent pages from falling out.




Image: Close-up view demonstrating how to open and close the detachable rings to insert or remove music pages.

3. **Attach to Instrument Lyre (Optional):**

- Locate the grooved bottom panel on the flip folder.
- Align this groove with the clip or holder of your instrument's lyre stand.
- Securely attach the flip folder to the lyre stand. Ensure it is stable and will not detach during movement.

**Note: An instrument lyre is not included with this product.**
 
# SUITABLE FOR USE WITH MOST INSTRUMENT LYRE

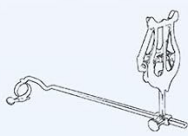

Trombone



Sax



Trumpet



Clarinet

Image: The flip folder shown attached to an instrument lyre, illustrating its compatibility with instruments like trombone, saxophone, trumpet, and clarinet.

## OPERATING INSTRUCTIONS

The Starfavor Flip Folder is designed for ease of use during performances and practice sessions.

- **Page Turning:** Gently flip the pages as needed during your performance. The smooth PVC pages and ring binding allow for quick and silent page turns.
- **Visibility:** The clear PVC pages ensure your sheet music remains visible and protected from environmental elements like moisture or smudges.
- **Stability:** When attached to a lyre, the folder provides a stable platform for your music, preventing it from flapping or falling, especially during marching or outdoor events.



Image: A musician playing a trumpet, with the Starfavor Flip Folder securely holding sheet music on an attached lyre, demonstrating in-use stability and readability.

## MAINTENANCE

---

- **Cleaning:**

- Wipe the plastic exterior and PVC pages with a soft, damp cloth.
- For stubborn marks, a mild soap solution can be used, followed by wiping with a clean, damp cloth and then drying thoroughly.
- Avoid abrasive cleaners or harsh chemicals, as these can damage the material.


- **Storage:** Store the flip folder in a cool, dry place away from direct sunlight to prevent material degradation over time.

- **Inspection:** Periodically check the rings and pages for any signs of wear or damage. Replace the folder if significant damage is observed to ensure continued protection of your music.

# SUPERIOR MATERIALS WITH CLEAR DISPLAY



PVC material

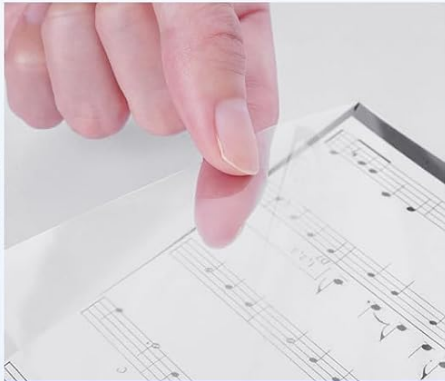

Thick & Clear



Waterproof & Oil-resistant

Image: Detailed view of the PVC material used for the inner pages, emphasizing its waterproof and oil-resistant qualities for protecting sheet music.

## TROUBLESHOOTING

| Problem                      | Possible Cause                                    | Solution                                                                                                                    |
|------------------------------|---------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| Music pages fall out.        | Rings are not securely closed or are damaged.     | Ensure the detachable rings are fully closed. If rings are damaged, the folder may need replacement.                        |
| Folder is unstable on lyre.  | Improper attachment to lyre or incompatible lyre. | Verify the folder's groove is correctly seated on the lyre clip. Ensure your lyre is compatible with standard flip folders. |
| Pages are difficult to turn. | Excessive number of pages or pages are stuck.     | Reduce the number of pages if overloaded. Ensure pages are not bent or creased, which can hinder smooth turning.            |

| Problem                                              | Possible Cause                | Solution                                                                                                                   |
|------------------------------------------------------|-------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| Sheet music appears blurry or unclear through pages. | Pages are dirty or scratched. | Clean the PVC pages as described in the Maintenance section. If heavily scratched, visibility may be permanently affected. |

## SPECIFICATIONS

- **Model:** ST0073
- **Brand:** Starfavor
- **Material:** Plastic, PVC
- **Color:** Black
- **Item Weight:** 4.9 ounces (approx. 0.31 lbs)
- **Product Dimensions:** 7.2 x 6.4 inches (approx. 18.3 x 16.3 cm)
- **Package Dimensions:** 7.68 x 6.26 x 0.31 inches
- **Number of Pages:** 10 (5 double-sided clear PVC sheets)
- **Fastener Capacity:** Up to 30 sheets (standard paper)
- **Compatibility:** Designed for use with most instrument lyre stands.

## WARRANTY AND SUPPORT

Specific warranty information for the Starfavor Marching Band Music Flip Folder (Model ST0073) is not provided in this manual. For warranty details, product support, or further assistance, please refer to the official Starfavor website or contact their customer service directly. Contact information can typically be found on the product packaging or the manufacturer's official website.

© 2024 Starfavor. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**